

PLEASE READ THE INSTRUCTIONS CAREFULLY BEFORE FITTING THE KIT.



Your car and the engine bay should look like the ones in these pictures, if not then talk to your kit supplier. Should you still have a problem, call K&N customer services. Tel: 01925-629609. Fax: 01925-629610.

Photo A

1. Unclip and remove the intake hose from the MAS (Mass Air Sensor).

2. Unscrew and remove the air box lid / intake hose from the air box base.

3. Remove the rubber intake hose from the plastic intake scoop.

4. Remove the screws securing the air box base and lift out the complete assembly.

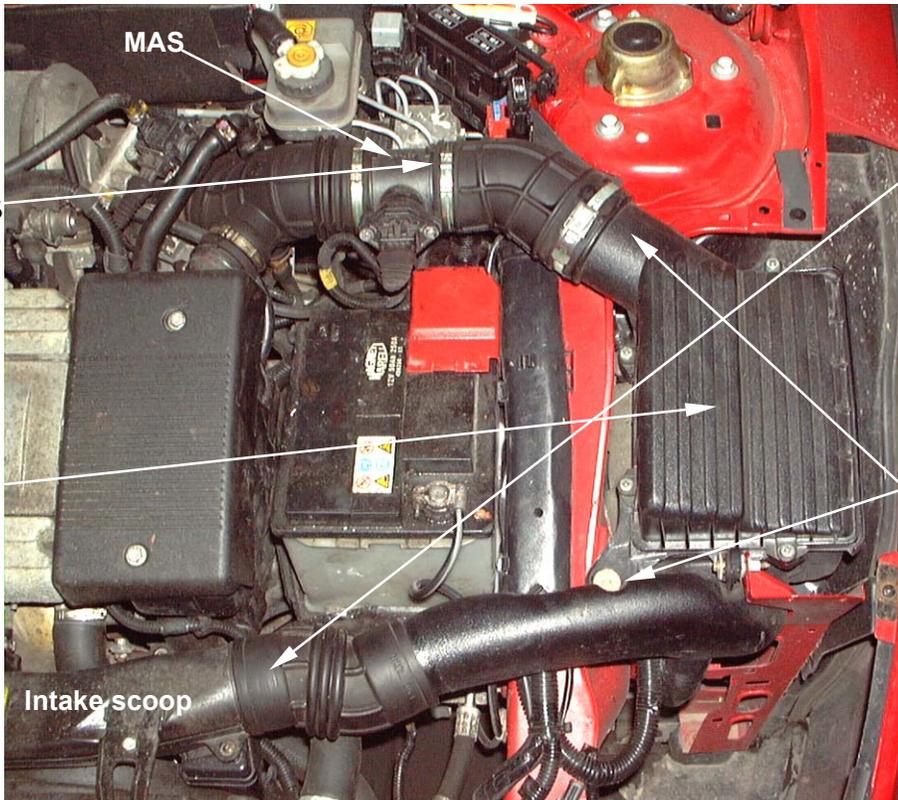


Photo B

1. Attach the new mounting bracket to the rear air box mounting point using an original screw.

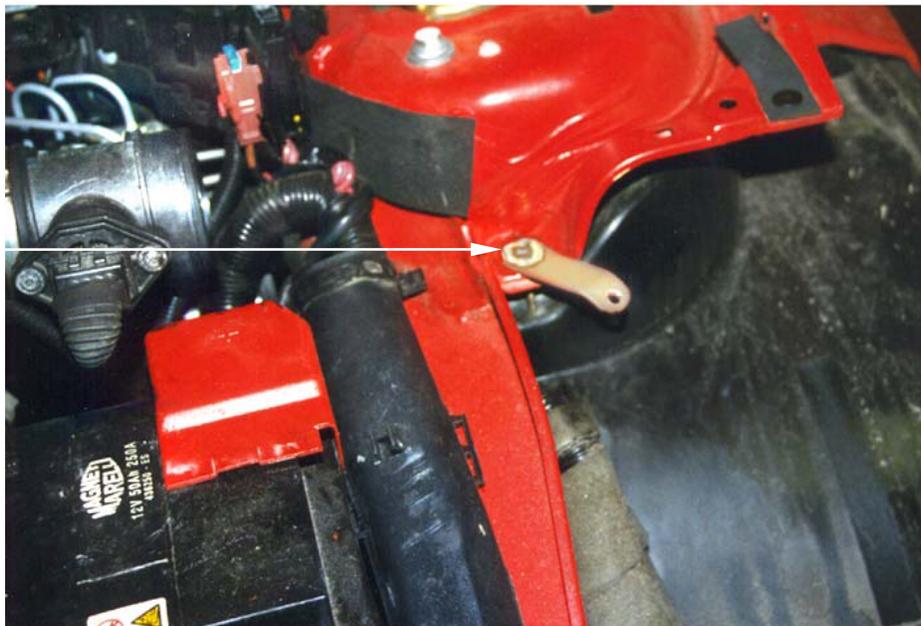


Photo C



1. Fit the new intake hose to the MAS and secure with a hose clip supplied. Do not fully tighten the clip yet.

2. Attach the intake hose to the mounting bracket using the studded clip, nut and washers supplied.



3. Fit the metal tube up to the step in the filter base. Do not push beyond the step as this will affect air flow. Tighten the clip until the filter just turns, then give the clip one full turn (360 degrees) **no more. Do not overtighten the clip.**

4. Fit the filter assembly in the intake hose, rotate the filter so the K&N logo is straight and firmly tighten the studded hose clip. Position the intake hose so that it is low as possible then fully tighten the hose clip on the MAS. (Ensure sufficient bonnet clearance.)

Tuning.

CAT. Cars. No adjustments are required.

An increase in fuel may be required if further engine modifications are to be carried out.

Filter maintenance.

Under normal conditions clean and reoil the filter at approx. 40,000 miles / 65,000 Km.

Use only K&N cleaner and oil and follow the instructions carefully.

K&N filters are pre-oiled ready to fit.

This Kit Should Contain:

- 1 x Clamp On Filter.
- 1 x Bracket.
- 1 x Metal Tube.
- 1 x Rubber Intake Hose.
- 1 x Instruction Sheet.
- 1 x Instruction Pack :-
 - 1 x Filter Maintenance Sheet.
 - 1 x Leaflet.
 - 1 x K&N Window Sticker.
 - 1 x Million Mile Warranty.
- 1 x Fixing Kit :-
 - 2 x #48 Hose Clips.
 - 1 x #48 Studded Hose Clip.
 - 1 x M6 Nut.
 - 1 x Spring Washer.
 - 1 x Flat Washer.

FITTING YOUR 57i KIT

If you are not fitting the kit **it is essential** that the person fitting the kit (eg. Mechanic) **carefully follows these particular instructions** even if they have fitted K&N kits before. This will save you both time and money. Kits fitted incorrectly may show a loss in performance

A final check under the bonnet, by yourself with the instructions, would seem sensible.

