



## Part Number 57-0404 INSTALLATION INSTRUCTIONS

### Citroen Saxo 1.1L 8v Mpi 60bhp L4 Oct 1999-2003

1. Remove the flexi intake pipe between the air box lid & intake scoop. (Fig. 1)
2. Remove the bolt securing the intake pipe to the support bracket. (Fig. 2)
3. Unclip & remove the air box pipe from the throttle housing. (Fig. 3)
4. Squeeze together the yellow tabs located on the end of the engine breather pipe, unclip & remove the breather pipe from the air box. (Fig. 4)
5. Remove the air box base out of its lower mounting & then carefully remove the air box assembly from the vehicle. (Fig. 5)
6. Remove the engine breather pipe from the breather 'T' piece, it may be necessary to cut the pipe away from the 'T' piece taking the necessary safety precautions. (Fig. 6)
7. Slide the new intake hose onto the throttle housing, secure the hose with a #40 hose clip supplied. (Fig. 7)
8. Fit the metal adapter tube up to the lip in the Air filter base & secure with the #44 hose clip supplied. Fit the Air filter assembly onto the new intake hose & secure with a #40 hose clip supplied. (Fig. 8)
9. Fit the large end of the plastic adaptor into the straight end of the new rubber breather hose & secure using a #12 hose clip supplied. (Fig. 9)
10. Attach the breather hose assembly to the breather 'T' piece & secure using a #12 hose clip supplied. Insert the breather hose / tube into the hole in the side of the new intake hose. (Fig.10)
11. Carefully lengthen the flexi cold air hose, feed the hose down to the side of the radiator. Secure the hose to the original intake pipe support bracket using a plastic tie supplied. Position the cold air hose to finish approx. 10cm / 4" from the Air filter. (Fig.11).
12. Feed the flexi cold air hose down to the lower grille, secure the hose to the grille using a plastic tie supplied (Ensure that the hose is secured away from the exhaust down pipe). (Fig.12)
13. Carry out a final check of the height / alignment of the K&N induction system before starting the engine. Installation is now complete.

#### Parts list:

- 1 x Air filter element.
- 1 x Rubber Intake Hose.
- 1 x Flexi Cold Air Hose Assembly.
- 1 x Literature Pack.
- 1 x Fixing Kit :-
  - 1 x Metal Tube.
  - 3 x Black Plastic Ties.
  - 2 x #12 Hose Clip.
  - 2 x #40 Hose clip.
  - 1 x #44 Hose Clip.
  - 1 x Breather Hose Adapter.
  - 1 x Rubber Breather.

**WARNING:** Before starting the engine carry out a final fitment check of the K&N performance kit. It will be necessary for all intake systems to be checked periodically for realignment, clearance and tightening of all connections. Failure to follow the above instructions or proper maintenance may void the warranty.

**FILTER MAINTENANCE:** K&N suggests checking the filter periodically for excessive dirt build-up. When the element becomes covered in dirt (or once a year), service it according to the instructions on the Recharger service kit available from your K&N dealer, part number 99-5003EU.

For cleaning instructions please visit our website: [www.knfilters.com/cleaning](http://www.knfilters.com/cleaning)



Fig. # 1



Fig. # 2

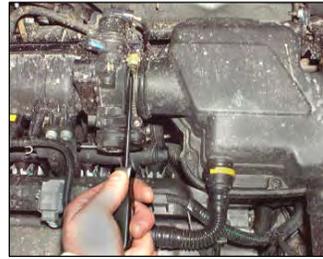


Fig. # 3



Fig. # 4



Fig. # 5



Fig. # 6



Fig. # 7



Fig. # 8



Fig. # 9



Fig. # 10



Fig. # 11



Fig. # 12

For technical support contact our European technical team: "eindhoven.tech@knfilters.com" We will try to answer your mail within 48 hours.

For UK technical enquiries contact R&D department at 01925-636950, Mon-Thu from 8:30 am to 5 pm.

For other K&N products and / or more information about the K&N products please visit our website: [www.knfilters.com](http://www.knfilters.com)