



This filter fits: SEE CATALOG FOR CURRENT APPLICATIONS

This adapter is designed to bolt onto one carburetor and allows the use of a K&N Flame Arrestor (sold separately) without requiring the removal of the oil injection system. Please read the following installation instructions thoroughly.

## **INSTALLATION**

- 1. Remove the cover from the stock flame arrestor.
- 2. Disconnect the oil injection hoses at the flame arrestor base.
- 3. Remove the flame arrestor base from the carburetor.
- 4. Install the K&N Adapter base plate onto the carburetor using the stock gasket if applicable.
- 5. Install the plastic hose fitting into the K&N Adapter base plate with a small amount of thread-locking compound. (Fig. 1)
- 6. Slide the hose onto the fitting and secure with the provided cable tie.
- 7. Trim the excess from the cable tie.
- 8. Install the K&N Adapter top onto the K&N Adapter base plate using the provided gasket and screws.
- 9. Install the appropriate K&N Flame Arrestor.

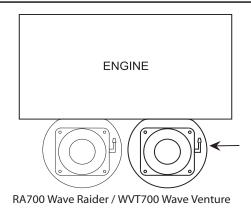

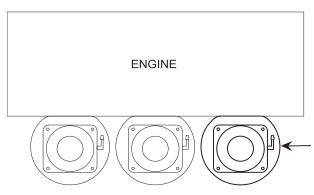

RA1100 Wave Raider / WVT1100 Wave Venture

Fig. 1