

INSTALLATION INSTRUCTIONS for

PART#4175
MOTOR MOUNT BRACKETS (NO Pads)

PART#4195
MOTOR MOUNT KIT (Mount Brackets & Pads)

1958-UP SB CHEVY V8 ENGINE INTO 1955-57 CHEVY PASSENGER VEHICLE


READ BEFORE BEGINNING INSTALLATION

These units are manufactured and offered as an aid in making this conversion. Since no two engine swaps are the same, other changes or modifications may be required. If in doubt, seek professional advice. Trans-Dapt Performance Products is not liable for the misuse and/or the improper use of these mounts. This product is designed to be used with stock engines only. Not for racing applications. It is the responsibility of the owner/ installer to install the engine using safe and proper installation procedures.

THIS KIT INCLUDES:

Qty.	Part No.	Description	Qty.	Part No.	Description
1	4175 / 4195	Pair of Engine Mount Brackets	2	9525	Mount Pads (4195 Only)

INSTALLATION INSTRUCTIONS

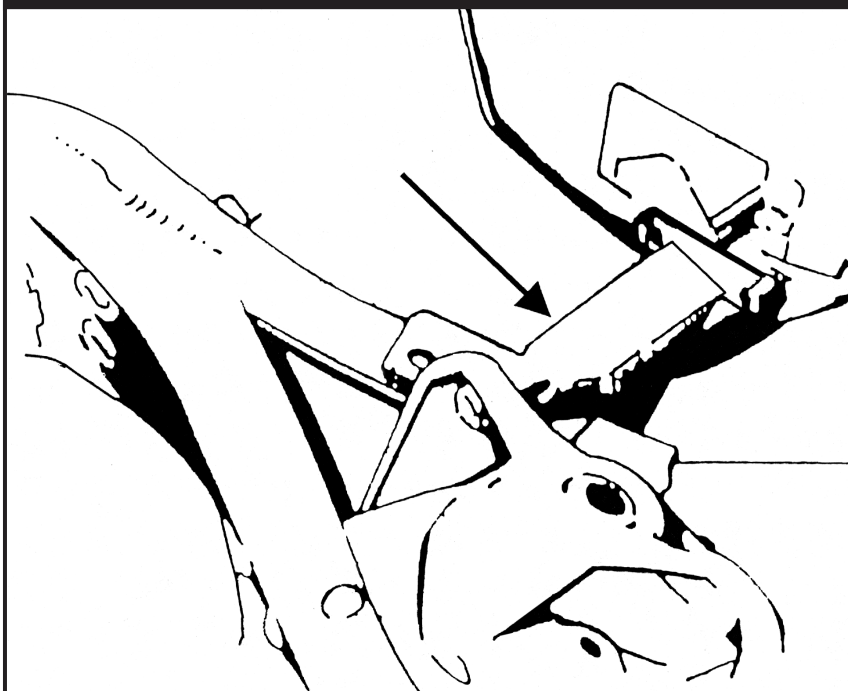

1. Before removing the stock engine, determine its centerline.
2. Position your engine so the crankshaft centerline is in approximately the same position as the stock engine was. Make sure the engine clears the firewall, steering box, master cylinder, radiator, etc. with a minimum of cutting for clearance.
3. Use the proper crossmember mounts for your frame. Crossmember #4539 is available through Trans-Dapt Performance, and will fit all 1955-57 Chevy passenger cars except convertibles.
4. These mounts are designed and manufactured to serve as an aid in your engine conversion. Other changes may be required. If in doubt, seek the advise of a qualified technician.



CHEVY V8 ENGINE ENGINE SWAP HEDDERS

Hedman Hedders, sister company of Trans-Dapt Performance Products, is the original Hedder manufacturer. Made in the USA since 1954, no other hedder brand offers better fitting hedders for this engine conversion project.

The chart to the right shows the most popular Hedman Hedder models for this project. Contact your local speed shop, or visit www.hedman.com for complete application details and options, before choosing the hedder for your vehicle. To contact the Hedman Hedders tech team, email techsupport@hedman.com , or call (562)921-0404 M-F 8-5pm P.S.T.

TUBE LENGTH & DIAMETER	STANDARD-DUTY UNCOATED	STANDARD-DUTY HTC COATED	ULTRA-DUTY ELITE MODEL
SB Chevy			
SHORTIES (1-5/8")	68260	68266	
FULL LENGTH (1-3/4")	65004	66004	
FULL LENGTH (1-5/8")	68120	68126	68128
TIGHT TUBES (1-5/8")	68500	68506	--
BB Chevy			
FULL LENGTH (1-3/4")	68250	68256	
FULL LENGTH (2")	65005	66005	
TIGHT TUBES (2")	68510	68516	--