





Kick Panel Louver Installation (Option 1)

1. Using template provided on Page 2, mark and cut kick panel as shown below.
2. Install louver assembly in kick panel and secure using (3) #8 x 1/2" pan head screws as shown below.

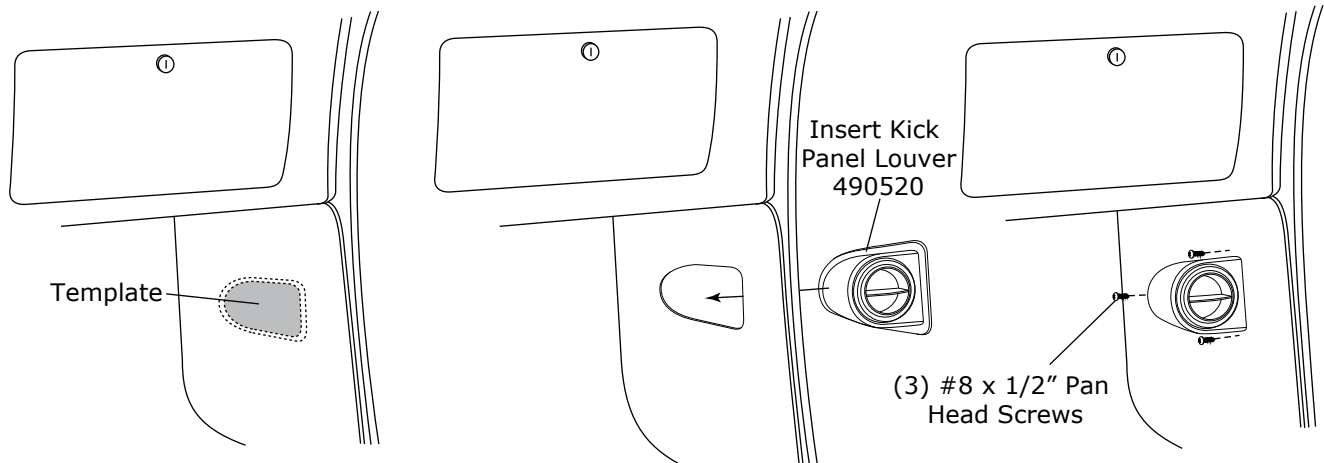



(Option 2)

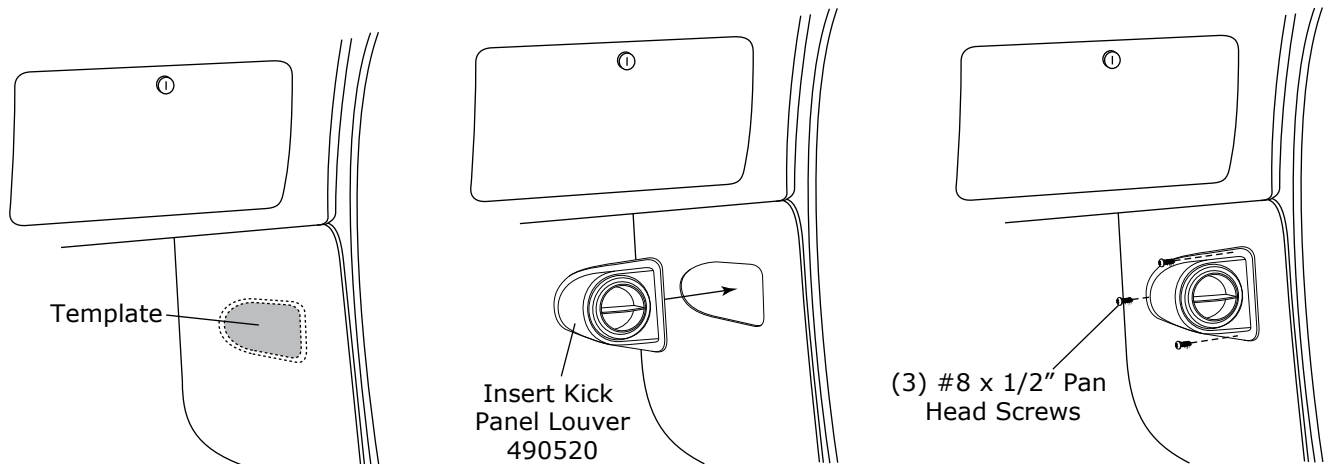

Packing List: Insert Kick Panel Louver (490500)


No.	Qty.	Part No.	Description
1.	1	490521	Insert Kick Panel Louver Housing
2.	1	49053-VUL	2.875 x 2.5 Chrome Dash Louver
3.	3	18235-VUB	#8 x 1/2" PH Pan Screw

Checked By: _____
Packed By: _____
Date: _____

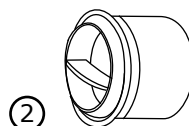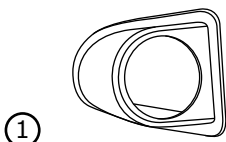



Insert Kick Panel Template

Cut Along
Dotted Line 

Cut Along
Dotted Line 

**Cut & Remove
This Area**