



an ISO 9001:2008 Registered Company

1981-87 CHEV PICK-UP

CONDENSER WITH DRIER

021581

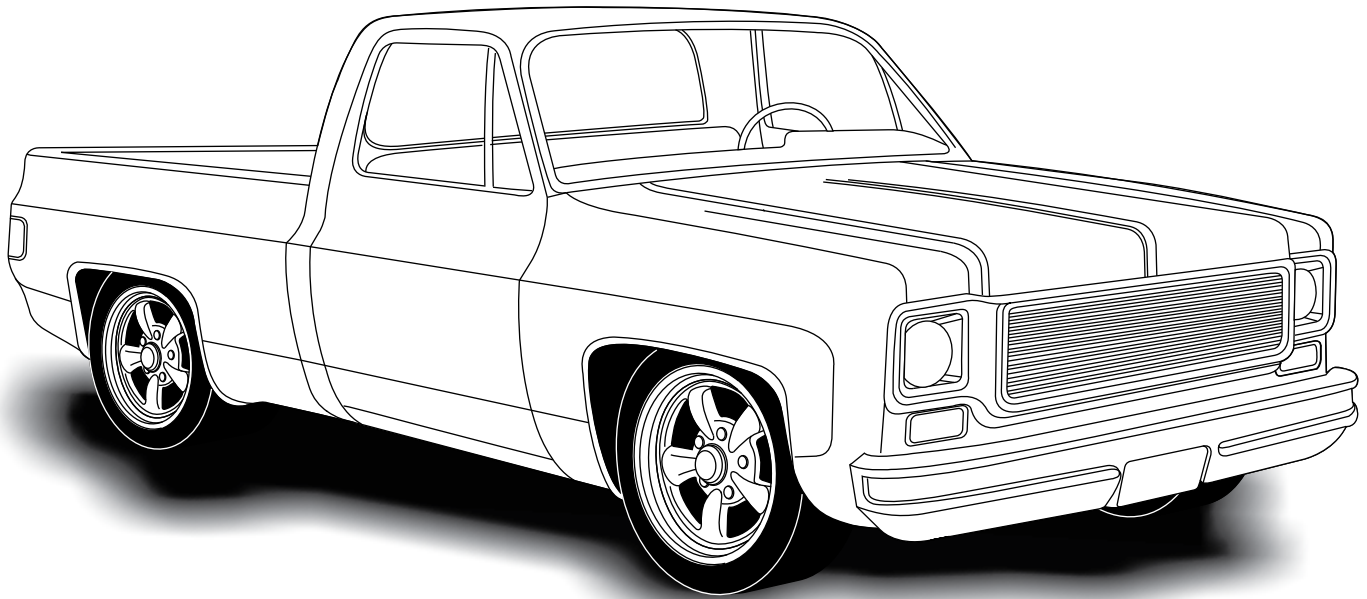




TABLE OF CONTENTS

PAGES

1. COVER
2. TABLE OF CONTENTS
3. PACKING LIST/PARTS DISCLAIMER
4. MOUNTING BRACKET INSTALLATION
5. DRIER BRACKET, DRIER & BINARY SWITCH INSTALLATION
6. HARDLINE AND CONDENSER INSTALLATION
7. HARDLINE INSTALLATION CONT.
8. PACKING LIST




1981-87 CHEV PICK-UP CONDENSER WITH DRIER

CONDENSER KIT 021581

No.	QTY.	PART No.	DESCRIPTION
1.	1	03767-VUC	14" X 24" PARALLEL FLOW COND.
2.	2	07113-VUB	DRIER CLAMP
3.	1	07321-VUC	DRIER
4.	1	65998-VUB	UNIVERSAL DRIER BRACKET
5.	1	644081	BRKT 81-87 CHEV P-UP COND TOP
6.	1	64313-LCB	81-87 CHEV P-UP COND BTM DRIVER
7.	1	64314-LCB	81-87 CHEV P-UP COND BTM PASS
8.	1	091154	HARDLINE 73-87 CHEV P-UP #6 COND/DR
9.	1	091155	HARDLINE 81-87 CHEV P-UP #6 DRIER/CORE SUPPORT
10.	1	091156	HARDLINE 81-87 CHEV P-UP #8 COND
11.	2	18247-VUB	#10 x 1/2" HEX SCREW
12.	10	18249-VUB	10-24 X 3/8" PAN HEAD SCREW
13.	10	18260-VUB	10-24 NUT W/STAR WASHER
14.	4	18250-VUB	10-32 X 1/2" PAN HEAD SCREW
15.	4	18251-VUB	10-32 NUT W/STAR WASHER
16.	2	18287-VUB	1/4-20 X 1/2" HEX BOLT
17.	2	18152-VUB	1/4-20 HEX NUT W/STAR WASHER
18.	3	33857-VUF	#6 O-RING
19.	1	33858-VUF	#8 O-RING
20.	1	11079-VUS	MALE BINARY SWITCH
21.	1	23135-VUW	COMPRESSOR LEAD


**BEFORE BEGINNING INSTALLATION OPEN ALL PACKAGES AND CHECK CONTENTS OF SHIPMENT
PLEASE REPORT ANY SHORTAGES DIRECTLY TO VINTAGE AIR WITHIN 15 DAYS. AFTER 15 DAYS,
VINTAGE AIR WILL NOT BE RESPONSIBLE FOR MISSING OR DAMAGED ITEMS.**

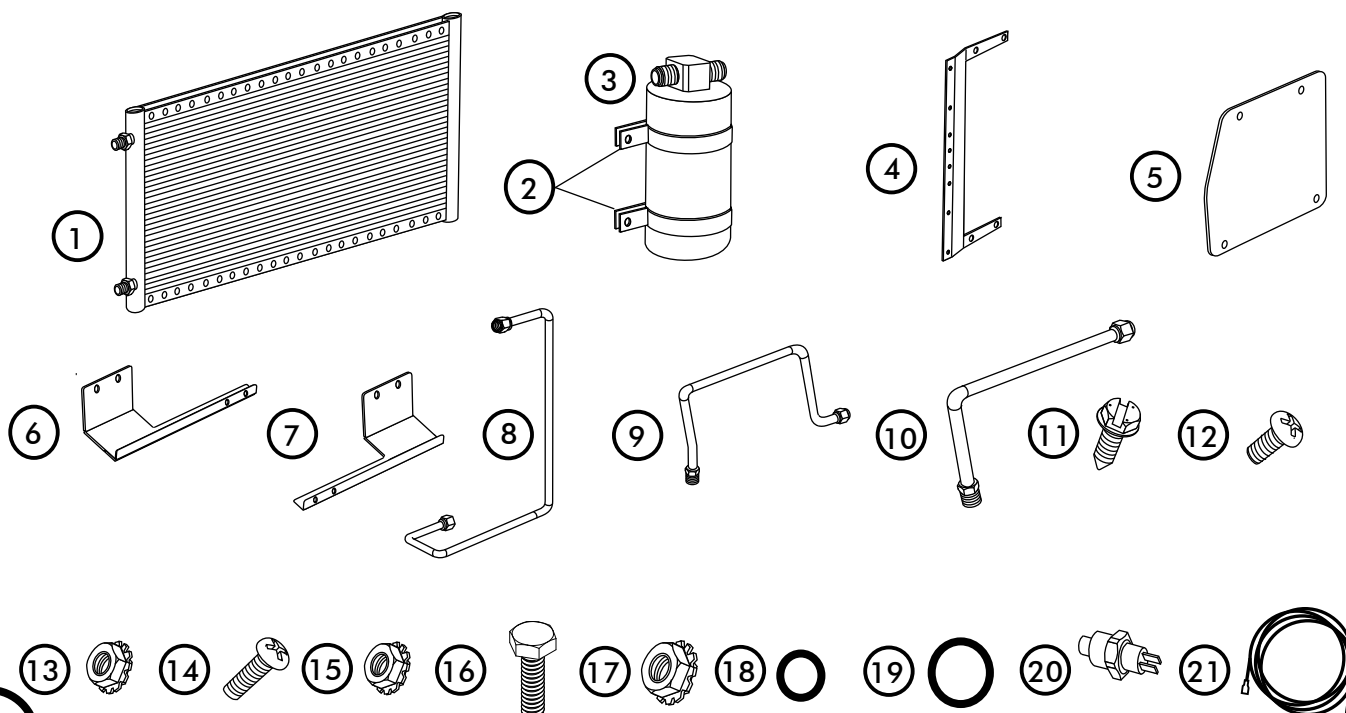



MOUNTING BRACKET INSTALLATION

- INSTALL MOUNTING BRACKETS ON TO CONDENSER USING 10-24 x 3/8" PAN HEAD SCREWS AND 10-24 NUTS w/STAR WASHERS AS SHOWN BELOW.

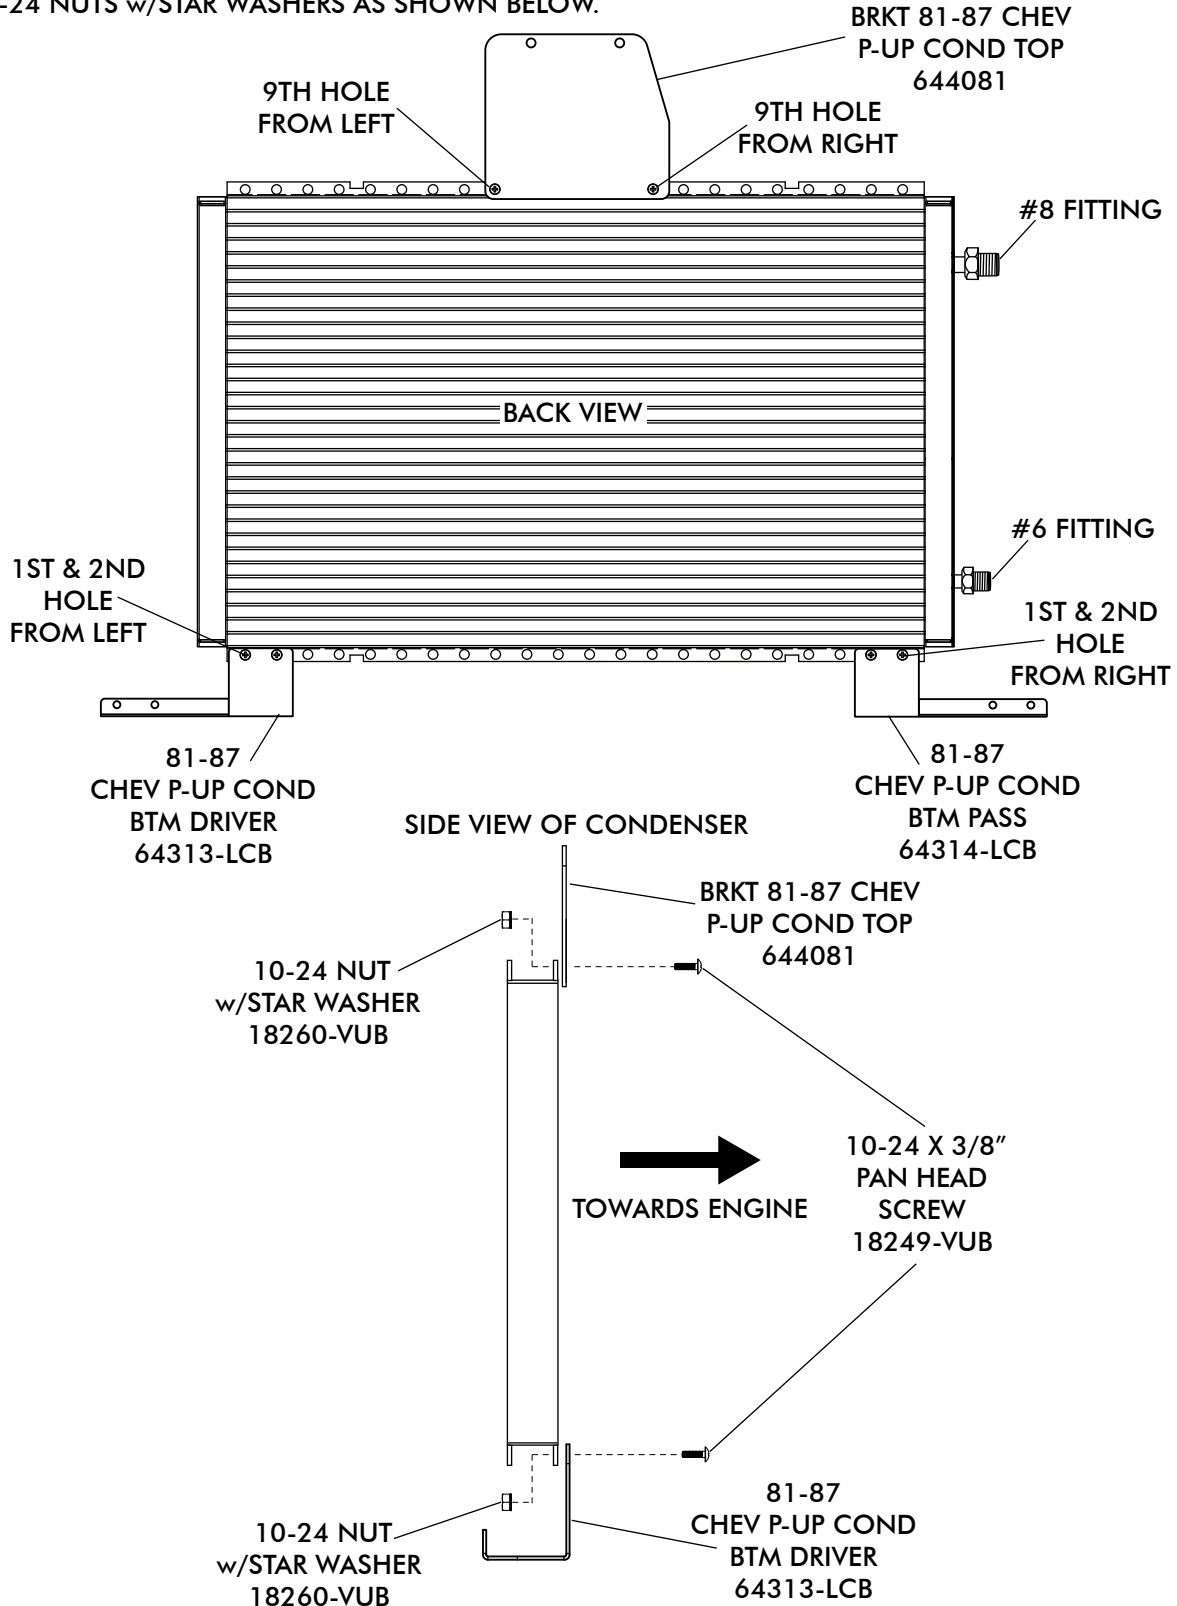



DRIER BRACKET INSTALLATION

- INSTALL UNIVERSAL DRIER BRACKET ON TO CONDENSER USING 10-24 X 3/8" PAN HEAD SCREWS AND 10-24 NUTS WITH STAR WASHERS. **NOTE: BRACKET MOUNTS THROUGH 1ST AND 3RD HOLES FROM BOTH SIDES OF THE CONDENSER.**

10-24 NUT
w/ STAR WASHER

10-24 NUT
w/ STAR WASHER

UNIVERSAL DRIER
BRACKET
65998-VUB

FRONT
VIEW

10-24 x 3/8"
PAN HEAD
SCREW

DRIER & BINARY SWITCH INSTALLATION

- INSTALL DRIER CLAMPS ON DRIER AS SHOWN.
- USING #10 x 1/2" SHEETMETAL SCREWS, INSTALL DRIER ON BRACKET IN THE 4TH AND 6TH HOLES FROM THE TOP AS SHOWN.
- INSTALL BINARY SWITCH.

INSTALL
SAFETY SWITCH
ON DRIER

DRIER CLAMPS
07113-VUB

4TH
HOLE

6TH
HOLE

SAFETY SWITCH
(BINARY TYPE)
11079-VUS

DRIER
07321-VUC

OUT

IN

(2) #10 x 1/2" SHEETMETAL
SCREW
18247-VUB



HARDLINE INSTALLATION

- LUBRICATE 2-#6 O-RINGS AND INSTALL THE #6 DRIER/CONDENSER HARDLINE AS SHOWN. TIGHTEN FITTINGS. SEE FIGURE 1.


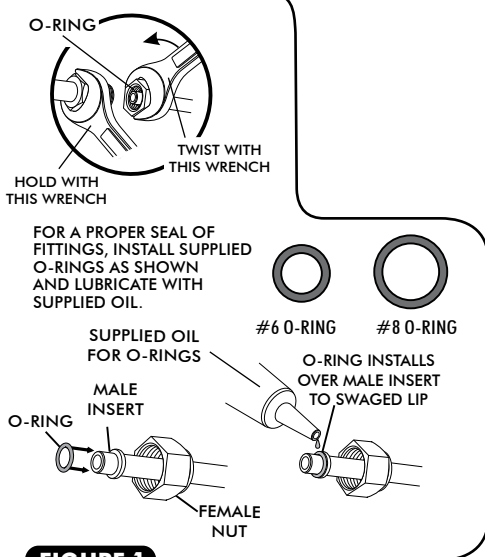




FIGURE 1

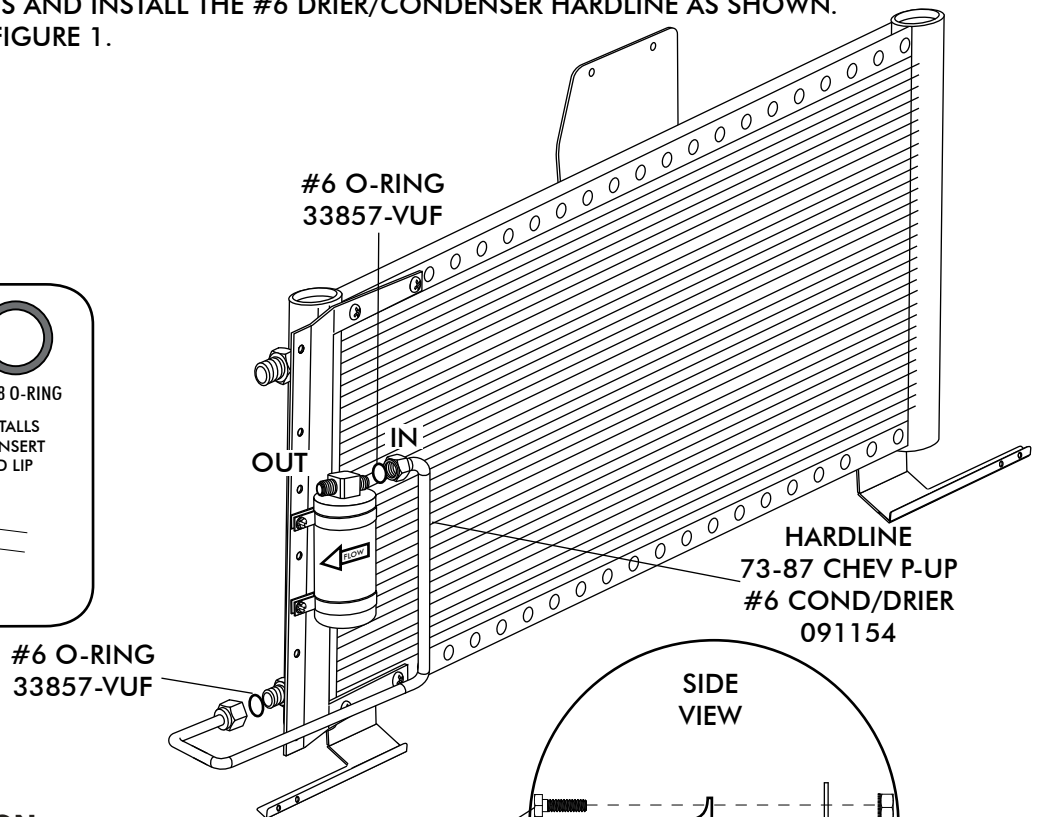


CONDENSER INSTALLATION

- INSTALL CONDENSER W/BRACKETS TO CORE SUPPORT AS SHOWN BELOW.

1/4-20 X 1/2"
HEX BOLT
18287-VUB
& NUT W/STAR
WASHER
18152-VUB

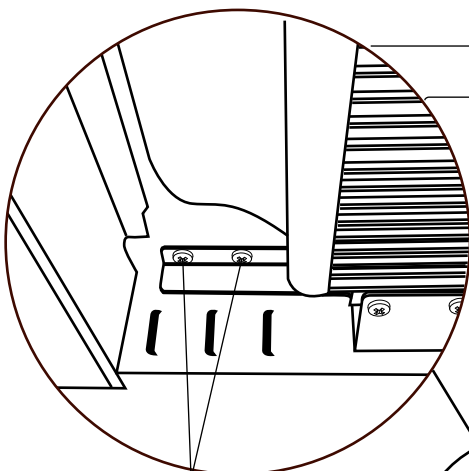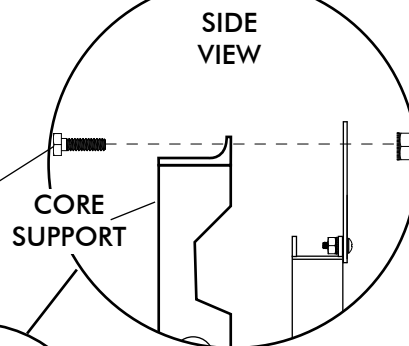

10-32 X 1/2"
PAN HEAD SCREW
18250-VUB
W/10-32 NUT
W/STAR WASHER
18251-VUB

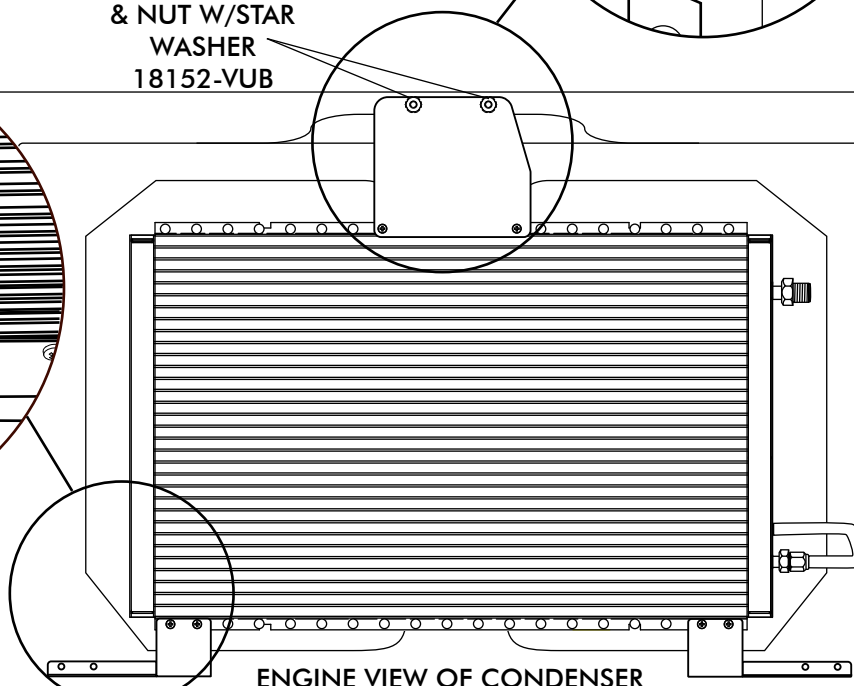


ENGINE VIEW OF CONDENSER



HARDLINE INSTALLATION CONT.

- ☐ LUBRICATE #6 AND #8 O-RINGS AND INSTALL HARDLINES AS SHOWN. TIGHTEN FITTINGS.
SEE FIGURE 1, PAGE 6.

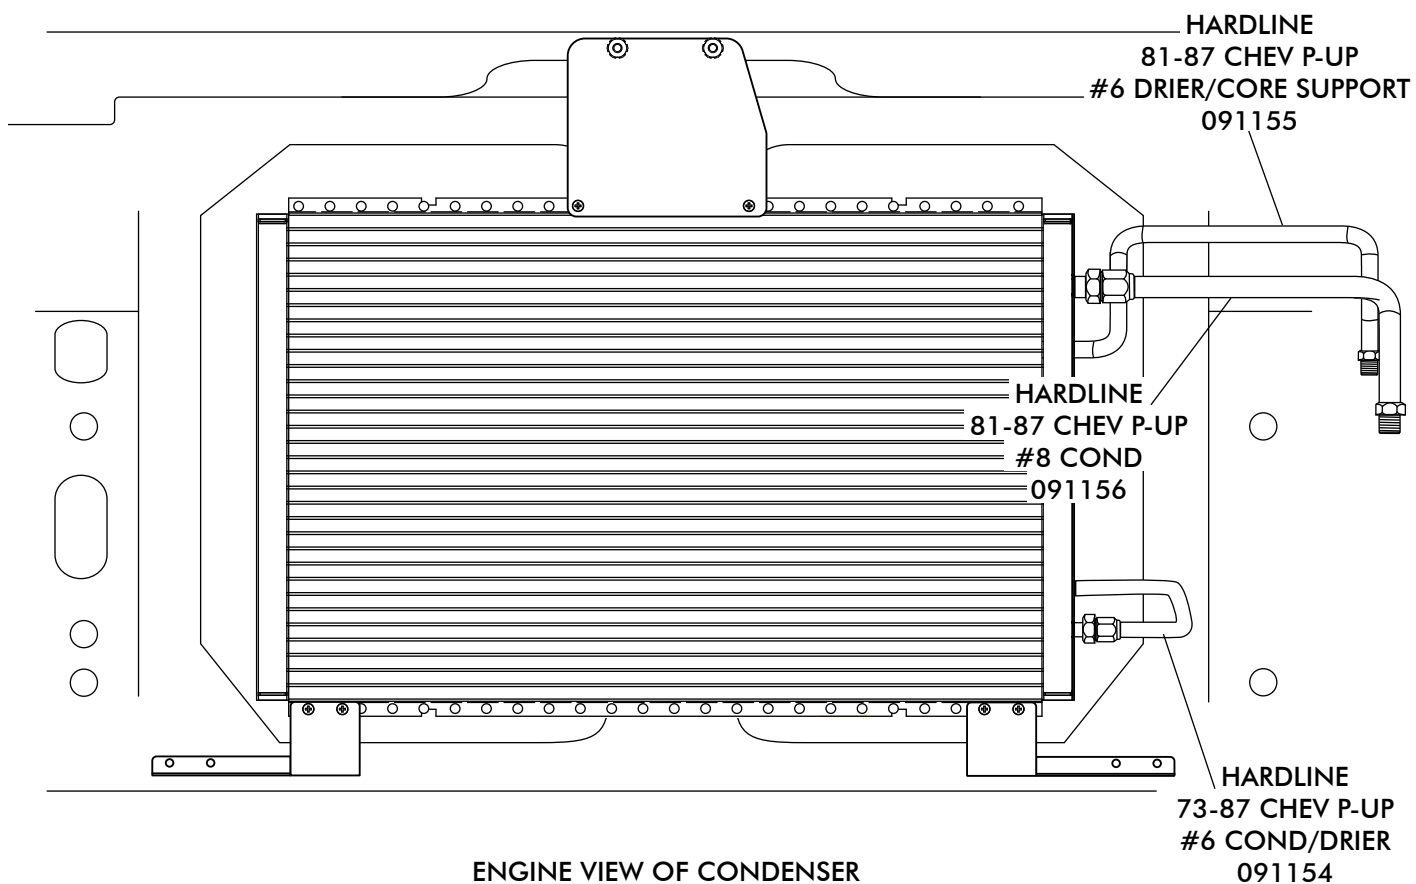



1981-87 CHEV PICK-UP CONDENSER WITH DRIER

CONDENSER KIT 021581

No.	QTY.	PART No.	DESCRIPTION
1.	1	03767-VUC	14" X 24" PARALLEL FLOW COND.
2.	2	07113-VUB	DRIER CLAMP
3.	1	07321-VUC	DRIER
4.	1	65998-VUB	UNIVERSAL DRIER BRACKET
5.	1	644081	BRKT 81-87 CHEV P-UP COND TOP
6.	1	64313-LCB	81-87 CHEV P-UP COND BTM DRIVER
7.	1	64314-LCB	81-87 CHEV P-UP COND BTM PASS
8.	1	091154	HARDLINE 73-87 CHEV P-UP #6 COND/DR
9.	1	091155	HARDLINE 81-87 CHEV P-UP #6 DRIER/CORE SUPPORT
10.	1	091156	HARDLINE 81-87 CHEV P-UP #8 COND
11.	2	18247-VUB	#10 x 1/2" HEX SCREW
12.	10	18249-VUB	10-24 X 3/8" PAN HEAD SCREW
13.	10	18260-VUB	10-24 NUT W/STAR WASHER
14.	4	18250-VUB	10-32 X 1/2" PAN HEAD SCREW
15.	4	18251-VUB	10-32 NUT W/STAR WASHER
16.	2	18287-VUB	1/4-20 X 1/2" HEX BOLT
17.	2	18152-VUB	1/4-20 HEX NUT W/STAR WASHER
18.	3	33857-VUF	#6 O-RING
19.	1	33858-VUF	#8 O-RING
20.	1	11079-VUS	MALE BINARY SWITCH
21.	1	23135-VUW	COMPRESSOR LEAD

CHECKED BY: _____
 PACKED BY: _____
 DATE: _____

