




an ISO 9001:2008 Registered Company

# **1964 ½ to 66 Mustang**

**16" x 18" Condenser Kit *without* Drier**  
**017064**

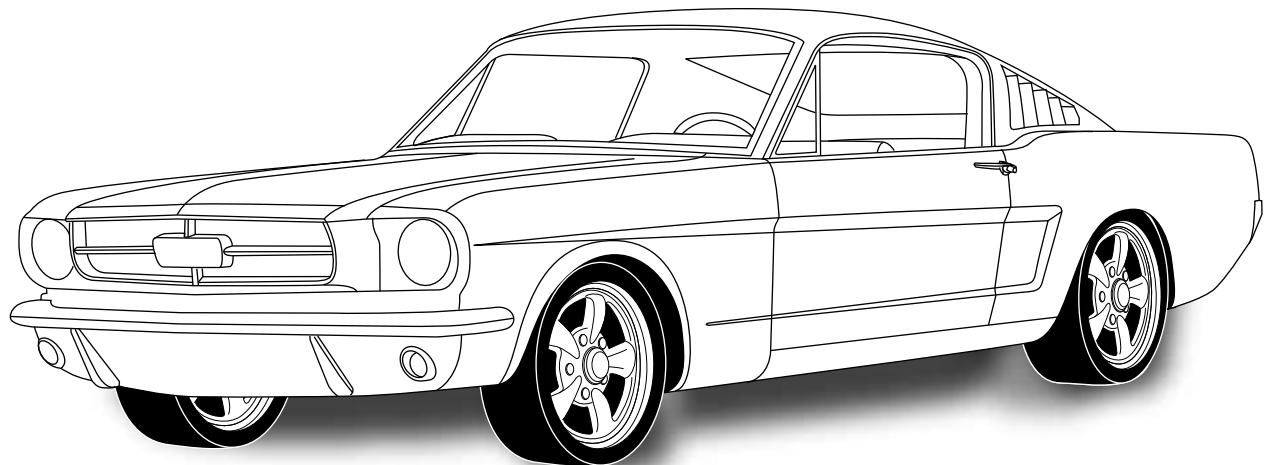

18865 Goll St. San Antonio, TX 78266 ph: 210-654-7171 fax: 210-654-3113



# Table of Contents


- 1. Cover**
- 2. Table of Contents**
- 3. Packing List/Parts Disclaimer**
- 4. Information Page**
- 5. Engine Compartment, Mounting Brackets Installation  
and Hood Latch Assembly**  
*Figure 1 & 2*
- 6. Condenser Installation**  
*Figures 3 & 4*
- 7. Packing List**



**Packing List:**  
**1964 1/2 to 66 Mustang**  
**16" x 18" Condenser Kit without Drier (017064)**

No.	Qty.	Part No.	Description
1.	1	037031	Parallel Flow Condenser 16" x 18"
2.	1	642092	Bracket 64 1/2-66 Mustang 16" x 18" Condenser Upper Condenser
3.	1	642091	Bracket 64 1/2-66 Mustang 16" x 18" Condenser Lower Condenser
4.	4	18260-VUB	10-24 Nut with Star Washer
5.	4	18249-VUB	10-24 x 3/8" Pan Head Screw

**\*\* Before beginning installation, open all packages and check contents of shipment.  
Please report any shortages directly to Vintage Air within 15 days. After 15 days,  
Vintage Air will not be responsible for missing or damaged items.**

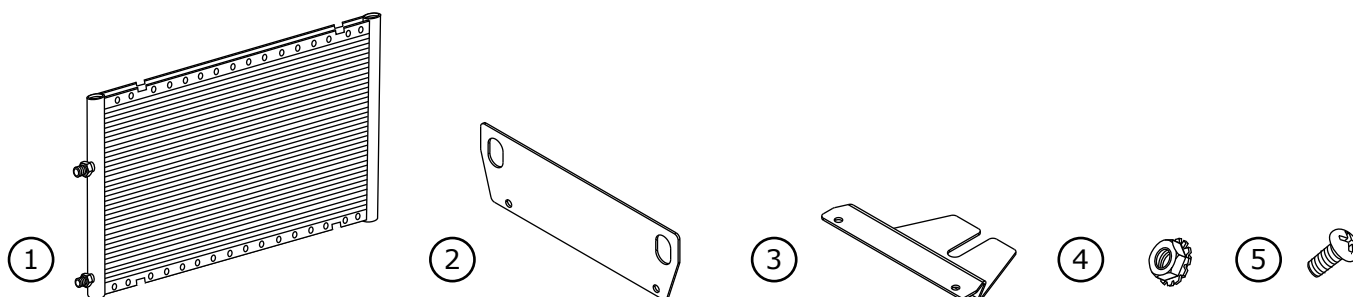




## 1964 ½ to 66 Mustang

### Important Notice—Please Read

*This kit was developed based on the measurements below, which were taken from a 1966 Mustang core support.*

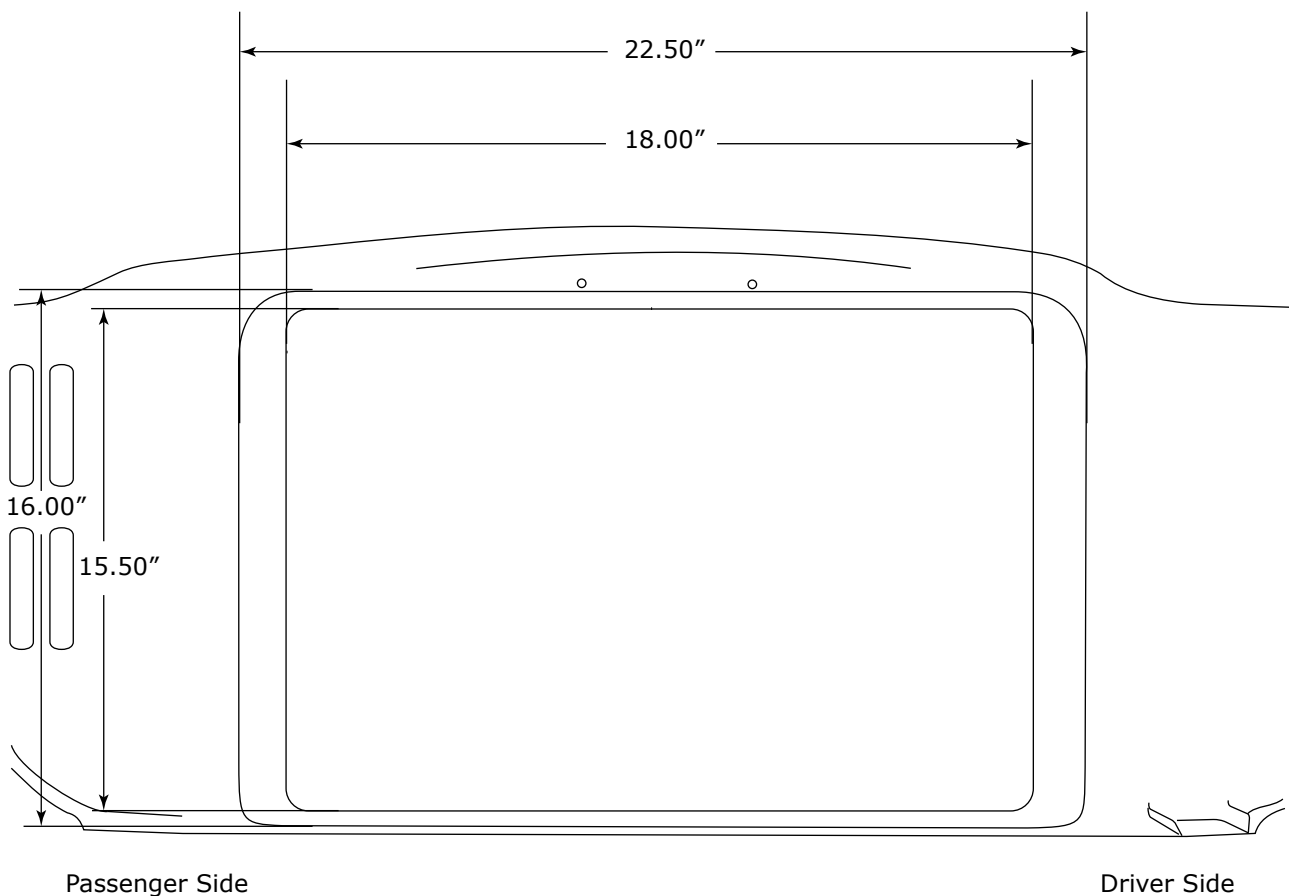



## Engine Compartment

### Remove the Following:

1. Battery and battery tray.
2. Horns.
3. Radiator.

## Mounting Bracket Installation

1. Install condenser mounting brackets onto condenser using (4) 10-24 x 3/8" pan head screws and (4) 10-24 nuts with star washers as shown in Figure 1, below. **NOTE: Upper bracket mounts on the 6th and 11th holes from the left side of condenser. Lower bracket mounts on the 9th and 13th holes from the left side of condenser.**

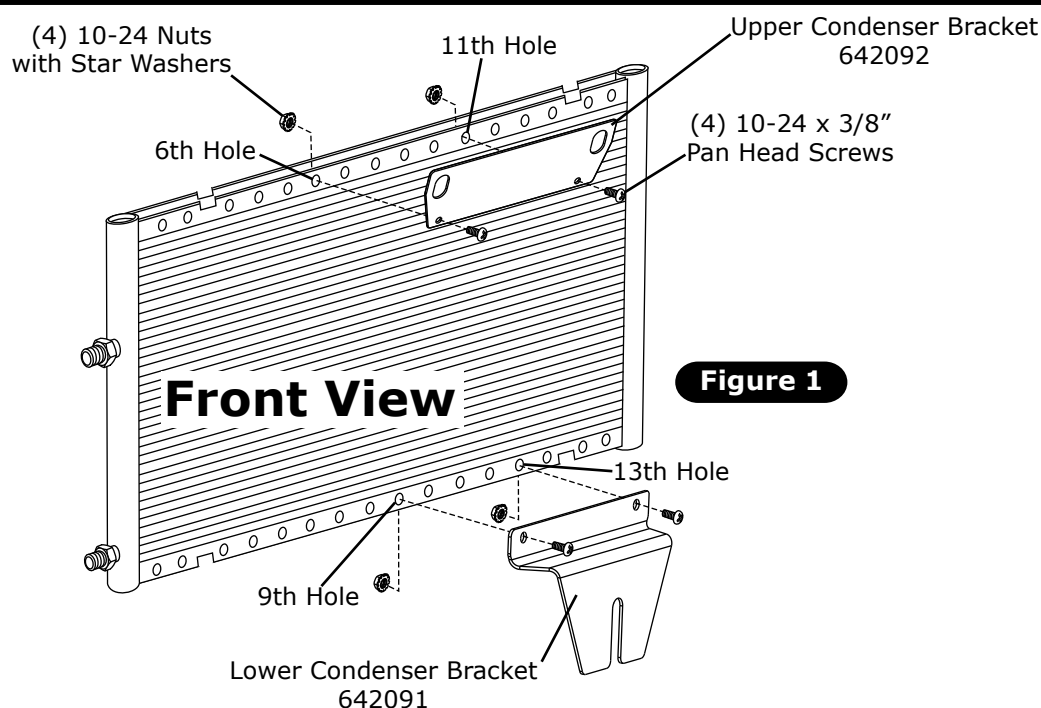


Figure 1

## Hood Latch Assembly

1. Remove OEM hood latch assembly as shown in Figure 2, below.


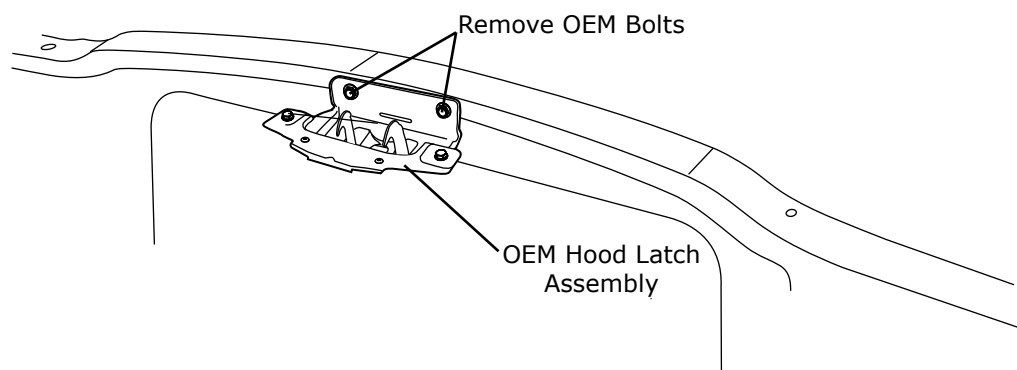


Figure 2




## Condenser Installation

1. Install condenser in front of core support as shown in Figure 3, below.
2. Using OEM bolts, reinstall hood latch assembly. Install OEM bolts through the hood latch assembly and the condenser upper bracket into the core support as shown in Figure 4, below.
3. Using OEM bolt, attach bottom of hood latch assembly. Install OEM bolt through bottom of hood latch assembly and the condenser bottom bracket into the core support as shown in Figure 4, below.

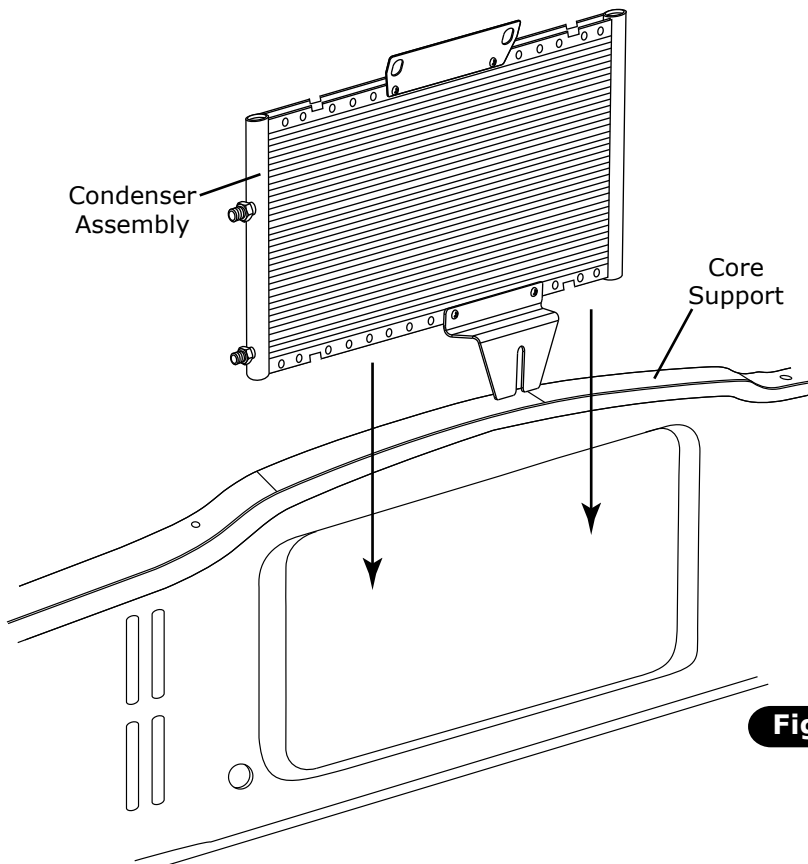

**Figure 3**

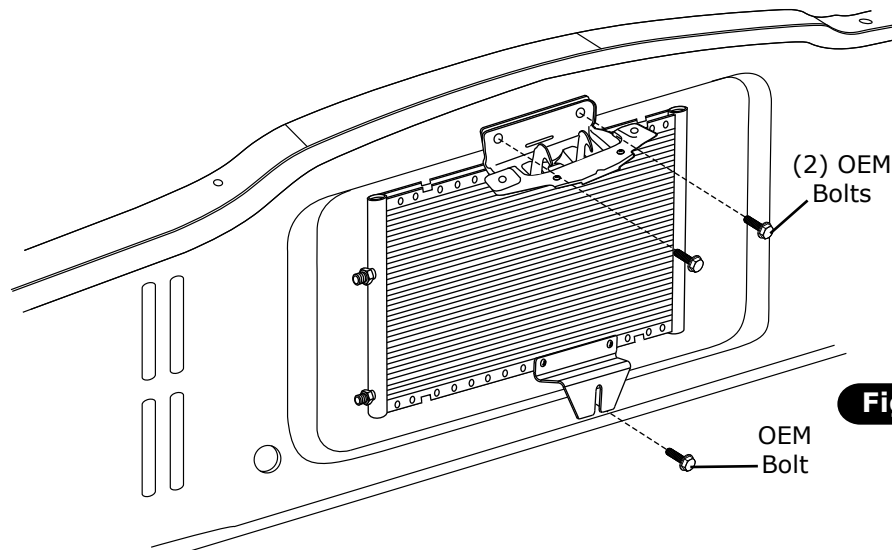

**Figure 4**





**Packing List:**  
**1964 1/2 to 66 Mustang**  
**16" x 18" Condenser Kit without Drier (017064)**

No.	Qty.	Part No.	Description	
1.	1	037031	Parallel Flow Condenser 16" x 18"	_____
2.	1	642092	Bracket 64 1/2-66 Mustang 16" x 18" Condenser Upper Condenser	_____
3.	1	642091	Bracket 64 1/2-66 Mustang 16" x 18" Condenser Lower Condenser	_____
4.	4	18260-VUB	10-24 Nut with Star Washer	_____
5.	4	18249-VUB	10-24 x 3/8" Pan Head Screw	_____

Checked By: \_\_\_\_\_  
Packed By: \_\_\_\_\_  
Date: \_\_\_\_\_

