




an ISO 9001: 2008 Registered Company

66-67 CHEVELLE

wo AC OEM LOUVER KIT
493062

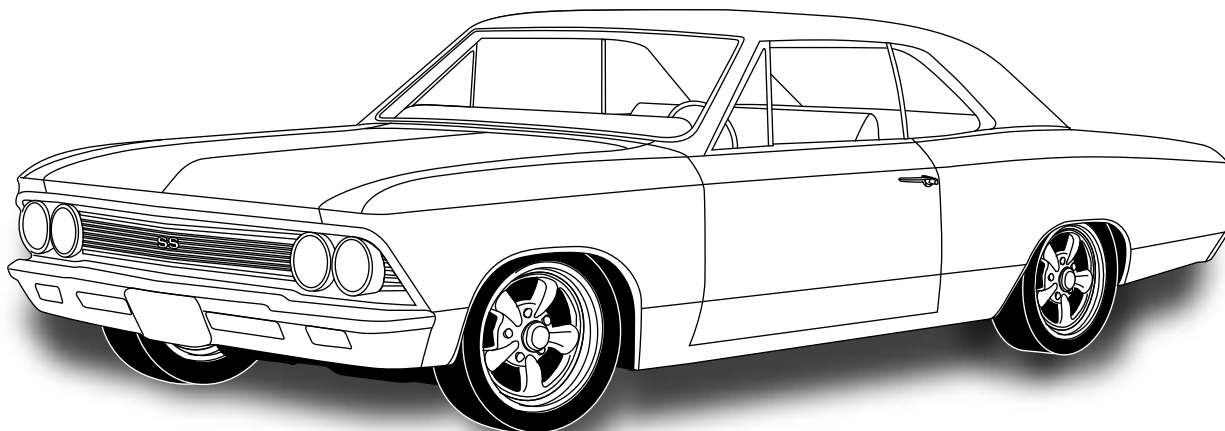

18865 GOLL ST. - SAN ANTONIO, TX. - 78266 ph.210-654-7171 - fax 210-654-3113



TABLE OF CONTENTS

PAGES

1. COVER
2. TABLE OF CONTENTS
3. PACKING LIST
4. DRIVER AND PASSENGER SIDE OEM LOUVER INSTALLATION
5. DRIVER SIDE OEM LOUVER TEMPLATE
6. PASSENGER SIDE OEM LOUVER TEMPLATE
7. OEM LOUVER PACKING LIST




66-67 CHEVELLE w/o AC OEM LOUVER KIT PACKING LIST

PACKING LIST
493062

No.	QTY.	PART No.	DESCRIPTION
1.	2	493061	OEM BALL LOUVER ASM
2.	4	182350	#8 x 5/8" PHIL OVAL TAP SCREW
3.	4	18979-VUB	"J" NUT #8 TAPPING SCREW


**** BEFORE BEGINNING INSTALLATION OPEN ALL PACKAGES AND CHECK CONTENTS OF SHIPMENT. PLEASE REPORT ANY SHORTAGES DIRECTLY TO VINTAGE AIR WITHIN 15 DAYS. AFTER 15 DAYS, VINTAGE AIR WILL NOT BE RESPONSIBLE FOR MISSING OR DAMAGED ITEMS.**

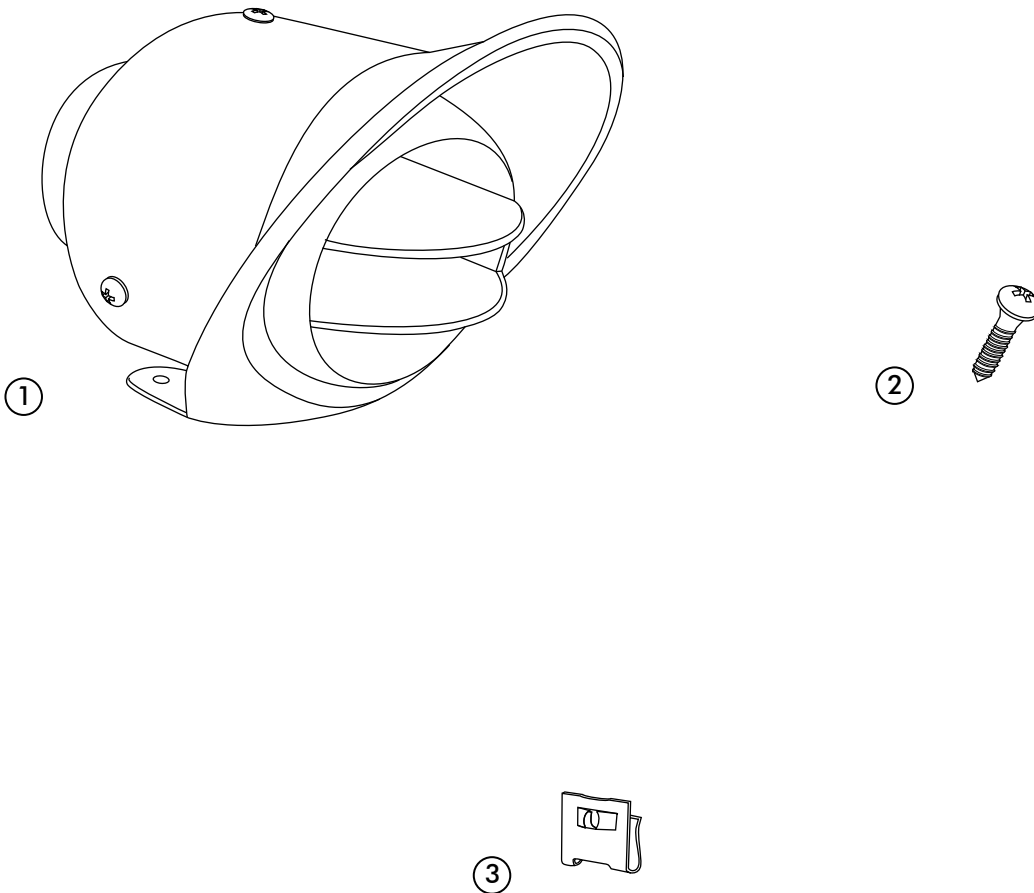




DRIVER SIDE OEM LOUVER INSTALLATION

- ☐ CUT DASH AS SHOWN BELOW, USING TEMPLATE PROVIDED ON PAGE 5.
- ☐ INSTALL (2) "J" NUTS AS SHOWN BELOW.
- ☐ INSTALL LOUVER IN DASH USING (2) #8 x 5/8" PHIL OVAL TAP SCREWS.
- ☐ BEND TAB BACK 15 DEGREES AS NEEDED TO MOUNT LOUVER FLUSH AGAINST DASH.

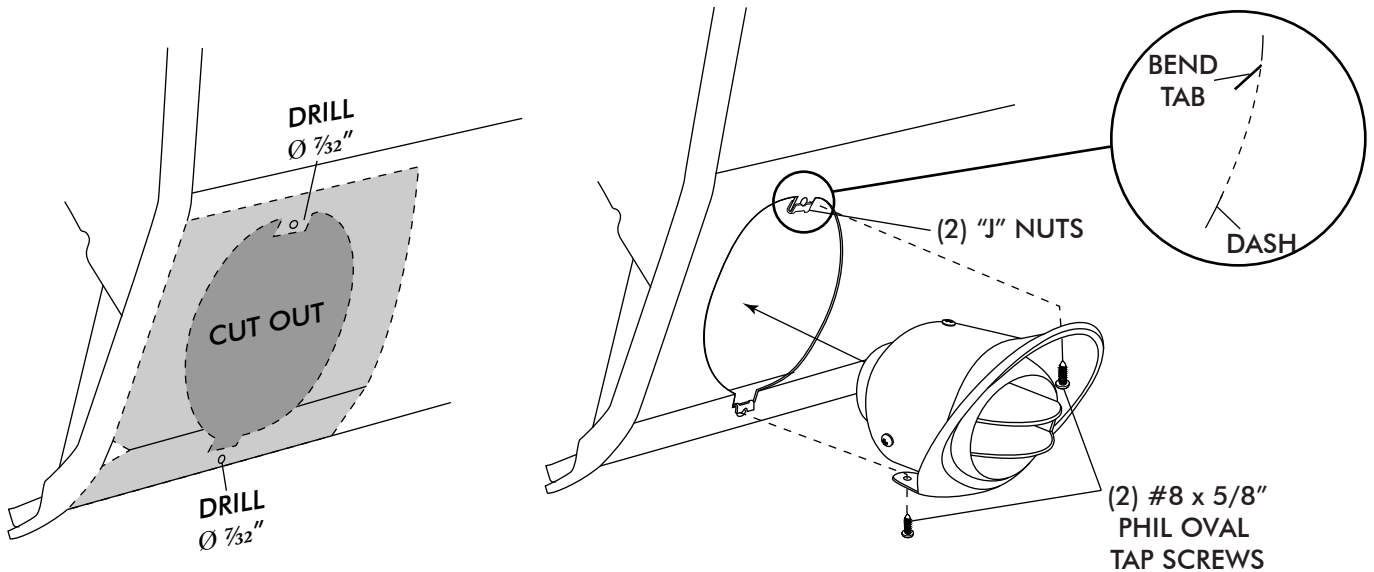


PASSENGER SIDE OEM LOUVER INSTALLATION

- ☐ CUT DASH AS SHOWN BELOW, USING TEMPLATE PROVIDED ON PAGE 6.
- ☐ INSTALL (2) "J" NUTS AS SHOWN BELOW.
- ☐ INSTALL LOUVER IN DASH USING (2) #8 x 5/8" PHIL OVAL TAP SCREWS.
- ☐ BEND TAB BACK 15 DEGREES AS NEEDED TO MOUNT LOUVER FLUSH AGAINST DASH.

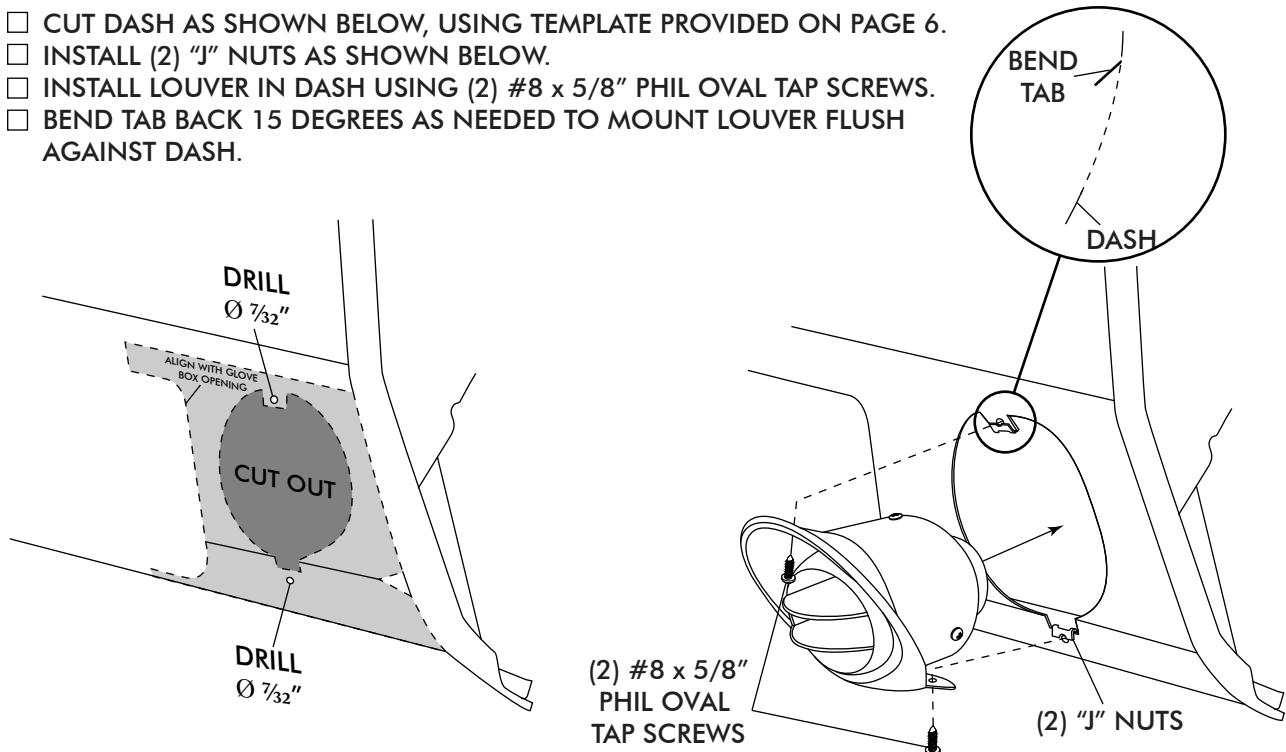




DRIVER SIDE OEM LOUVER TEMPLATE

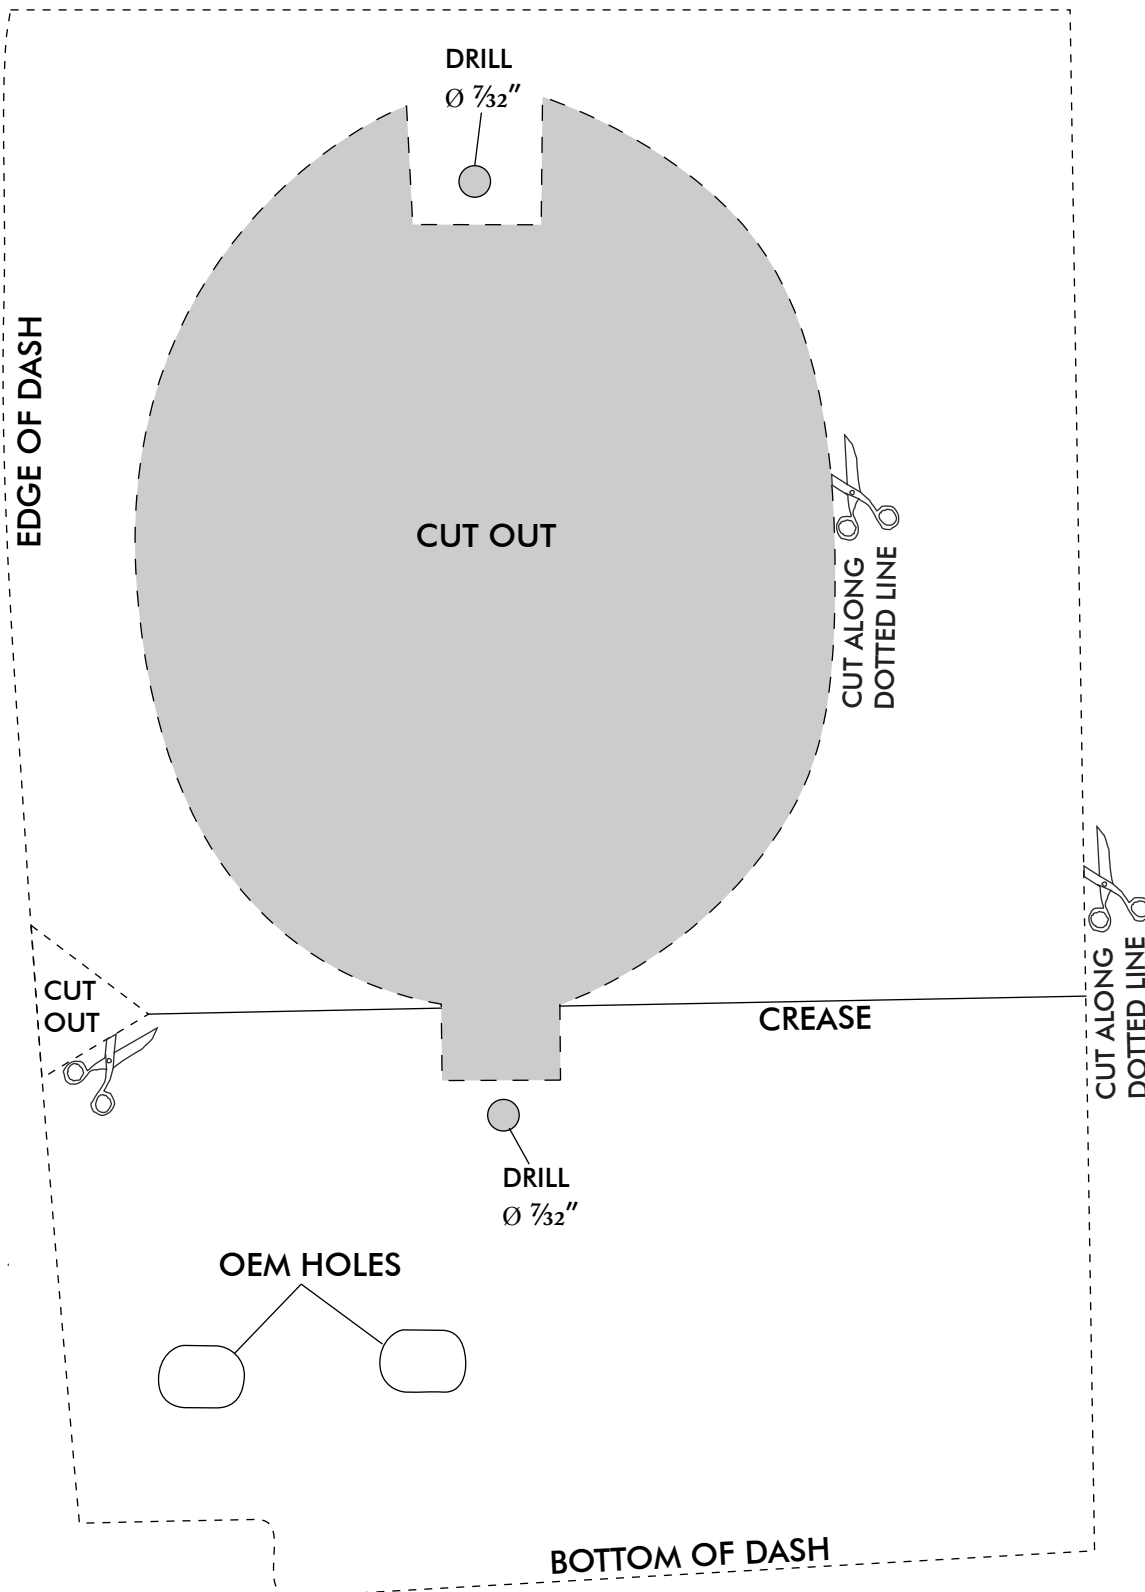



PASSENGER SIDE OEM LOUVER TEMPLATE

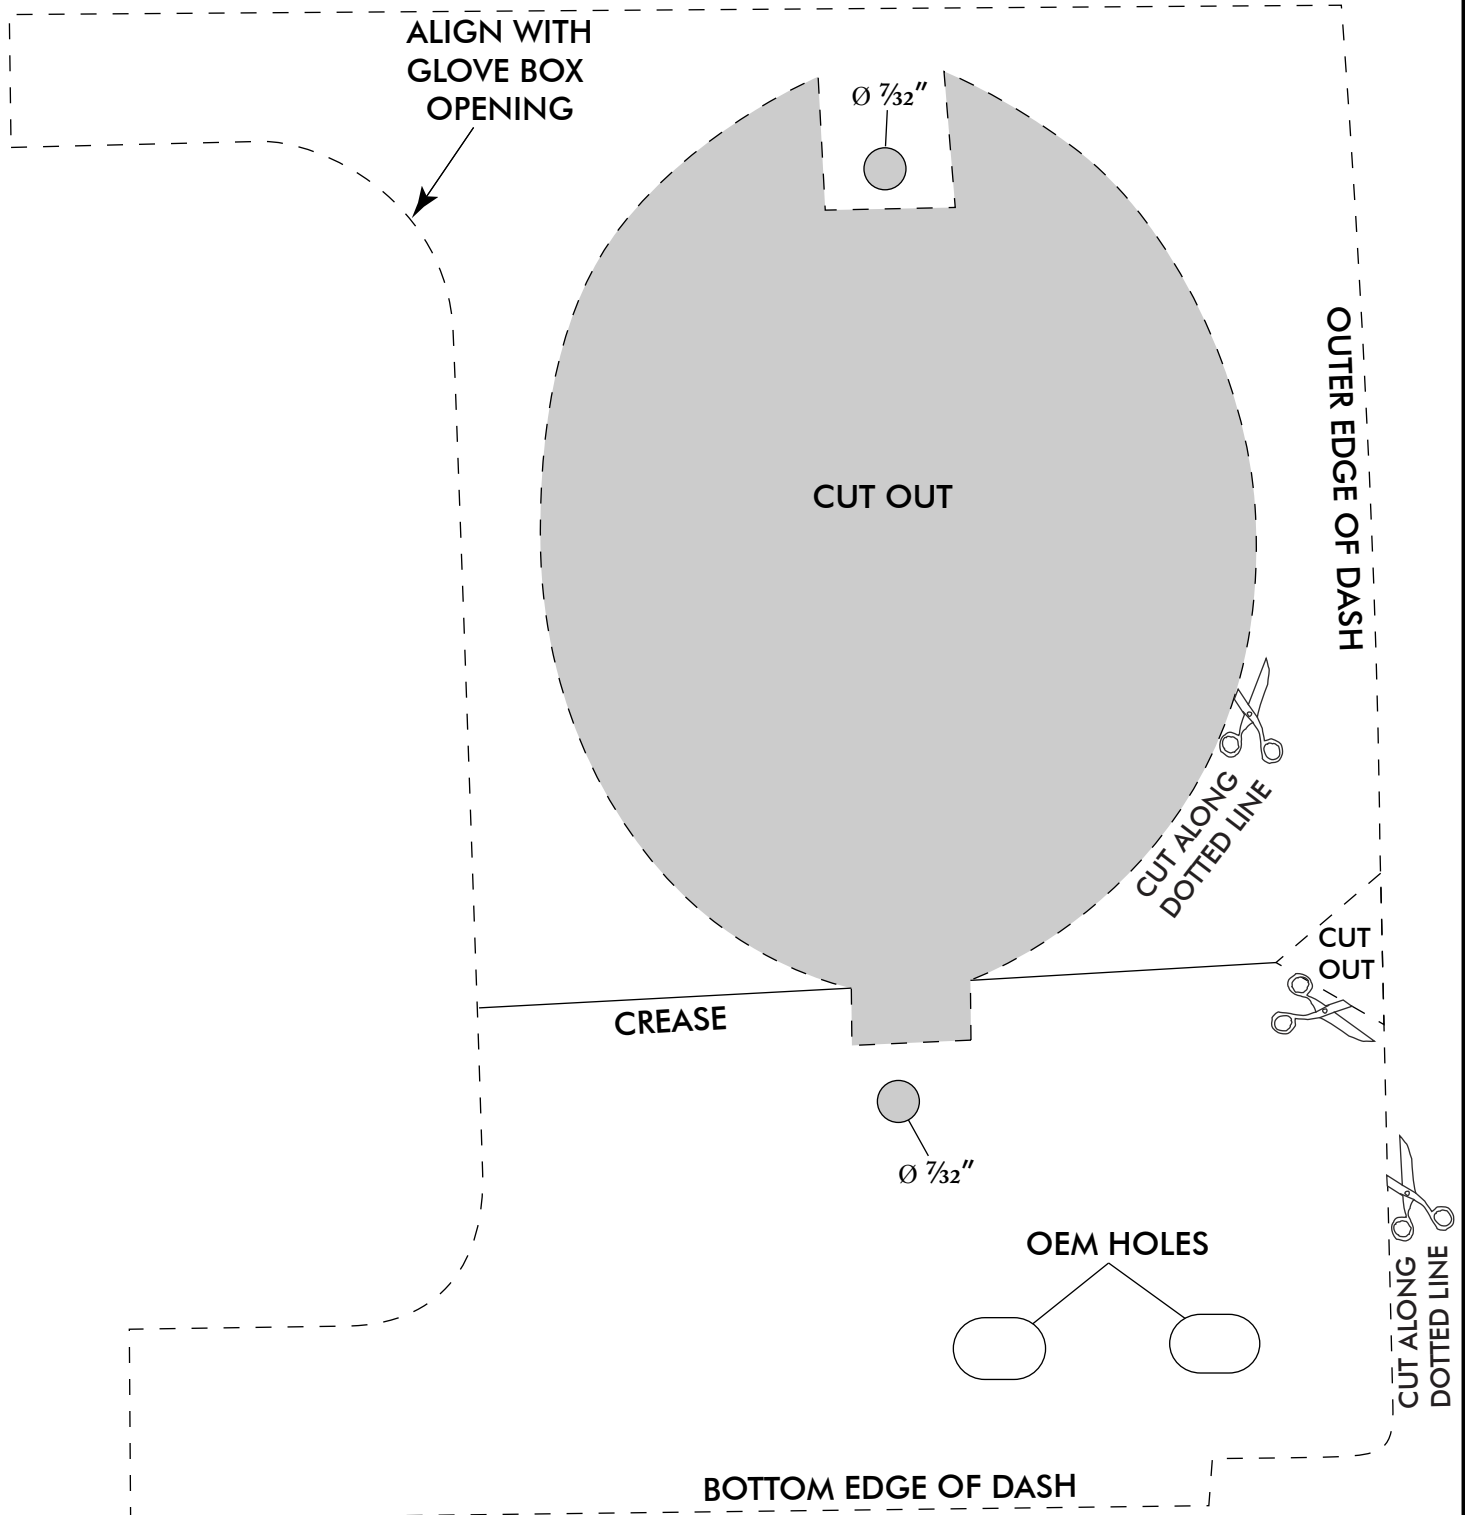



66-67 CHEVELLE wo AC OEM LOUVER KIT PACKING LIST

PACKING LIST
493062

No.	QTY.	PART No.	DESCRIPTION	
1.	2	493061	OEM BALL LOUVER ASM	_____
2.	4	182350	#8 x 5/8" PHIL OVAL TAP SCREW	_____
3.	4	18979-VUB	"J" NUT #8 TAPPING SCREW	_____

CHECKED BY: _____
PACKED BY: _____
DATE: _____

