



www.vintageair.com


Packing List: Standard Hose Kit (524172) 1968-76 Chevrolet Corvette

No.	Qty.	Part No.	Description	
1.	1	091980	A/C Hose, #10 Compressor/Evaporator	_____
2.	1	091979	A/C Hose, #8 Compressor/Condenser	_____
3.	1	091978	A/C Hose, #6 Drier/Evaporator	_____
4.	2	33857-VUF	O-ring, #6	_____
5.	2	33858-VUF	O-ring, #8	_____
6.	2	33859-VUF	O-ring, #10	_____
7.	1	41117-VUP	Refrigerant Oil	_____
8.	1	31602-VUD	Adel Clamp, #6	_____
9.	1	18250-VUB	Screw, 10-32 x 1/2"	_____
10.	1	18251-VUB	Nut, 10-32	_____
11.	4	21300-VUP	Tie Wrap, 11"	_____

Checked By: _____

Packed By: _____

Date: _____

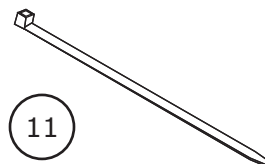

**NOTE: Images may not depict actual parts and quantities.
Refer to packing list for actual parts and quantities.**