




an ISO 9001:2008 Registered Company

1964 PONTIAC GTO

CONDENSER KIT

026761

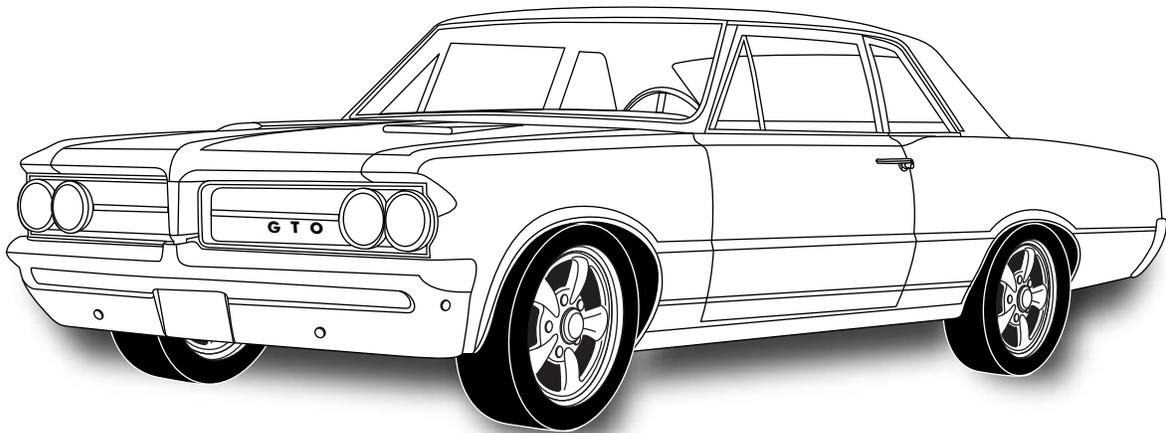

18865 GOLL ST. - SAN ANTONIO, TX. - 78266 ph.210-654-7171 - fax 210-654-3113



TABLE OF CONTENTS

PAGES


1. COVER
2. TABLE OF CONTENTS
3. PACKING LIST/PARTS DISCLAIMER
4. INFORMATION PAGE
5. MOUNTING BRACKET INSTALLATION
6. RADIATOR/HOOD LATCH REMOVAL & CONDENSER INSTALLATION
7. CONDENSER INSTALLATION CONT.
8. PACKING LIST



**CONDENSER KIT
026761**

No.	QTY.	PART No.	DESCRIPTION
1.	1	03767-VUC	14 X 24 PARALLEL FLOW COND.
2.	4	18249-VUB	10-24 X 3/8 PAN HEAD SCREW
3.	4	18260-VUB	10-24 NUT W/STAR WASHER
4.	3	18290-VUB	1/4-20 X 1 HEX BOLT
5.	3	18125-VUB	1/4 FLAT WASHER
6.	1	643049	BRKT 64 GTO TOP COND ASM
7.	1	643052	BRKT 64-67 GTO BOTTOM COND

****BEFORE BEGINNING INSTALLATION OPEN ALL PACKAGES AND CHECK CONTENTS OF SHIPMENT PLEASE REPORT ANY SHORTAGES DIRECTLY TO VINTAGE AIR WITHIN 15 DAYS. AFTER 15 DAYS, VINTAGE AIR WILL NOT BE RESPONSIBLE FOR MISSING OR DAMAGED ITEMS.**

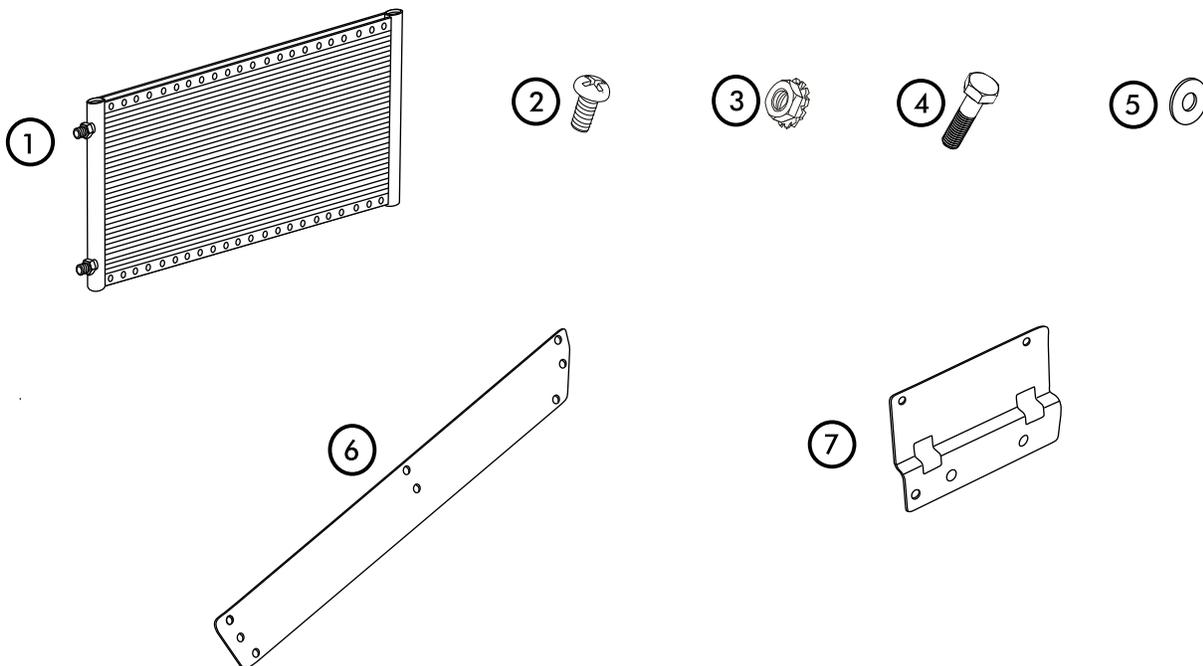

**NOTE: IMAGES MAY NOT DEPICT ACTUAL PARTS AND QUANTITIES.
REFER TO PACKING LIST FOR ACTUAL PARTS AND QUANTITIES**




IMPORTANT NOTICE-PLEASE READ

1964 GTO

THIS KIT WAS DEVELOPED BASED ON THE MEASUREMENTS BELOW, WHICH WERE TAKEN FROM A 1964 GTO CORE SUPPORT.

ENGINE SIDE
OF CORE SUPPORT

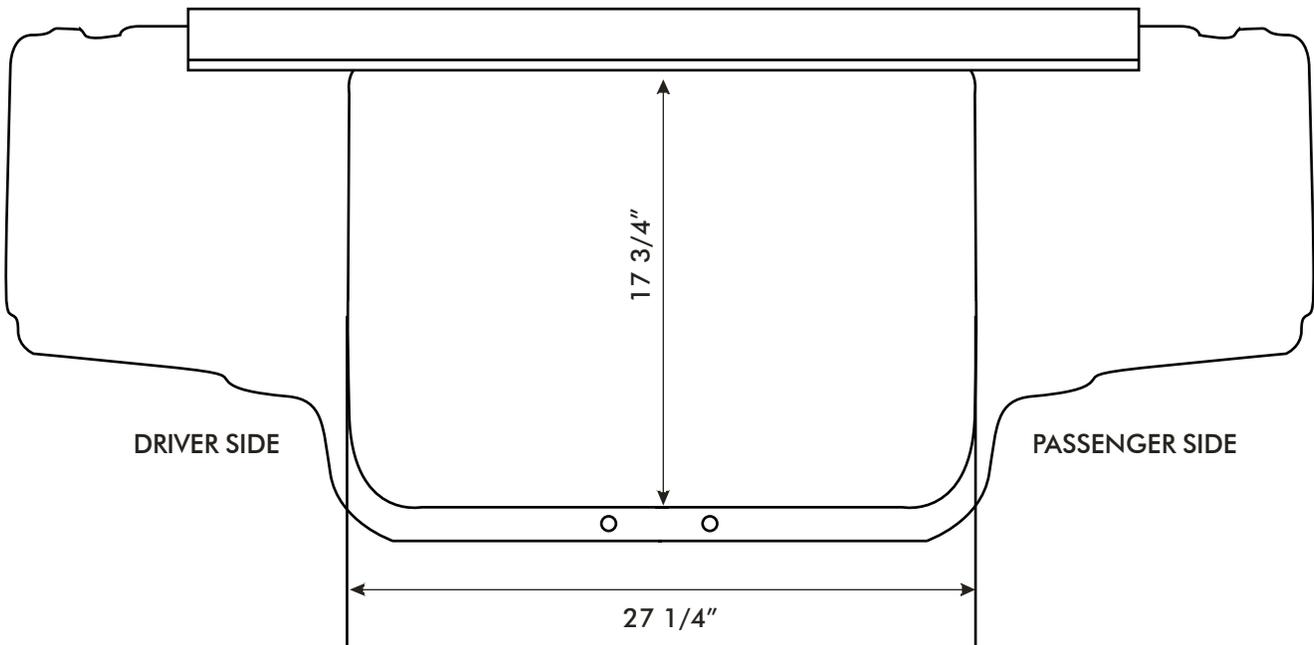




TOP MOUNTING BRACKET INSTALLATION


- INSTALL TOP MOUNTING BRACKET ON TO CONDENSER USING (2) 10-24 X 3/8 PAN HEAD SCREWS AND (2) 10-24 NUTS WITH STAR WASHERS.

NOTE: BRACKET MOUNTS THROUGH THE 1ST & LAST HOLE FROM THE LEFT SIDE OF THE CONDENSER.

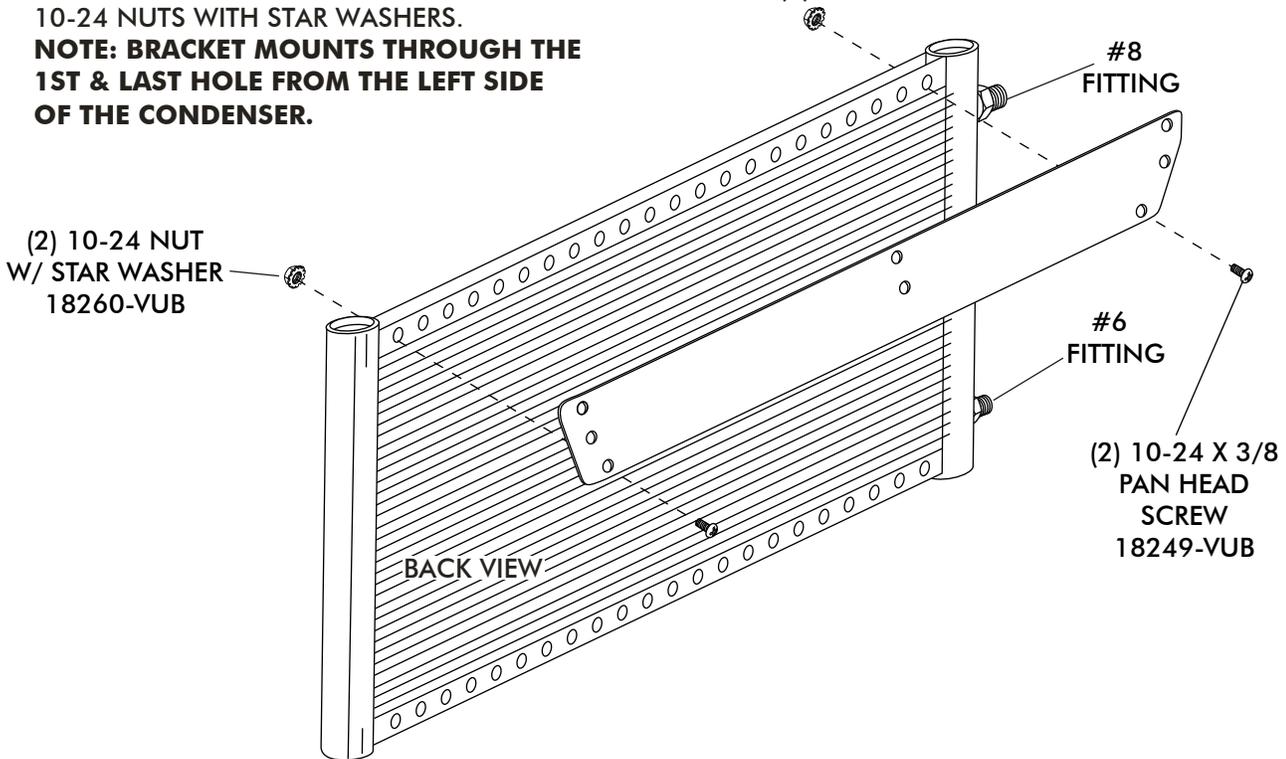

BOTTOM MOUNTING BRACKET INSTALLATION

- INSTALL BOTTOM MOUNTING BRACKET ON TO CONDENSER USING (2) 10-24 X 3/8 PAN HEAD SCREWS AND (2) 10-24 NUTS WITH STAR WASHERS. **NOTE BRACKET MOUNTS THROUGH THE 10TH & 15TH HOLE FROM THE LEFT SIDE OF THE CONDENSER (BACK VIEW).**

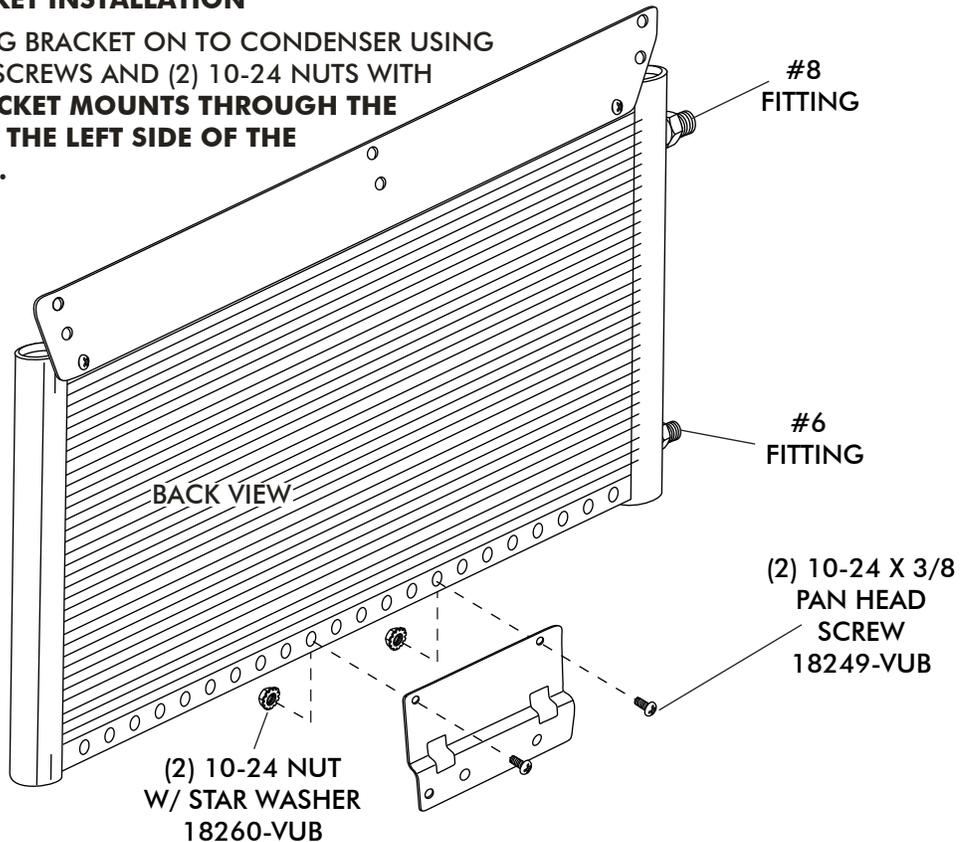




RADIATOR REMOVAL

- DRAIN RADIATOR, REMOVE UPPER AND LOWER RADIATOR HOSES AND REMOVE RADIATOR.

HOOD LATCH ASSEMBLY


- REMOVE OEM HOOD LATCH ASSEMBLY

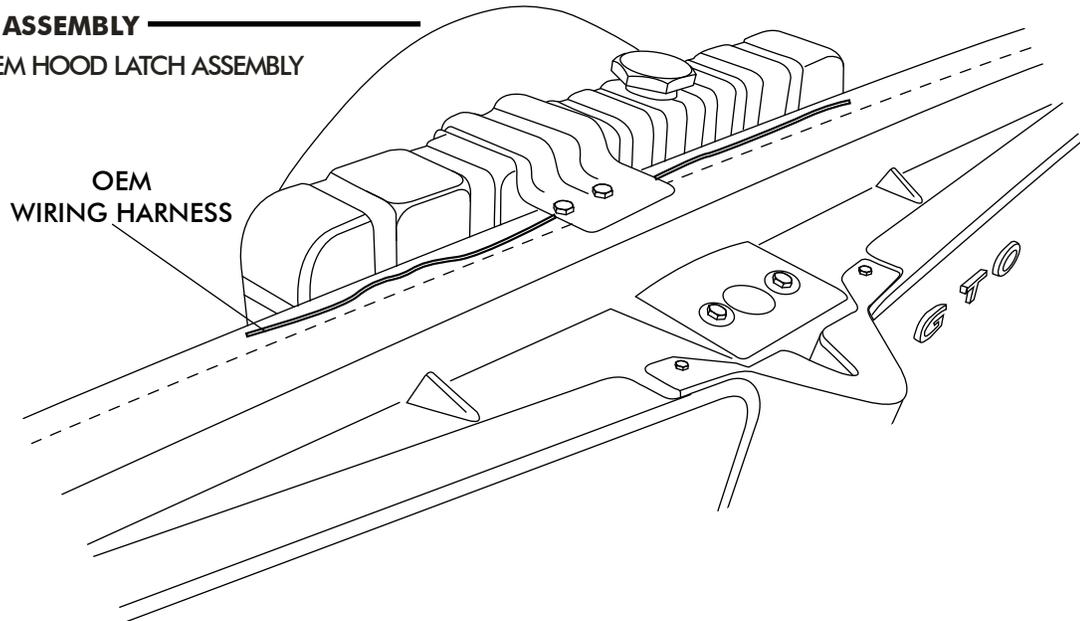

CONDENSER INSTALLATION

- INSTALL CONDENSER AS SHOWN BELOW.


NOTE: WHEN INSTALLING CONDENSER, OEM WIRING HARNESS LOCATED ON INSIDE OF CORE SUPPORT WILL BE RELOCATED TO HOLES SHOWN.

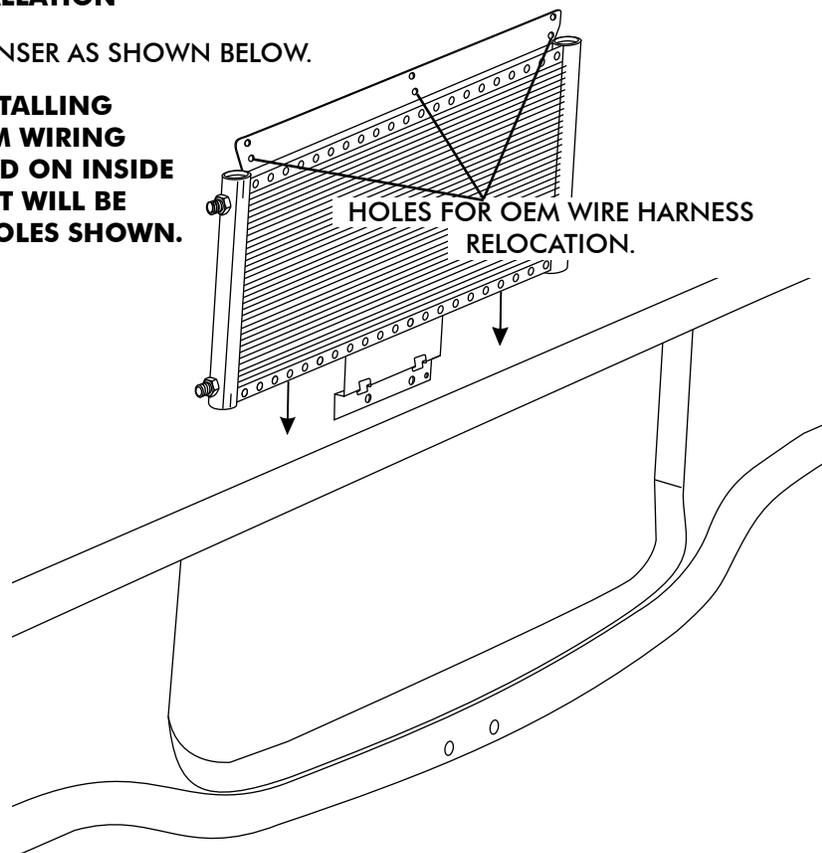



CONDENSER INSTALLATION CONT.

- ☐ SECURE THE CONDENSER TO THE CORE SUPPORT AS SHOWN BELOW.

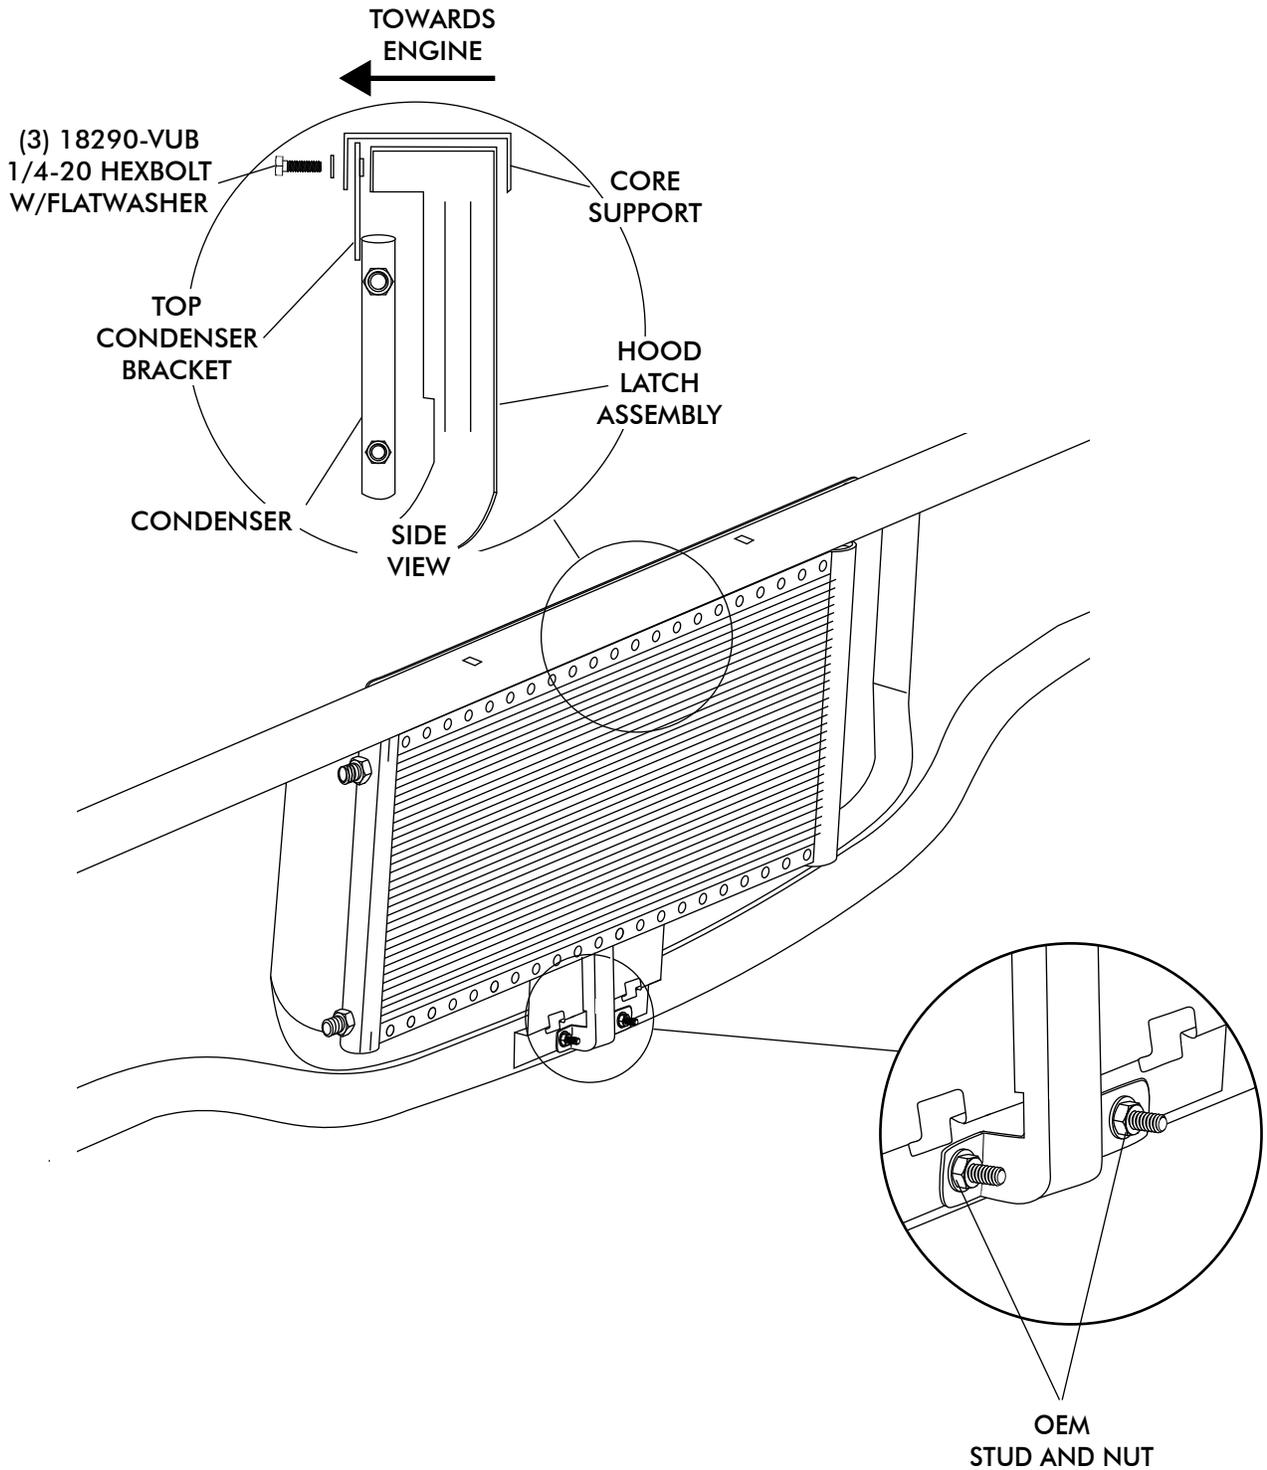




**CONDENSER KIT
026761**

No.	QTY.	PART No.	DESCRIPTION	
1.	1	03767-VUC	14 X 24 PARALLEL FLOW COND.	_____
2.	4	18249-VUB	10-24 X 3/8 PAN HEAD SCREW	_____
3.	4	18260-VUB	10-24 NUT W/STAR WASHER	_____
4.	3	18290-VUB	1/4-20 X 1 HEX BOLT	_____
5.	3	18125-VUB	1/4 FLAT WASHER	_____
6.	1	643049	BRKT 64 GTO TOP COND ASM	_____
7.	1	643052	BRKT 64-67 GTO BOTTOM COND	_____

CHECKED BY: _____
 PACKED BY: _____
 DATE: _____

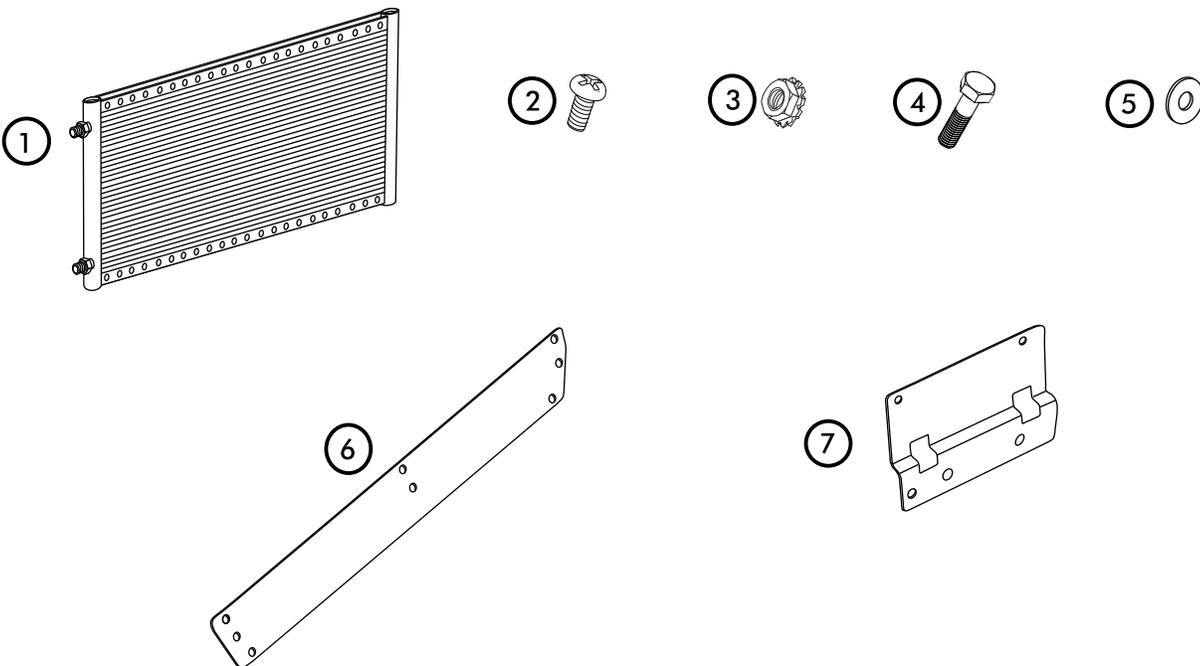

**NOTE: IMAGES MAY NOT DEPICT ACTUAL PARTS AND QUANTITIES.
 REFER TO PACKING LIST FOR ACTUAL PARTS AND QUANTITIES**