



an ISO 9001:2008 Registered Company

1969 Firebird

with & without **Factory Air**
Condenser Kit
026062

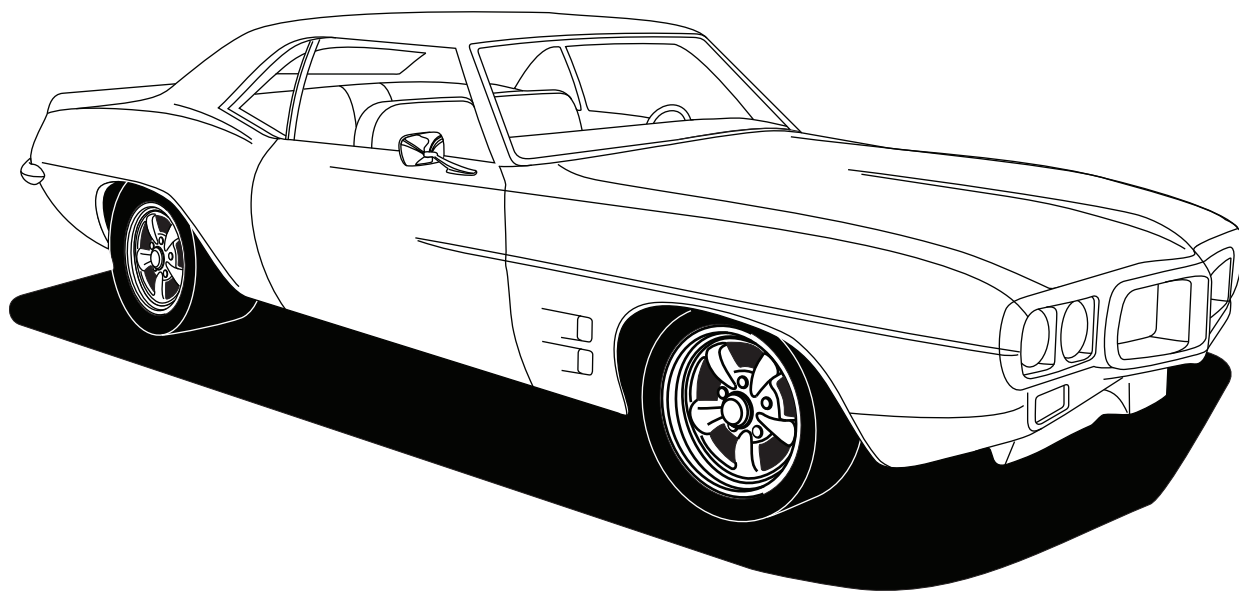




Table of Contents



- 1. Cover**
- 2. Table of Contents**
- 3. Packing List/Parts Disclaimer**
- 4. Condenser & Top Mounting Bracket Installation**
Figure 1
- 5. Lower Mounting Bracket & Hood Latch Assembly**
Figures 2 & 3
- 6. Condenser Installation**
Figures 4 & 5
- 7. Hood Latch Assembly (Cont.)**
Figure 6
- 8. Packing List**



Packing List: 1969 Firebird with & without A/C Condenser Kit (026062)


No.	Qty.	Part No.	Description
1.	1	03766-VUC	14" x 22" Parallel Flow Condenser
2.	1	18148-VUB	5/16" Hex Nut
3.	6	18249-VUB	10-24 x 3/8" Pan Head Screw
4.	6	18260-VUB	10-24 Nut with Star Washer
5.	1	18610-VUB	5/16" Lock Washer
6.	2	18611-VUB	5/16" Flat Washer
7.	1	18310-VUB	5/16-18 x 1 1/2" Hex Bolt
8.	1	64268-VCB	Bracket 67-68 Camaro Condenser Top
9.	1	64368-VCB	Bracket 67-68 Camaro Condenser Bottom Right
10.	1	64468-VCB	Bracket 67-68 Camaro Condenser Bottom Left

**** Before beginning installation, open all packages and check contents of shipment.
Please report any shortages directly to Vintage Air within 15 days. After 15 days,
Vintage Air will not be responsible for missing or damaged items.**

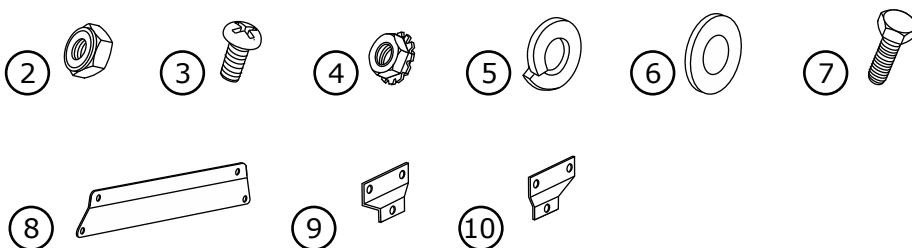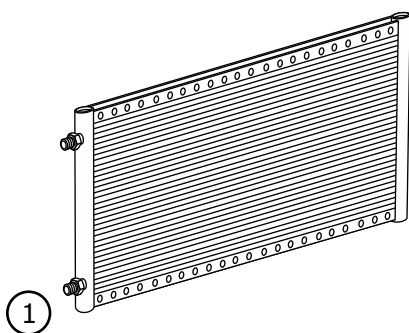




Condenser Bracket Installation

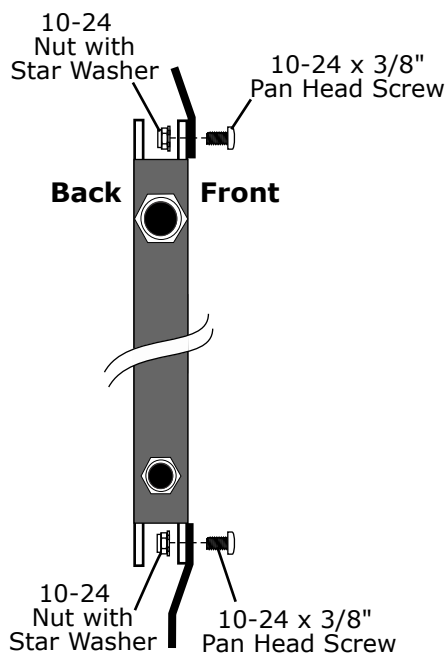

Side View
(Bottom)

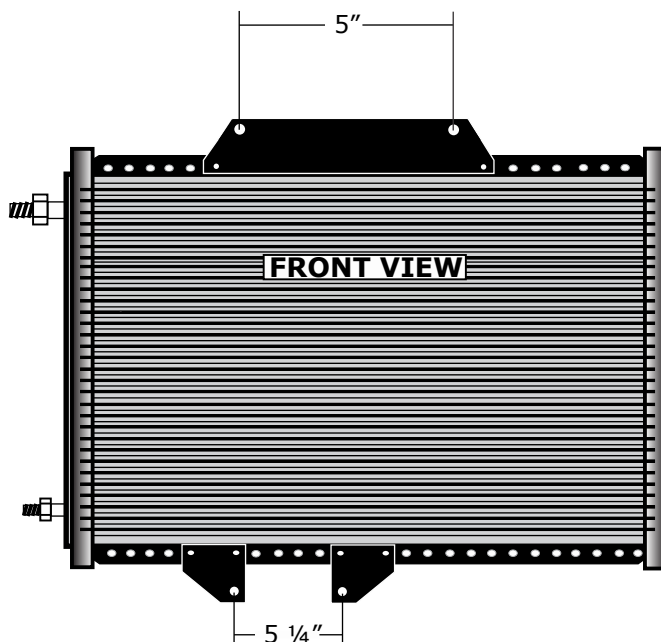

Top Mounting Bracket Installation

1. Install top mounting bracket onto condenser using (2) 10-24 x 3/8" pan head screws and (2) 10-24 nuts with star washers as shown in Figure 1, below. **NOTE: Bracket mounts through the 6th and 14th holes from the left side of the condenser.**


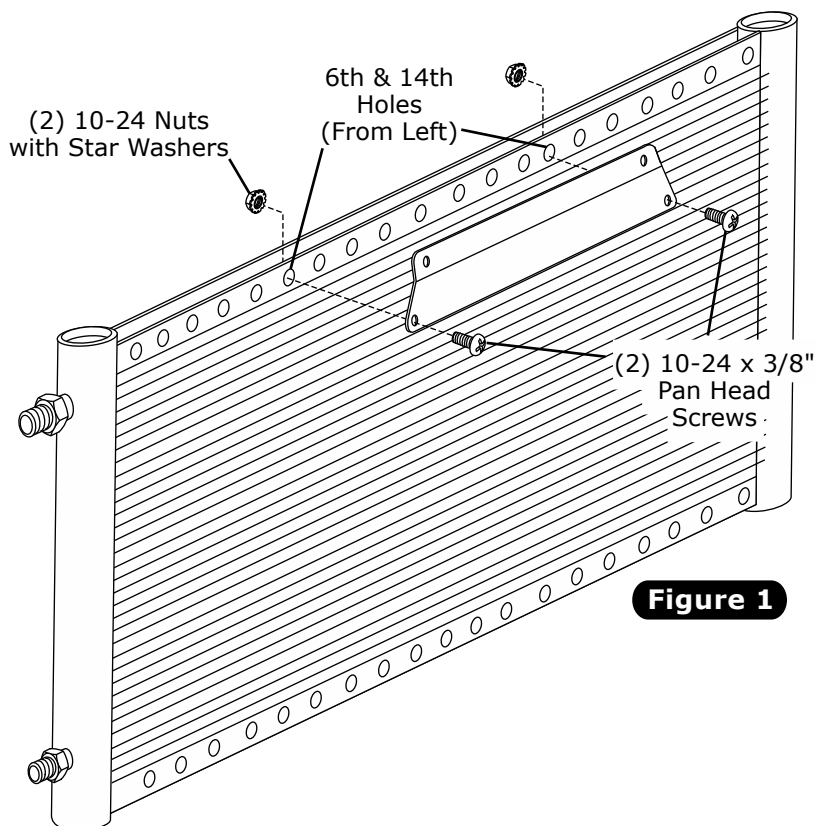


Figure 1




Lower Mounting Bracket Installation

1. Using (4) 10-24 x 3/8" pan head screws with (4) 10-24 nuts with star washers, install the (2) lower condenser mounting brackets as shown in Figure 2, below.

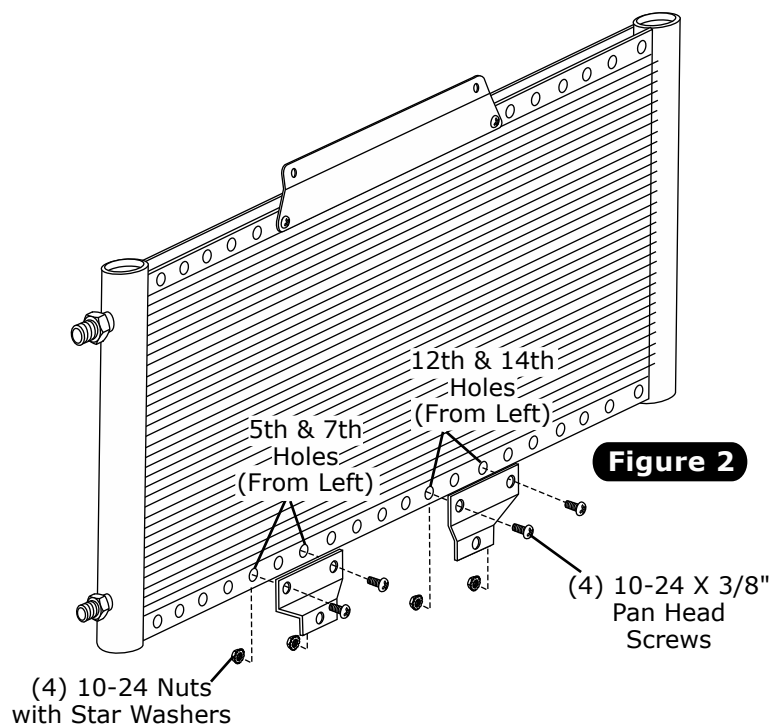

Hood Latch Assembly



1. Remove OEM hood latch assembly. See Figure 3, below.

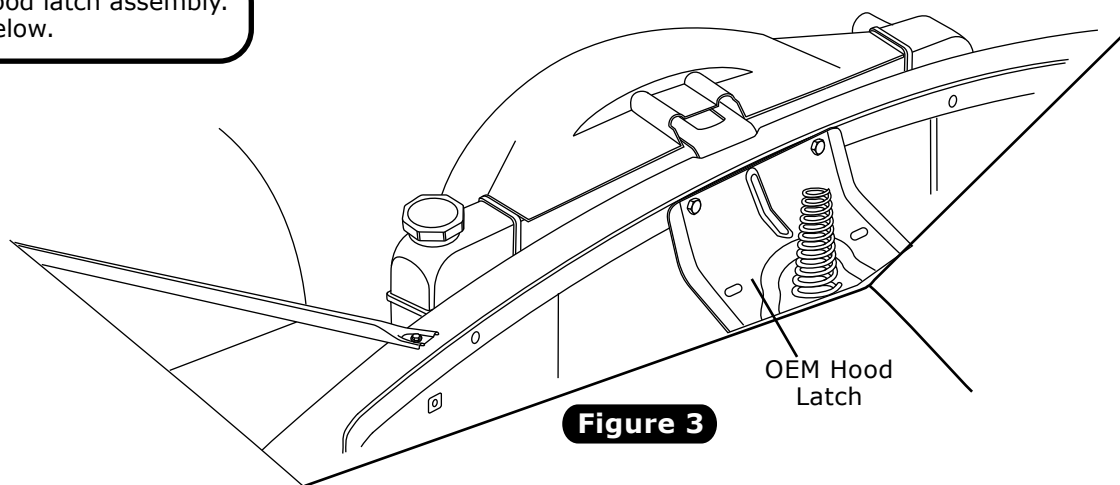



Condenser Installation

1. Lower condenser between the front side of the core support and the front header as shown in Figure 4, below.
NOTE: The top mounting bracket goes on the front of the core support.
2. Secure the bottom driver side of the condenser to the core support using a 5/16-18 x 1 1/2" hex bolt, flat washer, lock washer and 5/16" hex nut as shown in Figure 5, below.
3. Secure the bottom passenger side of the condenser to the core support using OEM bolt as shown in Figure 5, below.

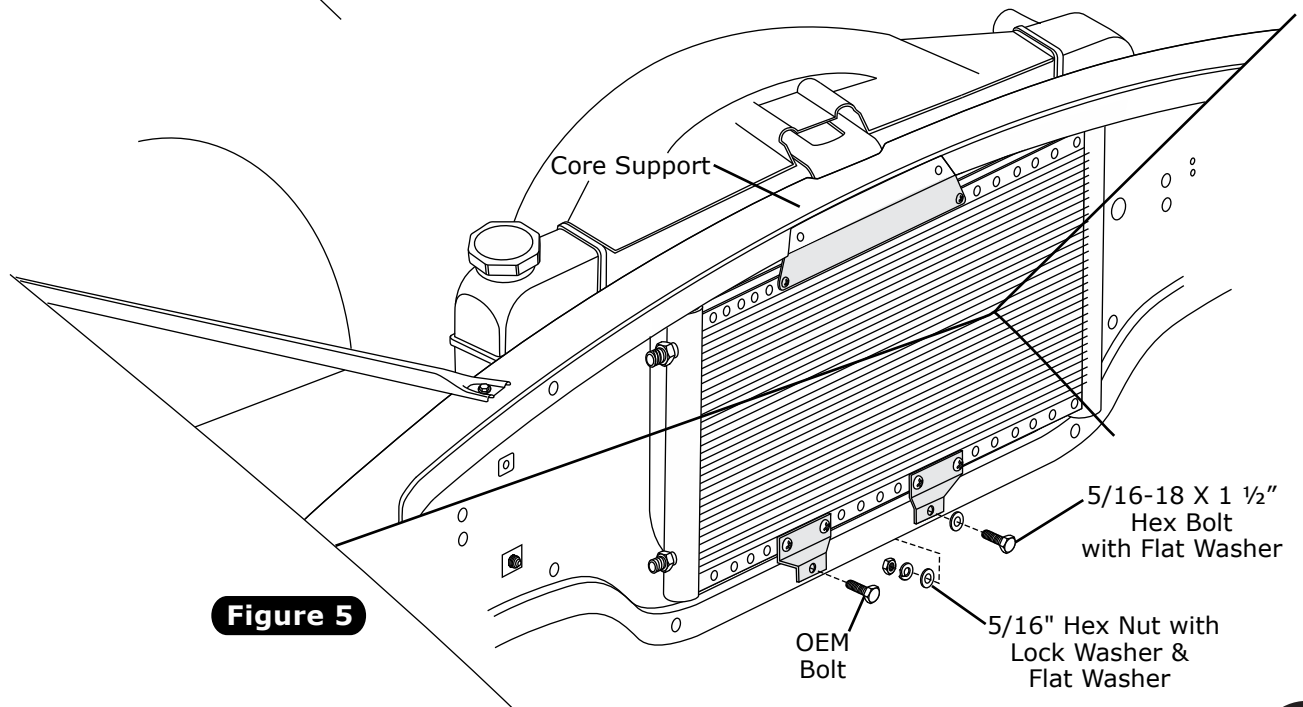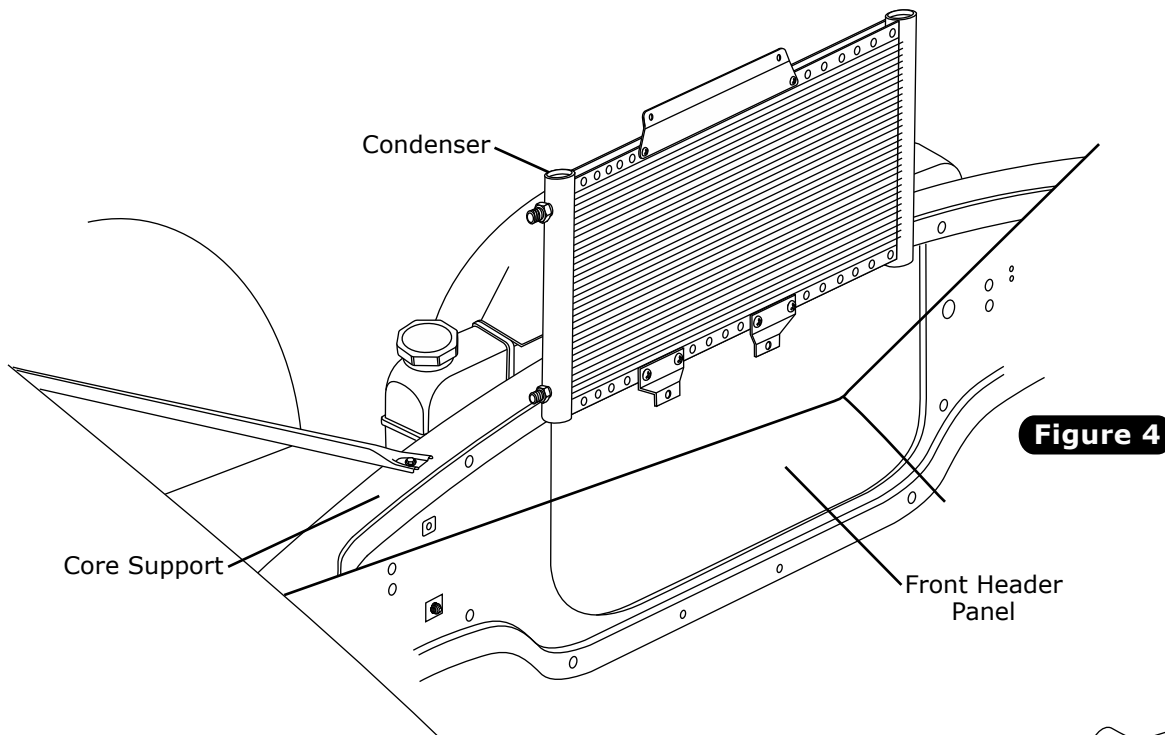



Hood Latch Assembly (Cont.)

1. Reinstall hood latch assembly using OEM bolts as shown in Figure 6, below.

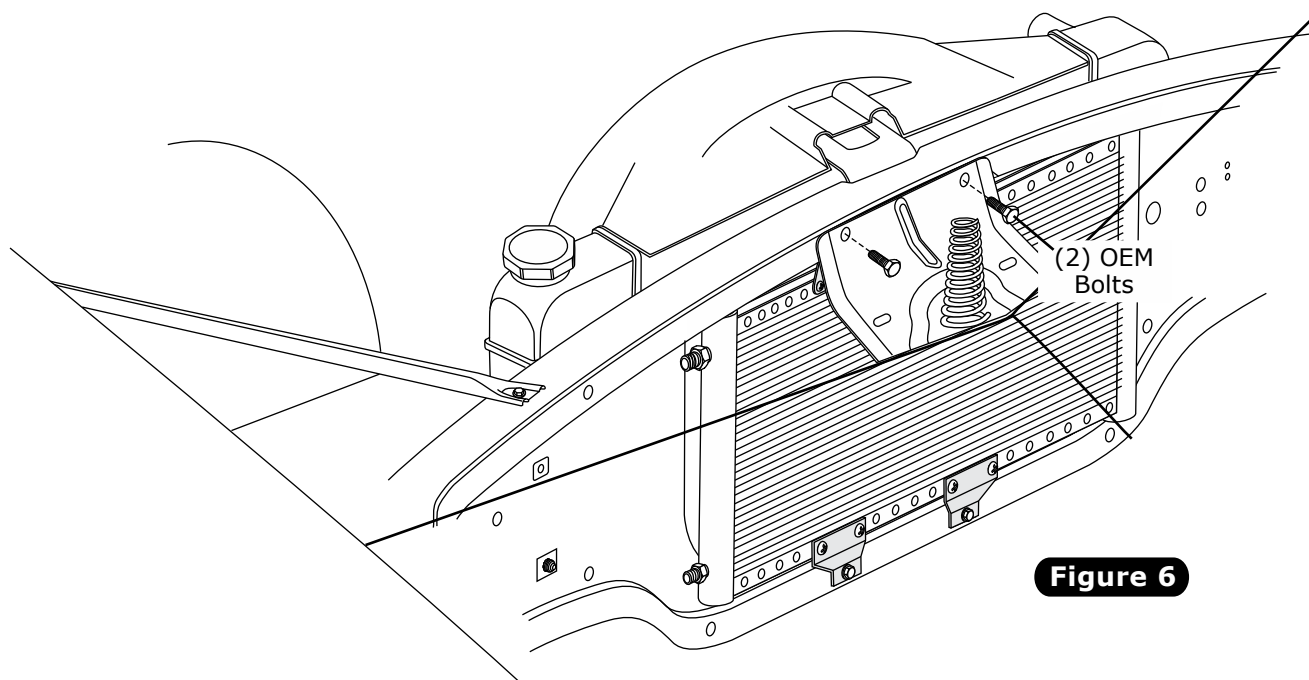


Figure 6



Packing List: **1969 Firebird with &** **without A/C Condenser Kit (026062)**

No.	Qty.	Part No.	Description	
1.	1	03766-VUC	14" x 22" Parallel Flow Condenser	_____
2.	1	18148-VUB	5/16" Hex Nut	_____
3.	6	18249-VUB	10-24 x 3/8" Pan Head Screw	_____
4.	6	18260-VUB	10-24 Nut with Star Washer	_____
5.	1	18610-VUB	5/16" Lock Washer	_____
6.	2	18611-VUB	5/16" Flat Washer	_____
7.	1	18310-VUB	5/16-18 x 1 1/2" Hex Bolt	_____
8.	1	64268-VCB	Bracket 67-68 Camaro Condenser Top	_____
9.	1	64368-VCB	Bracket 67-68 Camaro Condenser Bottom Right	_____
10.	1	64468-VCB	Bracket 67-68 Camaro Condenser Bottom Left	_____

Checked By: _____
 Packed By: _____
 Date: _____

