


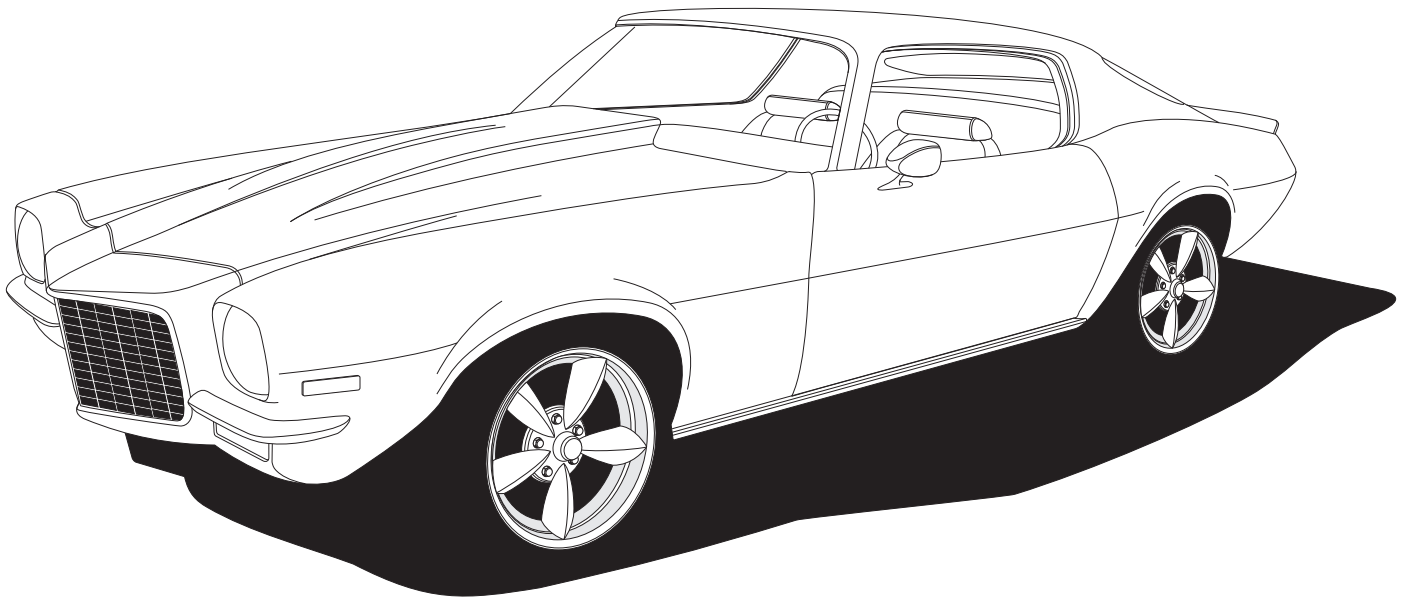

# 1970-73 CHEVY CAMARO

w & w/o AC CONDENSER KIT w/o DRIER

**027070**



18865 GOLL ST. - SAN ANTONIO, TX. - 78266 ph.210-654-7171 - fax 210-654-3113



## ***Table of Contents***

### PAGES

1. COVER
2. TABLE OF CONTENTS
3. PACKING LIST/PARTS DISCLAIMER
4. CONDENSER BRACKET INSTALLATION/ MOUNTING BRACKET INSTALLATION  
FIGURE 1
5. HOOD LATCH ASSEMBLY/ RADIATOR REMOVAL / CONDENSER INSTALLATION  
FIGURES 2 & 3
6. CONDENSER INSTALLATION CONT.  
FIGURES 4 & 5
7. PACKING LIST




# 1970-73 CAMARO w & w/o AC CONDENSER w/o DRIER

## 1970-73 CAMARO w & w/o FACTORY AIR w/o DRIER CONDENSER KIT PACKING LIST

CONDENSER KIT  
027070

No.	QTY.	PART No.	DESCRIPTION
1.	1	03766-VUC	14" X 22" PARALLEL FLOW COND.
2.	4	18249-VUB	10/24" X 3/8" PAN HEAD
3.	4	18260-VUB	10/24" NUT w/STAR WASHER
4.	1	18266-VUB	#14 x 3/4 SHEETMETAL SCREW
5.	2	18611-VUB	5/16" FLAT WASHER
6.	1	644070-FCB	1970-73 CAMARO COND. BRKT. TOP
7.	1	644071-FCB	1970-73 CAMARO COND. BRKT. BTM

**\*\* BEFORE BEGINNING INSTALLATION OPEN ALL PACKAGES AND CHECK CONTENTS OF SHIPMENT. PLEASE REPORT ANY SHORTAGES DIRECTLY TO VINTAGE AIR WITHIN 15 DAYS. AFTER 15 DAYS, VINTAGE AIR WILL NOT BE RESPONSIBLE FOR MISSING OR DAMAGED ITEMS.**

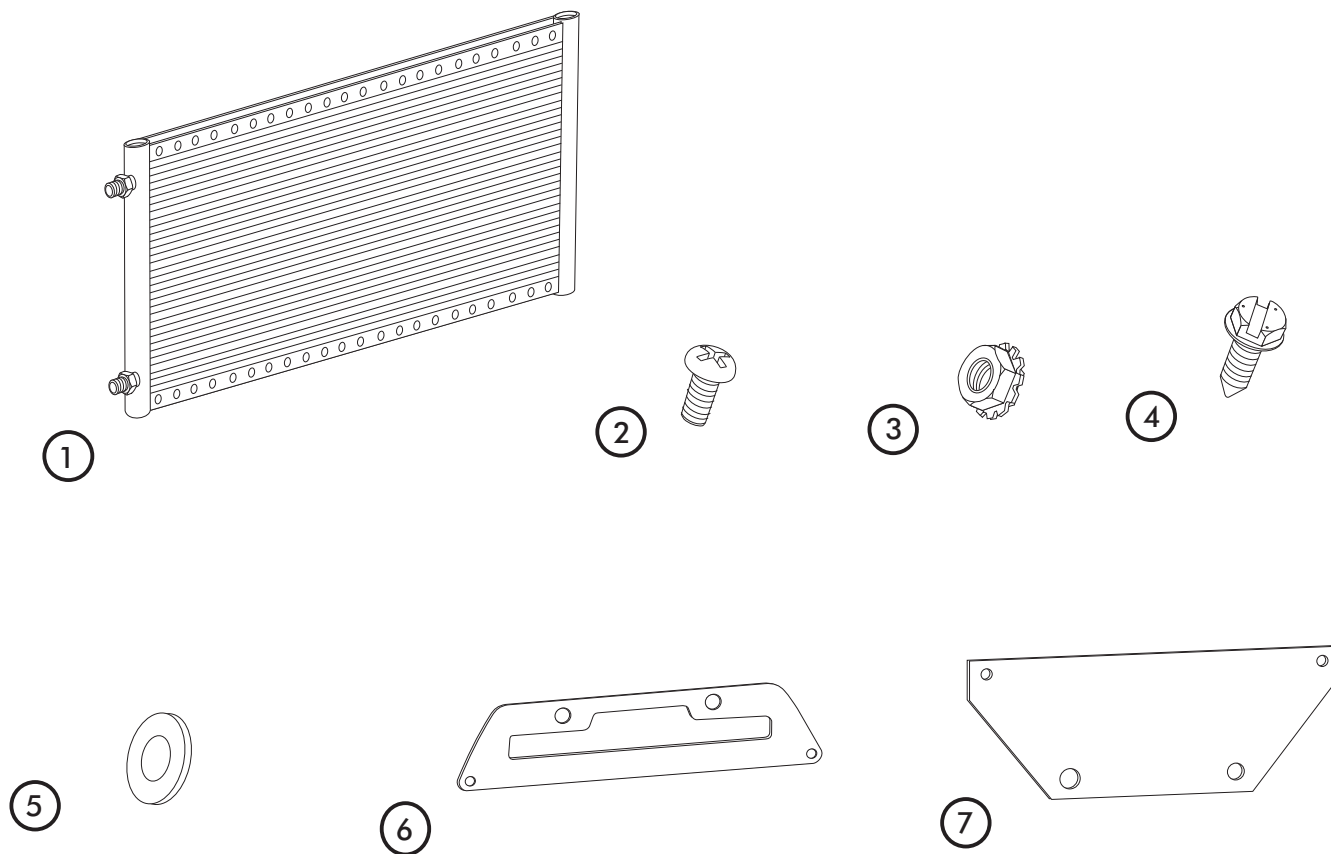


**NOTE: IMAGES MAY NOT DEPICT ACTUAL PARTS AND QUANTITIES.  
REFER TO PACKING LIST FOR ACTUAL PARTS AND QUANTITIES**



# 1970-73 CAMARO w & w/o AC CONDENSER w/o DRIER

## CONDENSER BRACKET INSTALLATION

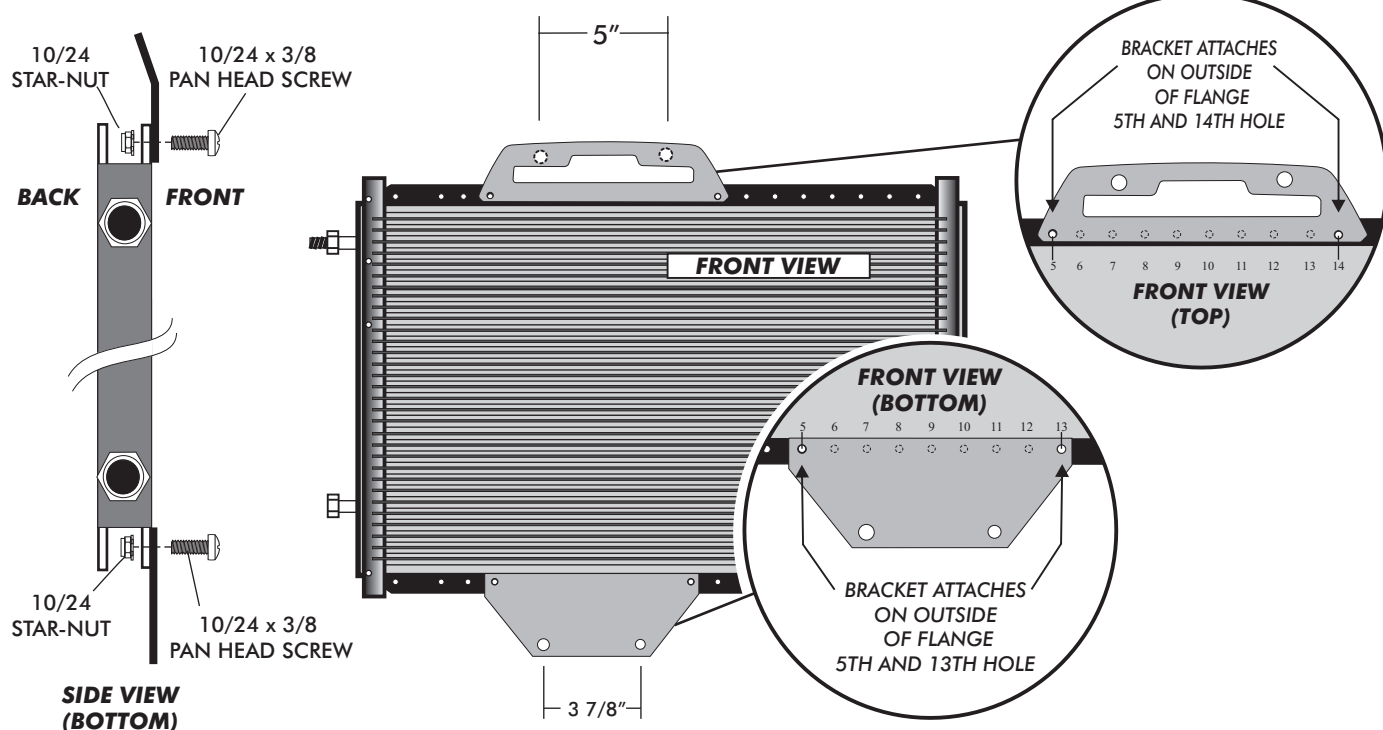


## MOUNTING BRACKET INSTALLATION

- INSTALL TOP MOUNTING BRACKET ON TO CONDENSER USING (2) 10/24 X 3/8 PAN HEAD SCREWS AND (2) 10/24 NUTS WITH STAR WASHERS. SEE FIGURE 1 BELOW.

**NOTE: BRACKET MOUNT THROUGH THE 5TH & 14TH HOLE FROM THE LEFT SIDE OF THE CONDENSER.**

- INSTALL BOTTOM MOUNTING BRACKET ON TO CONDENSER USING (2) 10/24 X 3/8 PAN HEAD SCREWS AND (2) 10/24 NUTS WITH STAR WASHERS. SEE FIGURE 1 BELOW.

**NOTE: BRACKET MOUNT THROUGH THE 5TH & 13TH HOLE FROM THE LEFT SIDE OF THE CONDENSER.**

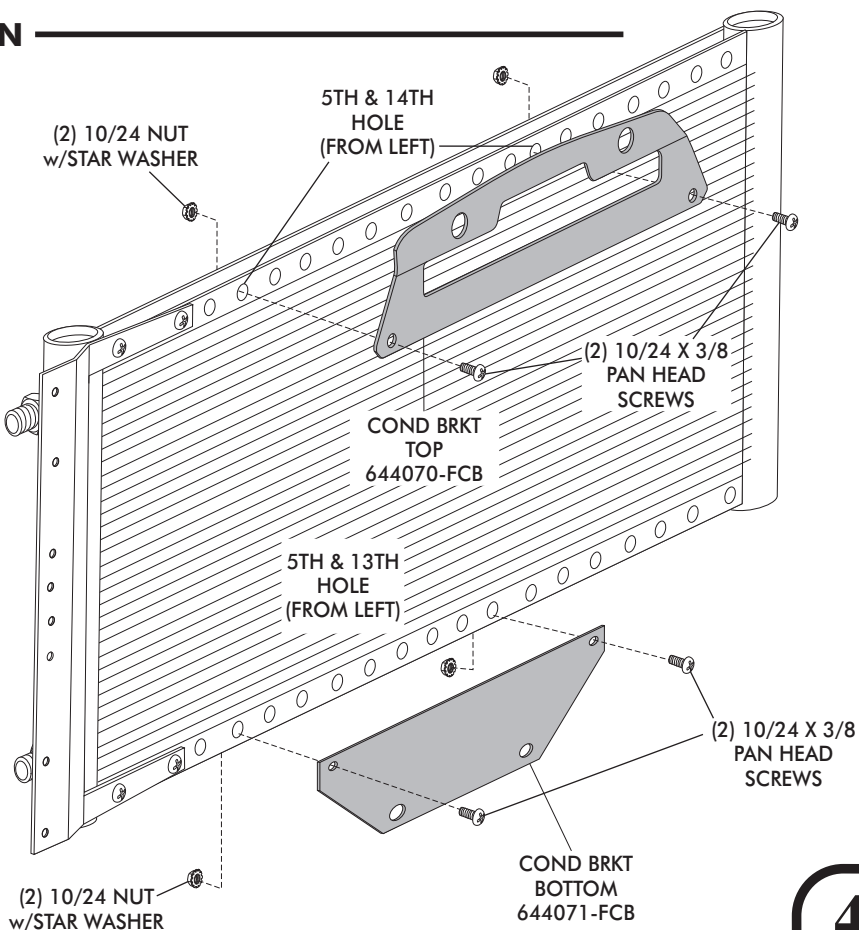


**FIGURE 1**



## 1970-73 CAMARO w & w/o AC CONDENSER w/o DRIER

### HOOD LATCH ASSEMBLY

- ☐ REMOVE OEM HOOD LATCH ASSEMBLY  
SEE FIGURE 2 BELOW.

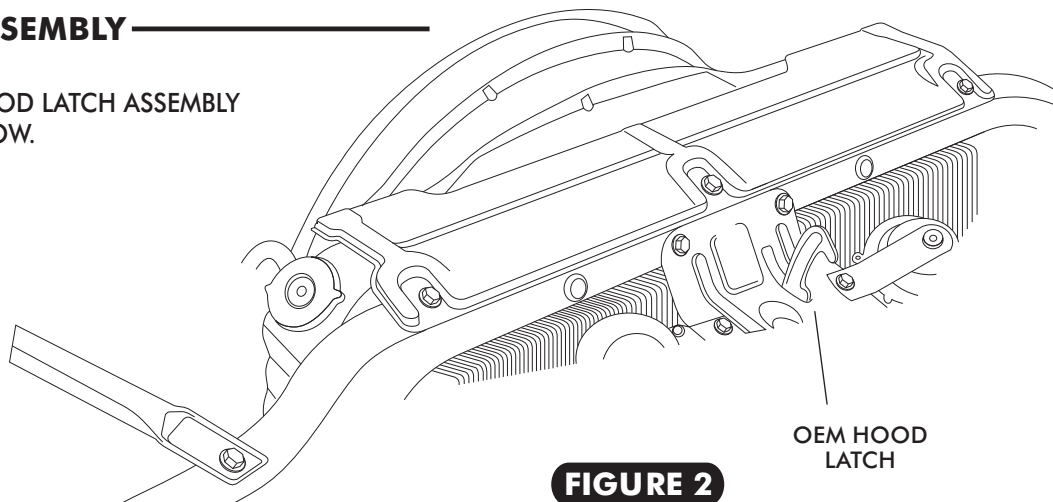


**FIGURE 2**

### RADIATOR REMOVAL

- ☐ DRAIN RADIATOR REMOVE UPPER AND LOWER RADIATOR HOSES.
- ☐ REMOVE RADIATOR.

### CONDENSER INSTALLATION

- ☐ INSTALL CONDENSER AS SHOWN BELOW, LOWER CONDENSER  
BETWEEN THE FRONT SIDE OF THE CORE SUPPORT  
AND THE FRONT HEADER PANEL  
SEE FIGURE 3 BELOW.

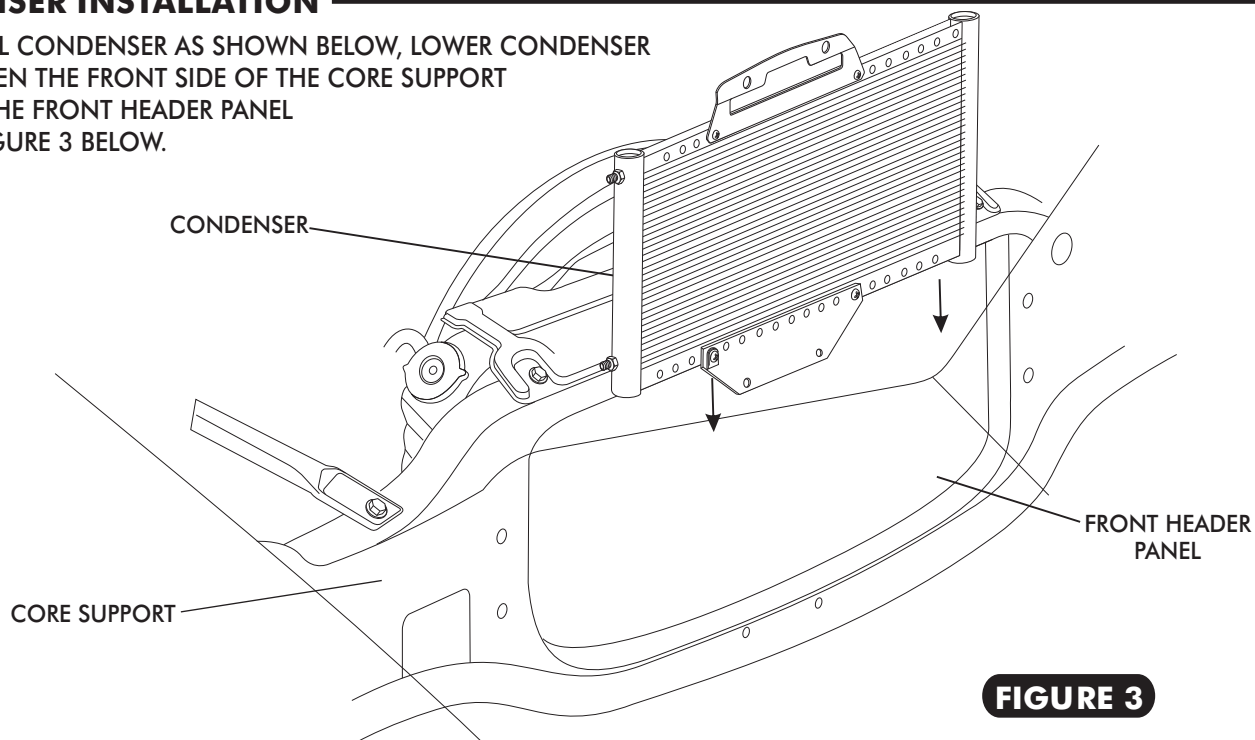

**FIGURE 3**


NOTE: THE TOP MOUNTING BRACKET GOES ON THE FRONT SIDE OF THE CORE SUPPORT.



## 1970-73 CAMARO w & w/o AC CONDENSER w/o DRIER


### CONDENSER INSTALLATION CONT.

- ☐ SECURE THE BOTTOM PASSENGER SIDE OF THE CONDENSER TO THE CORE SUPPORT USING OEM BOLT.
- ☐ USE DRIVER SIDE MOUNTING HOLE AS A GUIDE DRILL  $3/16"$  HOLE ON CORE SUPPORT. SECURE CONDENSER TO CORE SUPPORT USING #14 x  $3/4$  SHEETMETAL SCREW w/ FLAT WASHERS SEE FIGURE 4 BELOW.

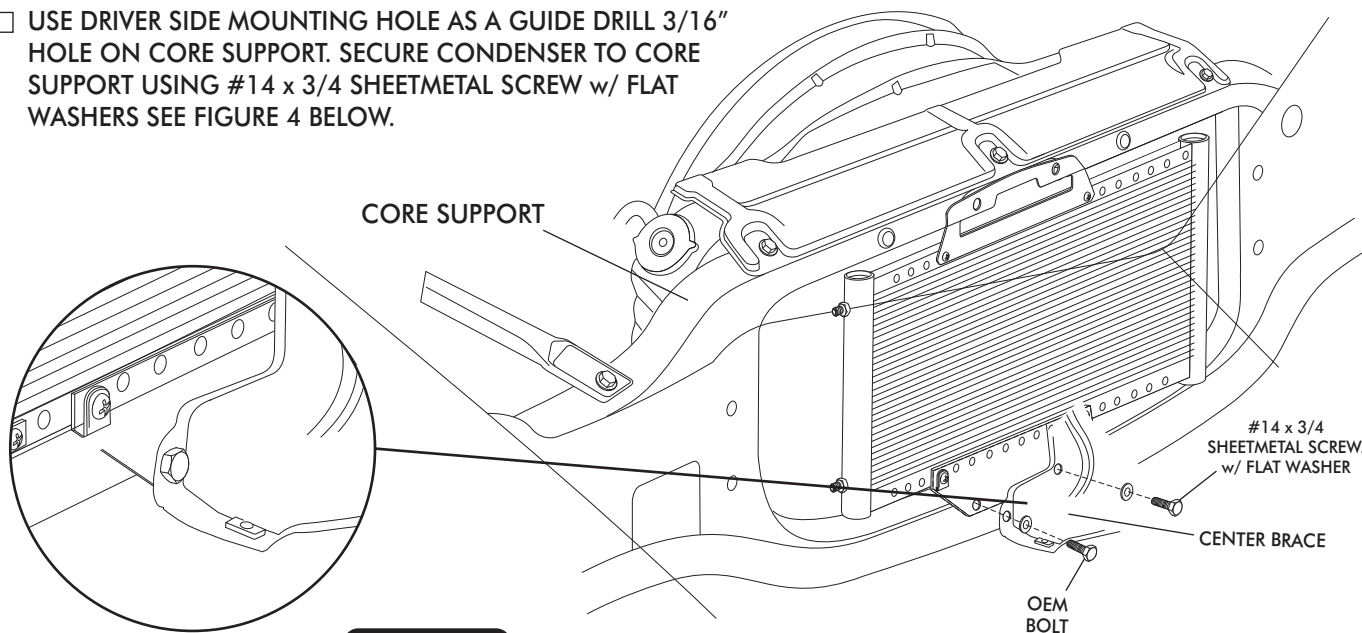

**FIGURE 4**

- ☐ USING OEM BOLTS RE-INSTALL HOOD LATCH ASSEMBLY, INSTALL OEM BOLTS THROUGH THE CONDENSER BRACKET, HOOD LATCH ASSEMBLY AND THROUGH THE CORE SUPPORT. SEE FIGURE 5 BELOW

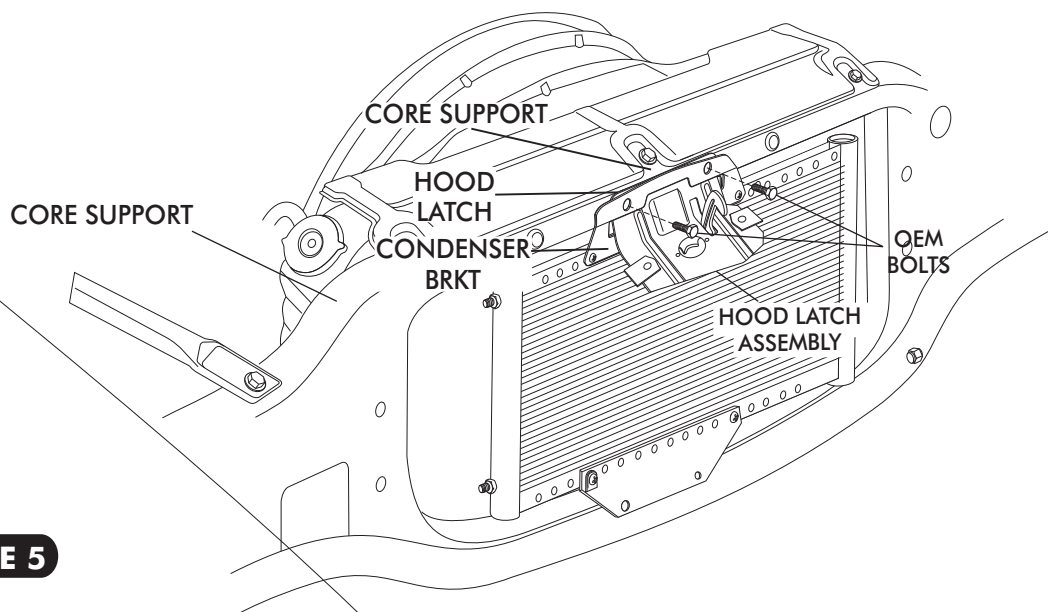

**FIGURE 5**






# 1970-73 CAMARO w & w/o AC CONDENSER w/o DRIER

## 1970-73 CAMARO w & w/o FACTORY AIR w/o DRIER CONDENSER KIT PACKING LIST

**CONDENSER KIT  
027070**

No.	QTY.	PART No.	DESCRIPTION	
1.	1	03766-VUC	14" X 22" PARALLEL FLOW COND.	_____
2.	4	18249-VUB	10/24" X 3/8" PAN HEAD	_____
3.	4	18260-VUB	10/24" NUT w/STAR WASHER	_____
4.	1	18266-VUB	#14 x 3/4 SHEETMETAL SCREW	_____
5.	2	18611-VUB	5/16" FLAT WASHER	_____
6.	1	644070-FCB	1970-73 CAMARO COND. BRKT. TOP	_____
7.	1	644071-FCB	1970-73 CAMARO COND. BRKT. BTM	_____

CHECKED BY: \_\_\_\_\_  
 PACKED BY: \_\_\_\_\_  
 DATE: \_\_\_\_\_

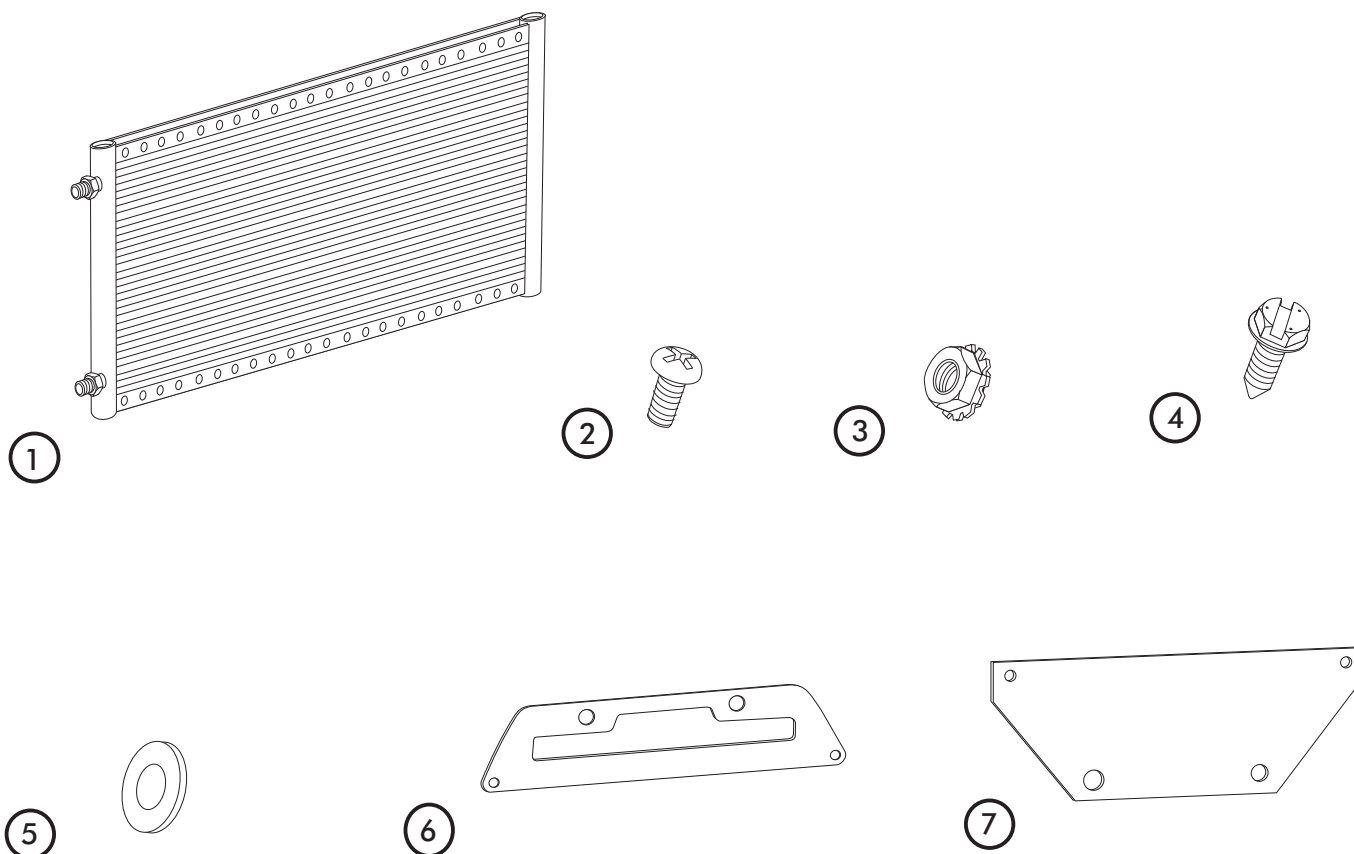

**NOTE: IMAGES MAY NOT DEPICT ACTUAL PARTS AND QUANTITIES.  
 REFER TO PACKING LIST FOR ACTUAL PARTS AND QUANTITIES**