



350 S. St. Charles St. Jasper, In. 47546
Ph. 812.482.2932 Fax 812.634.6632
www.ridetech.com


Part # 11050700
58-64 Chevy Impala Rear Black Series Shock Kit

Components:

2 20000008 Rear shock – Eye/T-Bar

Hardware:

4	99311001	5/16" x 1" USS bolt	Shock to frame
4	99312003	5/16" USS Nylok nut	Shock to frame
8	99313002	5/16" SAE flat washer	Shocks to frame
2	99502002	1/2" SAE Nylok Nut	Shock to lower stud
2	99503001	1/2" SAE flat washer	Shock to lower stud

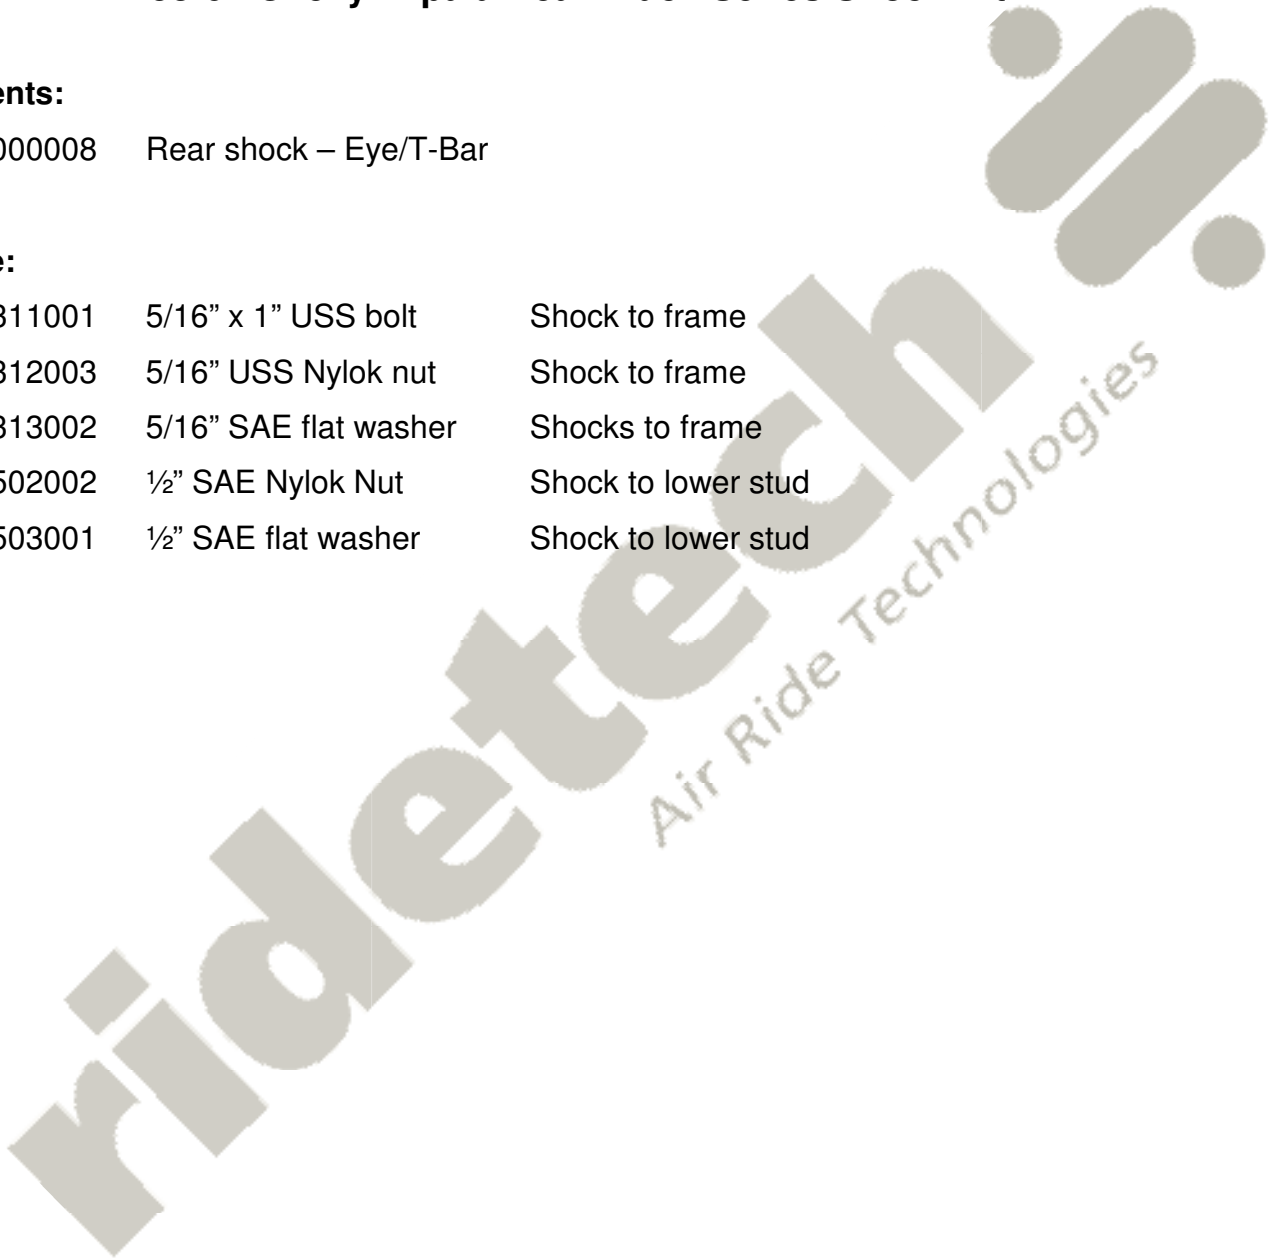

ridetech

Air Ride Technologies

350 S. St. Charles St. Jasper, In. 47546
Ph. 812.482.2932 Fax 812.634.6632
www.ridetech.com



1. Attach shock T-Bar to frame using 5/16" x 1" bolts, Nylok nuts and flat washers.



2. Attach the bottom of the shock to factory shock stud using the 1/2" Nylok nut & flat washer supplied.