



350 S. St. Charles St. Jasper, In. 47546  
Ph. 812.482.2932 Fax 812.634.6632  
[www.ridetech.com](http://www.ridetech.com)

**Part # 11383699**  
**99-06 Silverado Upper Strong Arms**

**Components:**

2	90000630	Upper StrongArm
2	90000902	Ball joint (includes boot, grease fitting, castle nut & cotter pin)
8	70010759	Delrin bushing half
4	90001097	Inner bushing sleeve


# STRONG ARMS™

by Air Ride Technologies



1. After removing the factory upper control arm, clean the bushing mounting surfaces on the frame.
2. Drop ball joint down through upper arm. Install boot and fasten w/ the hardware supplied.
3. Bolt the arm to the frame using the factory camber bolts.

**Note:** The truck must be realigned before driving.

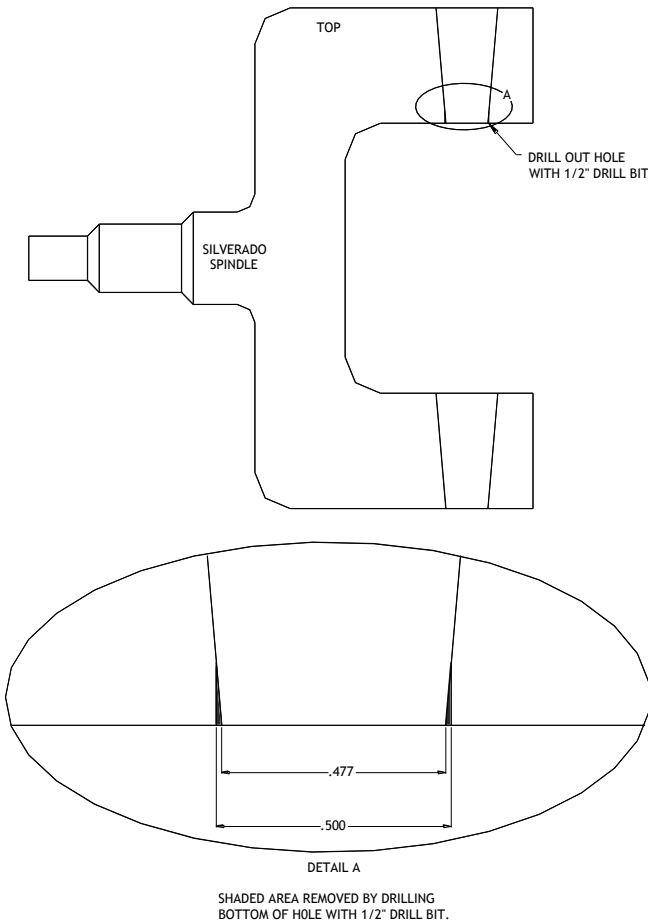

4. Push the stud through the spindle, secure w/ the new castle nut and cotter pin.
5. Secure the brake line and ABS harness to the upper control arm. Allow enough slack for full suspension travel.

# STRONG ARMS™

by Air Ride Technologies

Item #	Description	Qty.
1.	Passenger side arm	1
1.	Driver side arm	1
2.	Ball Joint	2
3.	Delrin bushing half	8
4.	Inner bushing sleeve	4
5.	5/16"-24 x 1" hex bolt	8
6.	5/16"-24 nut	8
7.	5/16" lock washer	8

