



350 S. St. Charles St. Jasper, In. 47546
Ph. 812.482.2932 Fax 812.634.6632
www.ridetech.com

Part # 12060601
61-69 Lincoln Front HQ Series Shock Kit
For Use w/ CoolRide and Lower StrongArms

Shock:


2	22849999	HQ Smooth Body Shock Cartridge
2	70011138	3/4" ID Shock Bushing
2	90002103	5/8" ID Inner Sleeve

Components:

4	70011140	Stem Bushings
4	70011141	Stem Washers
2	90000471	Aluminum shock spacer
2	90001619	Shock stud
1	90000692	Driver side upper shock mount
1	90000693	Passenger side upper shock mount

Hardware:

8	99373007	3/8" x 1" self-tapping bolt	Upper shock mount
2	99372005	3/8"- 24 Nyloc Nut	Upper Shock Stud

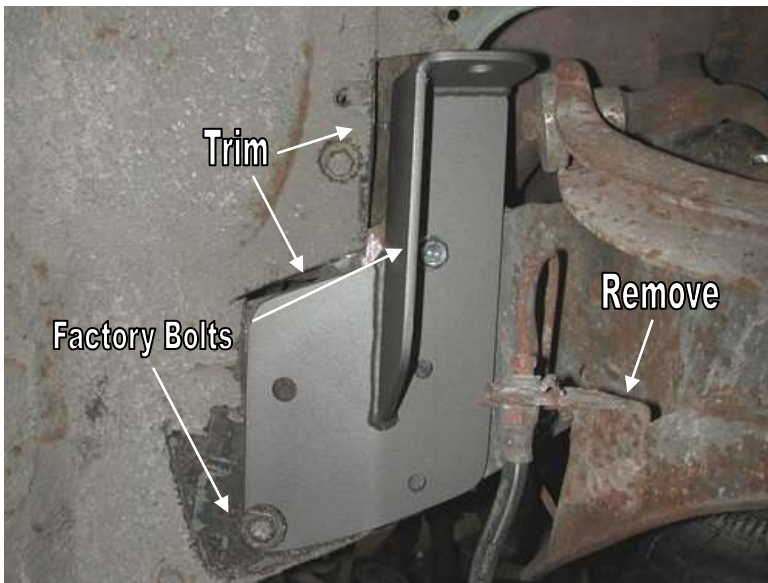

1. Bolt the upper shock mount to the subframe using four 3/8" x 1" self tapping bolts. The bracket will locate off of the factory bolt shown in the picture. Drill the holes with a 5/16" bit.

2. The inner fender well must be trimmed to allow clearance for the shock mount. **Be careful not to cut anything inside engine bay.**

3. Remove the factory brake line bracket.
This picture is of the passenger side.



4. Bolt the top of the shock to the upper mount using the bushings and hardware supplied.

5. Install the round head shock bolt through the lower shock eye. Then install the aluminum spacer with the step facing the arm. Slide the bolt through the arm and fasten with the nut supplied.

This picture is of the driver side.



6. Install the new brake line bracket with using the factory bolts and clip.