




**Installation  
Instructions**



**Part # 12109120 - 1967-1970 Mustang Front SwayBar**



**Recommended Tools**

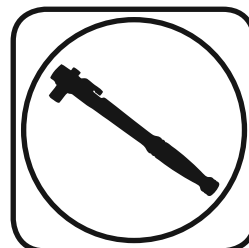

## **1967-1970 Mustang Front SwayBar Installation Instructions**

### **Table of contents**

Page 2..... Included components and Hardware List  
Page 3..... SwayBar Installation  
Page 4..... SwayBar Installation

**www.ridetech.com  
812-482-2932**





### Major Components .....In the box

Part #	Description	QTY	
90002611	Front SwayBar	1	
90002612	End Link Kit	1	
70012402	Delrin Sway Bar Bushing Liner	2	
90002572	Bushing Strap	2	
90002539	SwayBar Bushing	2	
Part #	Description	Usage	QTY
99372001	3/8"-16 Nylok Nut	Bushing Strap to Adapter	4

### Getting Started.....

**Install all Front StreetGrip Components before installing the SwayBar.**

Remove the OEM Swaybar to prepare for the StreetGrip SwayBar installation.

This SwayBar kit utilizes a Delrin Liner in the SwayBar Bushing. The Delrin Liner allows the Swaybar to move freely and quietly in the Bushing. The Delrin is self-lubricating, no lubrication is required.



**1.** The Delrin Liner is split on one side to ease installation. We found it easier to install by, opening up the Liner enough to slide it onto the end of the SwayBar, then sliding it into position. It will open up and slide over the curves in the Bar. Install a Liner on each side of the SwayBar in the approximate location they will need to be when installing the SwayBar on the Car.

**Note:** The Delrin is self-lubricating, no lubricant is needed.

**[www.ridetech.com](http://www.ridetech.com)  
812-482-2932**



### SwayBar Installation

2.




2. Open up the Poly SwayBar Bushings and install them over the Delrin Sleeves.

3.



3. Install Bushing Straps Over the Poly Sway-Bar Bushings.

4.

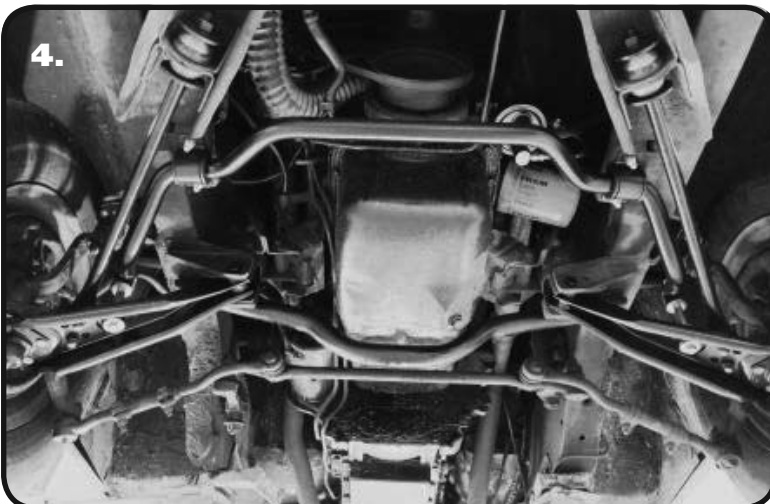


4. Slide the SwayBar into position on the Car. The SwayBar Arms will be above the Control Arms. Slide the Front Hole of the SwayBar Bushing onto the 3/8"-16 Stud. Hold it in place with a 3/8" SAE Flatwasher and 3/8"-16 Nylok Nut. Install the Correct Lockwasher and Flatwasher on the Correct Hex Bolt. Do **NOT** Completely tighten the Hardware. It will be left partially loose until the End Links are installed.



### SwayBar Installation

5.

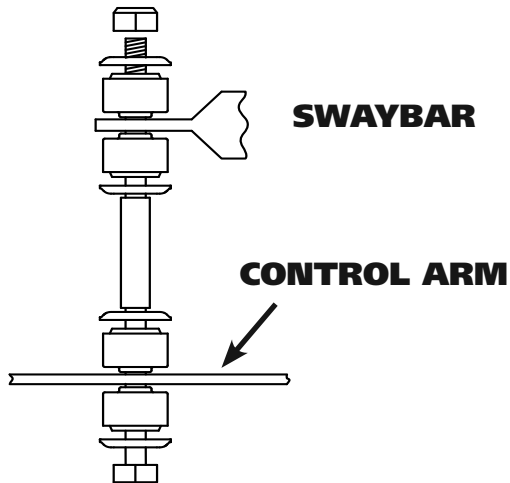

5. Install the End Links. Use **(Figure 5)** for proper installation. Tighten the Hex Nut enough to slightly compress the Bushings.

6. Tighten the Sway Bar Mounting Hardware.