




350 S. St. Charles St. Jasper, In. 47546  
Ph. 812.482.2932 Fax 812.634.6632

[www.ridetech.com](http://www.ridetech.com)

**Part # 13013699**  
**Chrysler B & E Body Front Upper StrongArms**

**Upper StongArms**

1	90000602	Driver side upper arm
1	90000603	Passenger side upper arm
4	90000918	Bushings ( <b>Pressed into arms</b> )
2	90000895	Ball joint

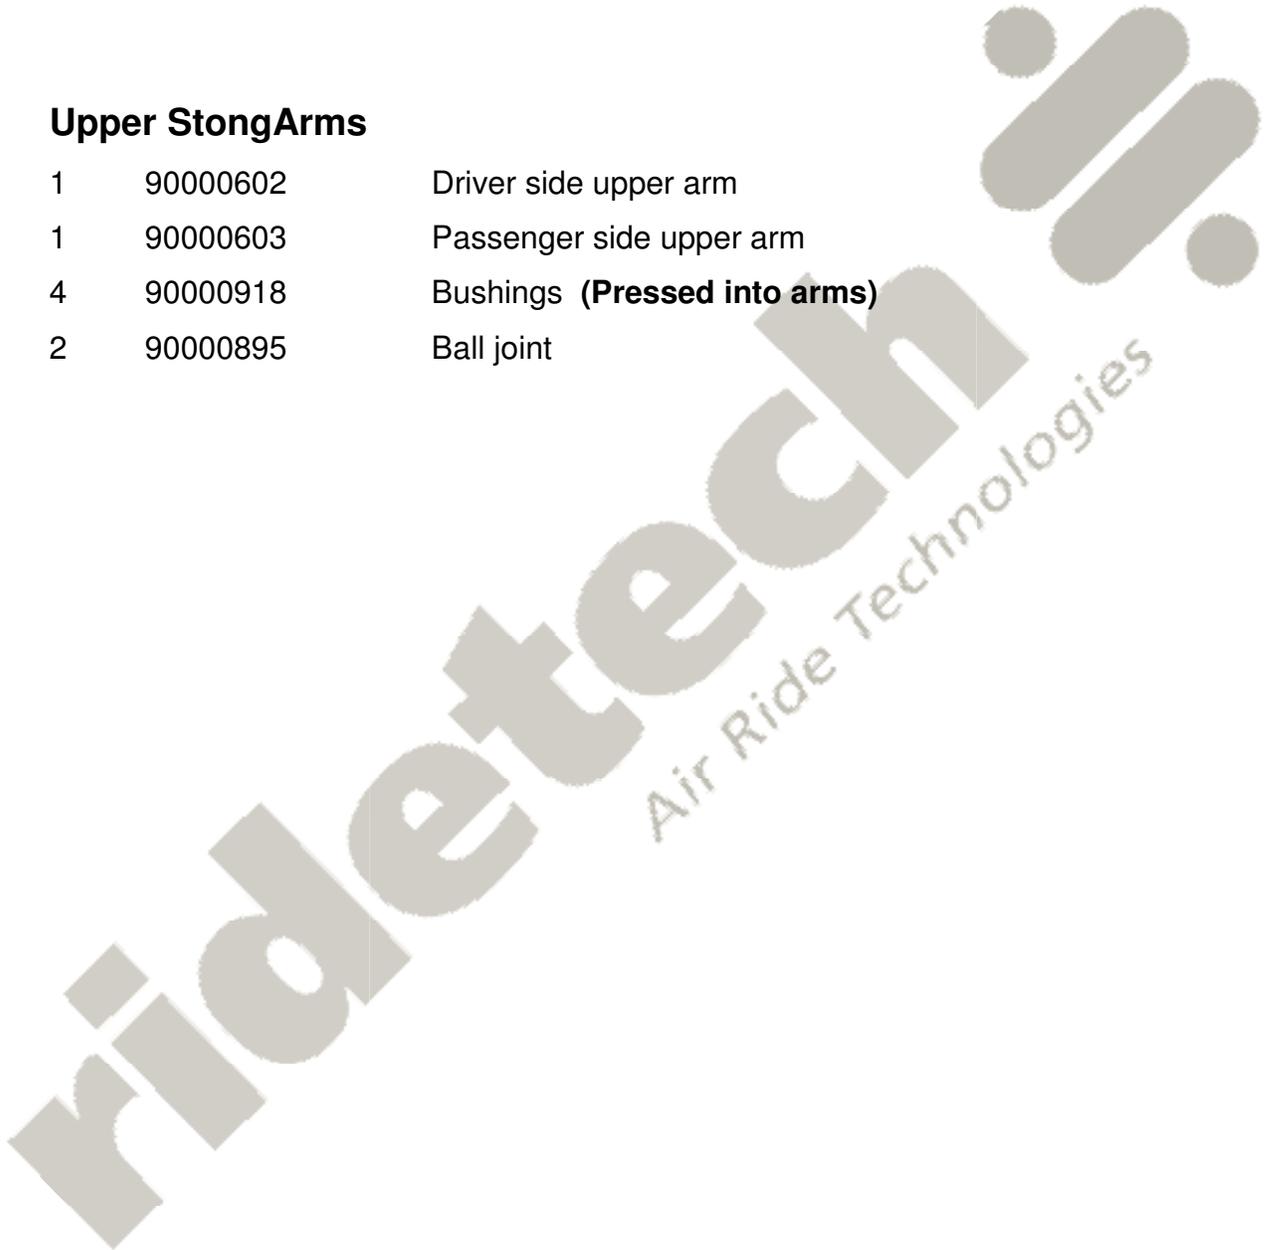



1. Remove factory upper arm.
2. Bolt StrongArm to frame using factory bolts. (Do not tighten yet.)
3. Slide ball joint boot over ball joint stud. Push stud through spindle. Secure w/ the castle nut and cotter pin supplied. The supplied spacer may be need to achieve proper castle nut to cotter pin hole alignment.
4. Install grease fitting and lubricate ball joint.
5. Position the suspension at ride height (about mid travel) and tighten upper arm bolt.
6. Vehicle may need to be realigned before driving.

