


CONTENTS

- (2) front Stepshields
- (2) crew cab Stepshields
- (4) alcohol pads
- (1) instruction sheet

IMPORTANT: Read all instructions carefully before beginning installation. A trial fit is recommended. The ideal installation temperature is between 65°-110° F.



STEP: Front Stepshield Installation

Open the front door. Clean the door sill of the vehicle, where the front Stepshield will mount, with an alcohol pad. Then wipe dry with a clean cloth. See **FIGURE 1**

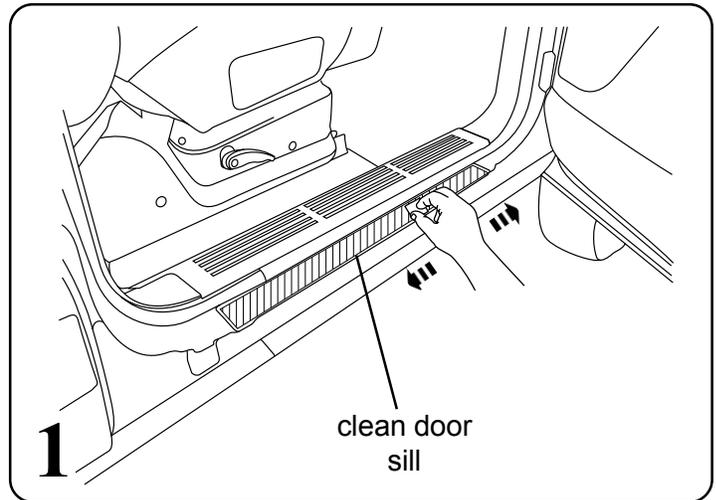

STEP 2

To reduce the risk of tape contamination due to improper positioning, expose only 2" of tape from each end of the front Stepshield by peeling back liner. Be sure the tape liner can be easily accessed later. See **FIGURE 2**

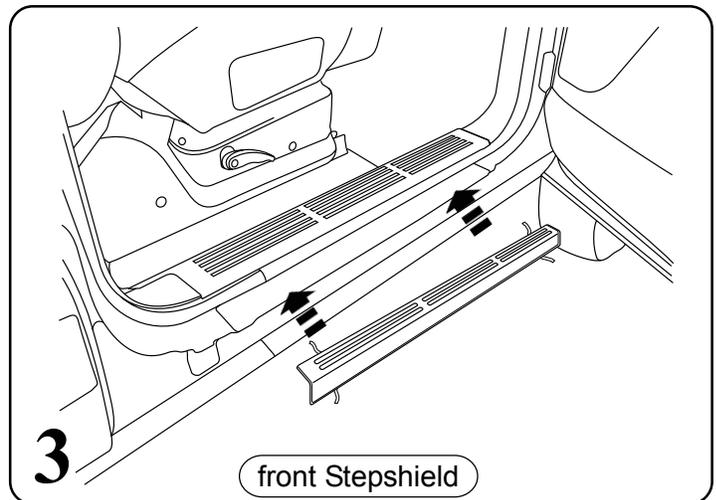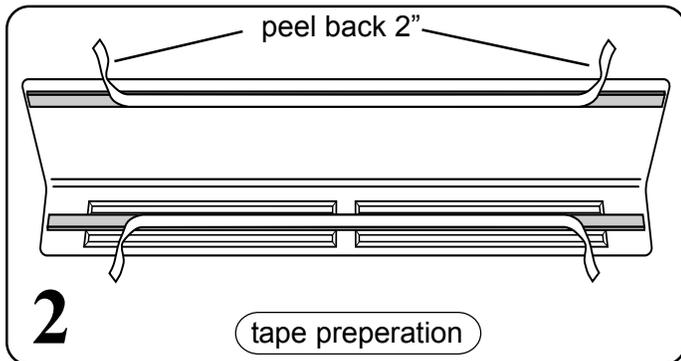

STEP 3

Be sure the orientation is correct before installing, since the Stepshield tapers from rear to front. Align the front Stepshield with the previously cleaned door sill. Gently press the exposed areas of the tape against the door sill and verify position. See **FIGURE 3**

STEP 4

With the front Stepshield in its final position, remove the remainder of the liner by pulling on the free ends. Press firmly along the surface of the Stepshield to ensure proper adhesion of the tape to the door sill.

STEP 5: Crew Cab Stepshield Installation

The crew cab Stepshields install utilizing the same preparation procedure as above. See **FIGURE 4**

Repeat the above installation procedure for opposite side Stepshields.

