

Installation Instructions

I - Sheet Number I-B112201 Rev.A



Premium Style. Lasting Performance.

For proper installation and best possible fit, please read all instructions BEFORE you begin.
For technical assistance or to obtain missing parts, please call Customer Relations at 1-800-241-7219.

Para una instalación adecuada y el mejor ajuste posible, lea todas las instrucciones ANTES de comenzar.
Para obtener asistencia técnica o para obtener piezas que faltan, por favor llame a Relaciones con el cliente en 1-800-241-7219.

Pour une installation correcte et le meilleur ajustement possible, s'il vous plaît lire toutes les instructions AVANT de commencer.
Pour une assistance technique ou pour obtenir des pièces manquantes, s'il vous plaît communiquer avec les Relations à la clientèle au 1-800-241-7219.

Care and Cleaning

- **Wash only with mild soap & dry with a clean cloth.**
Lavar con jabón suave y seque con un paño limpio.
Laver avec un savon doux et séchez avec un chiffon propre.
- **Every 3 months or 5000 miles check the cover tension and all components for tightness.**
Revise cada 3 meses o 5,000 millas la tensión de la cubierta y todos los componentes estén ajustados.
Vérifiez tous les 3 mois ou 5000 miles la tension couvercle et le serrage des composants.

Congratulations!

You have purchased one of the many quality Lund® branded products offered by Lund International, Inc. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.

Usted ha comprado uno de los muchos productos de calidad ofrecidos por Lund® de marca productos ofrecidos por Lund International, Inc. Tomamos el orgullo extremo en nuestros productos y queremos que disfrute durante años de su inversión. Hemos hecho todos los lo posible para que su producto es de calidad superior en cuanto a ajuste, durabilidad, acabado y facilidad de la instalación.

Vous avez acheté un des nombreux produits de qualité offerts par Lund® marque produits offerts par Lund International, Inc Nous sommes extrêmement fiers de nos produits et souhaitons que vous tiriez des années de satisfaction de votre investissement. Nous avons pris toutes les efforts pour s'assurer que votre produit est de qualité supérieure en termes de durabilité, de finition et la facilité de l'installation.


Installation Instructions

Part # 22662122/ 23062122

PARTS LIST:

1	Driver/Left Sidebar	12	12-1.75mm x 25mm Hex Head Bolts
1	Passenger/Right Sidebar	12	12mm Lock Washers
3	Driver/Left Side Mounting Bracket	12	12mm Hex Nuts
3	Passenger/Right Side Mounting Bracket	24	12mm ID x 37mm OD x 3mm Flat Washers
3	Driver/Left Sidebar Bracket	12	8-1.25mm x 25mm Hex Head Bolts
3	Passenger/Right Sidebar Bracket	12	8mm Lock Washers
		24	8mm ID x 22mm OD x 2mm Flat Washers
		12	8mm Nylock Nuts

Driver Side Mounting Bracket 3 pcs

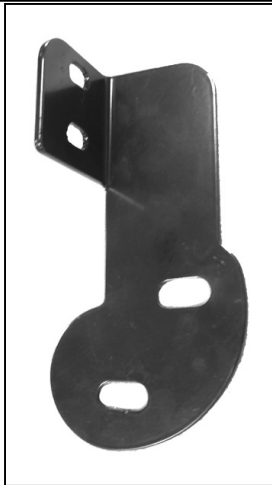

Passenger Side Mounting Bracket 3 pcs



Driver Sidebar Bracket – 3 pcs



Passenger Sidebar Bracket – 3 pcs



PROCEDURE:

- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.**
- From underneath of vehicle, locate the six factory threaded studs on the side panel of the vehicle. Partially attach all three passenger side panel Mounting Brackets to the factory threaded studs using the included (6) 8mm Flat Washers and (6) 8mm Nylock Nuts as shown in figure below. **NOTE:** Mounting tabs on the brackets should be facing the rear of the vehicle.
- Proceed to attach all three Sidebar Brackets to the back side of Side Panel Brackets, so that the cradles on the Sidebar Brackets are facing the rear of the vehicle. Use the included (6) 12mm x 25mm Hex Head Bolts, (6) 12mm Nylock Nuts, and (12) 12mm Flat Washers to attach them together as shown in figure below. Do not tighten at this time.
- Once all three Sidebar Mounting Brackets are partially installed, place passenger Sidebar onto Mounting Brackets. Secure Sidebar to Mounting Brackets using the included (6) 8mmx 25mm Hex Head Bolts, (6) 8mm Lock Washers, and (6) 8mm Flat Washers.
- Level and adjust Sidebar; then tighten all hardware at this time.
- Repeat steps 3-6 for driver Sidebar.
- Do periodic inspections to the installation to make sure that all hardware is secure and tight.

