


(911-03301)

A-18200-B


(911-03301)

**Glass Pattern & Installation Instructions
1930/35 Open Car Wind Wing Bracket Set**

**VINTAGE
INC.**

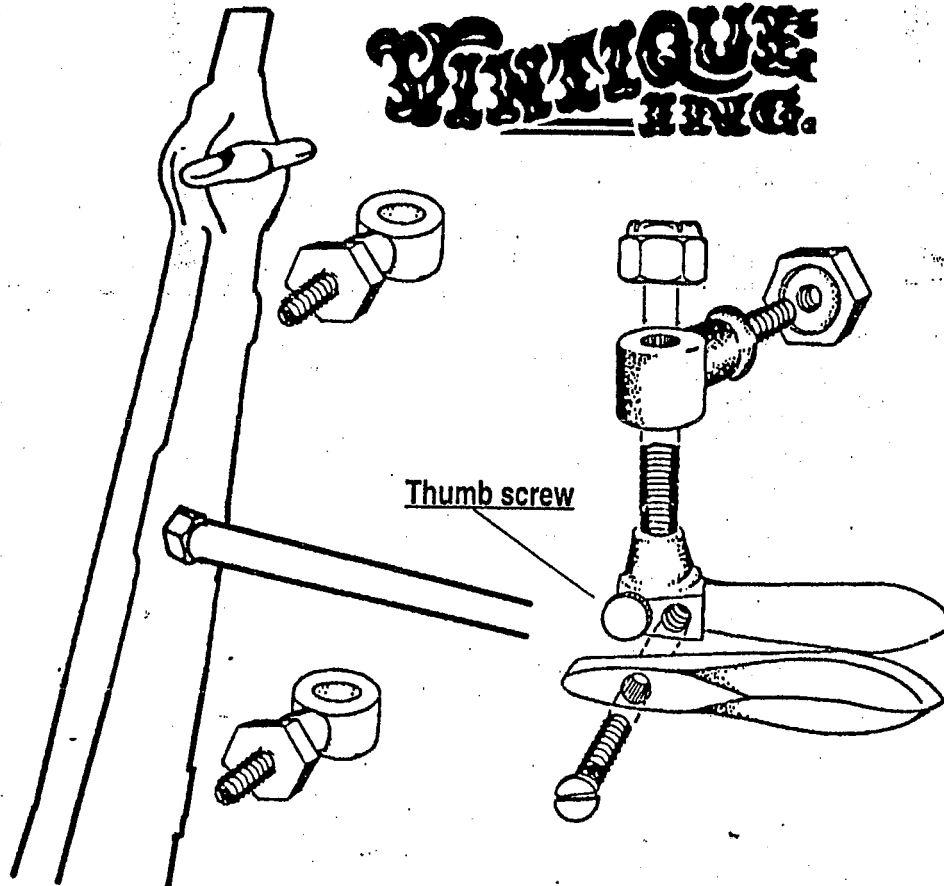

INSTALLATION INSTRUCTIONS

- 1) Most 1930/35 Ford applications will have existing 5/16-24 threaded holes in the windshield posts. If your application does not have existing threaded holes, drill your posts with a 17/64 drill bit and thread with a 5/16-24 tap.
- 2) Cut a template from 1/4" material (cardboard, plywood, fiberboard) the size and shape that you desire. The template on this page is a good place to start for the general shape.
- 3) Cut the glass setting tape (included) to the shape of the bracket with scissors. 8 pieces are needed. 
- 4) Install your glass template for a test fit. Use this template to have your glass cut.
- 5) Install the glass, making sure that brackets clamp the glass evenly. The small thumb screw adjusts the angle of the clamp.