


INSTALLING KNS ACCESSORIES **HOOD PROP KIT (KA7300B,KA7300C,KA7300SS)**

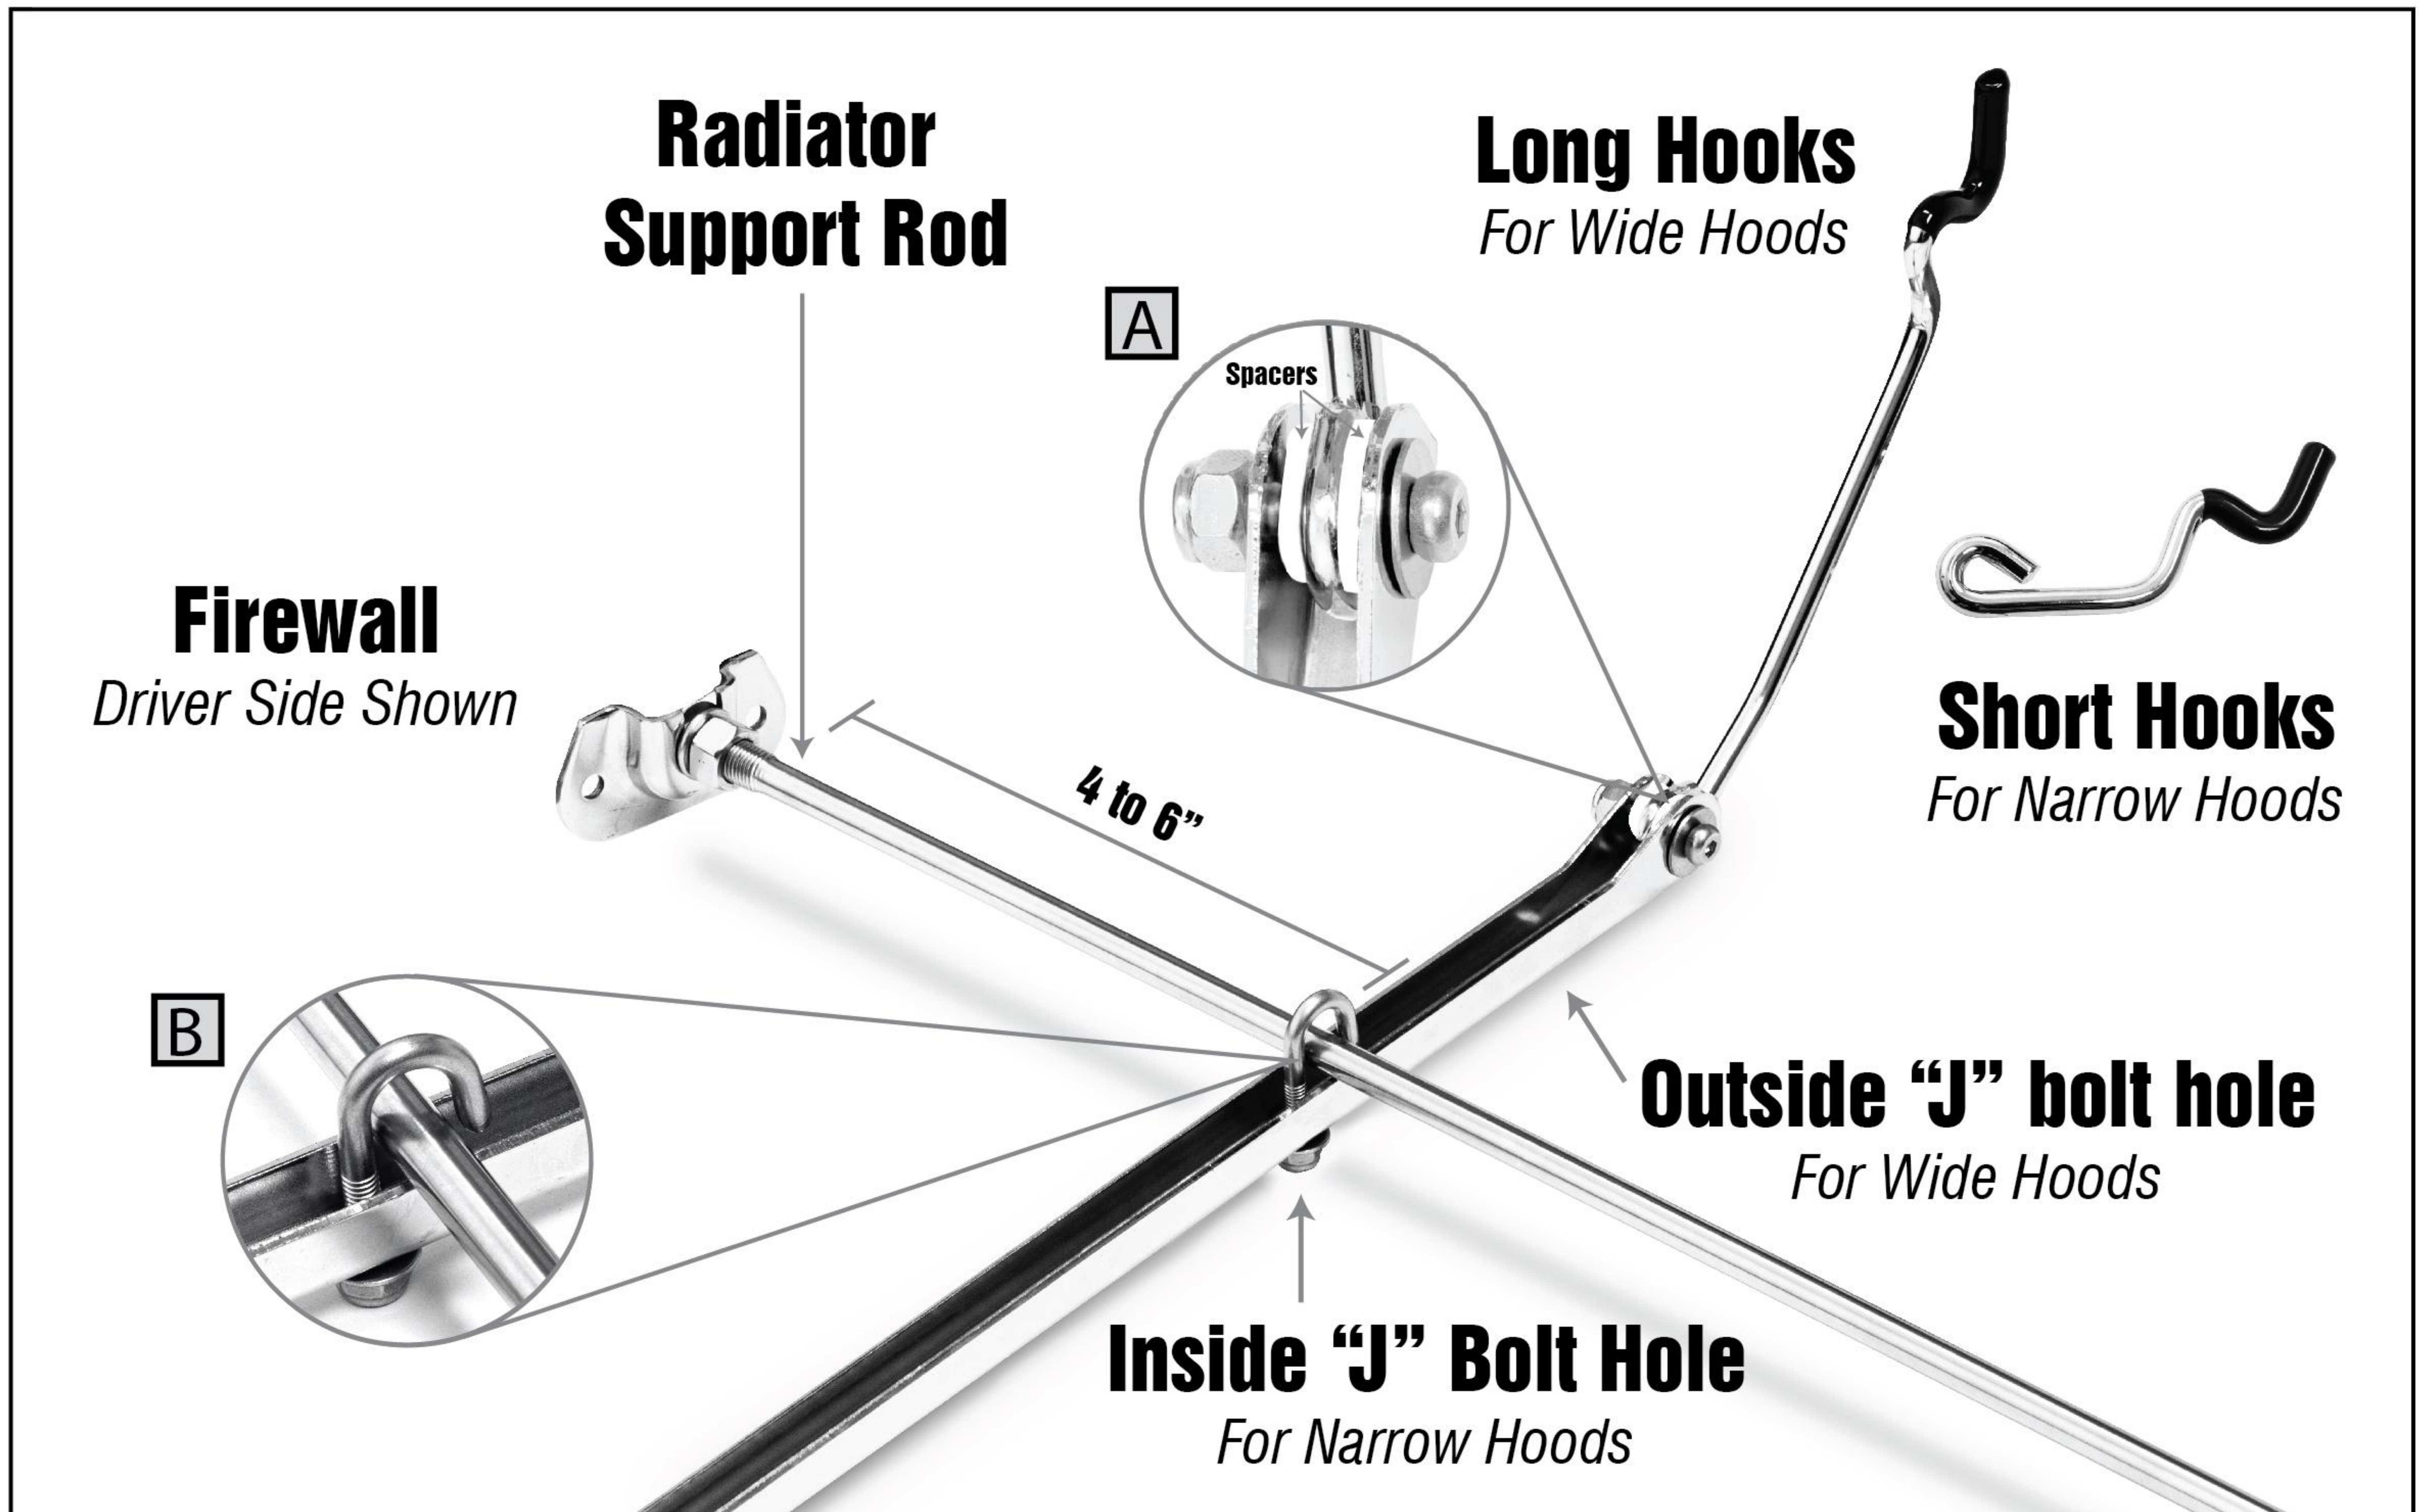

1. Place hook inside the hood prop channel. Install spacers on each side of the hook.
Place the screw through the middle and tighten using the washers and nut included. **(See Diagram A)**
2. Mount hood prop channel below the radiator support rod approx. 4 to 6 inches from the firewall.
On smaller cars (28 thru 32) use the inside "J" bolt holes with the "J" bolt facing the outside. **(See Diagram B)**
On larger cars (33 thru 34) use the outside "J" bolt holes with the "J" bolt facing the inside.

NOTE:

Always fold the hood prop before closing the hood.