


Part # TABB5026

1965-70 Chevrolet Impala Coupe
Full Insulation and Sound Dampening Kit

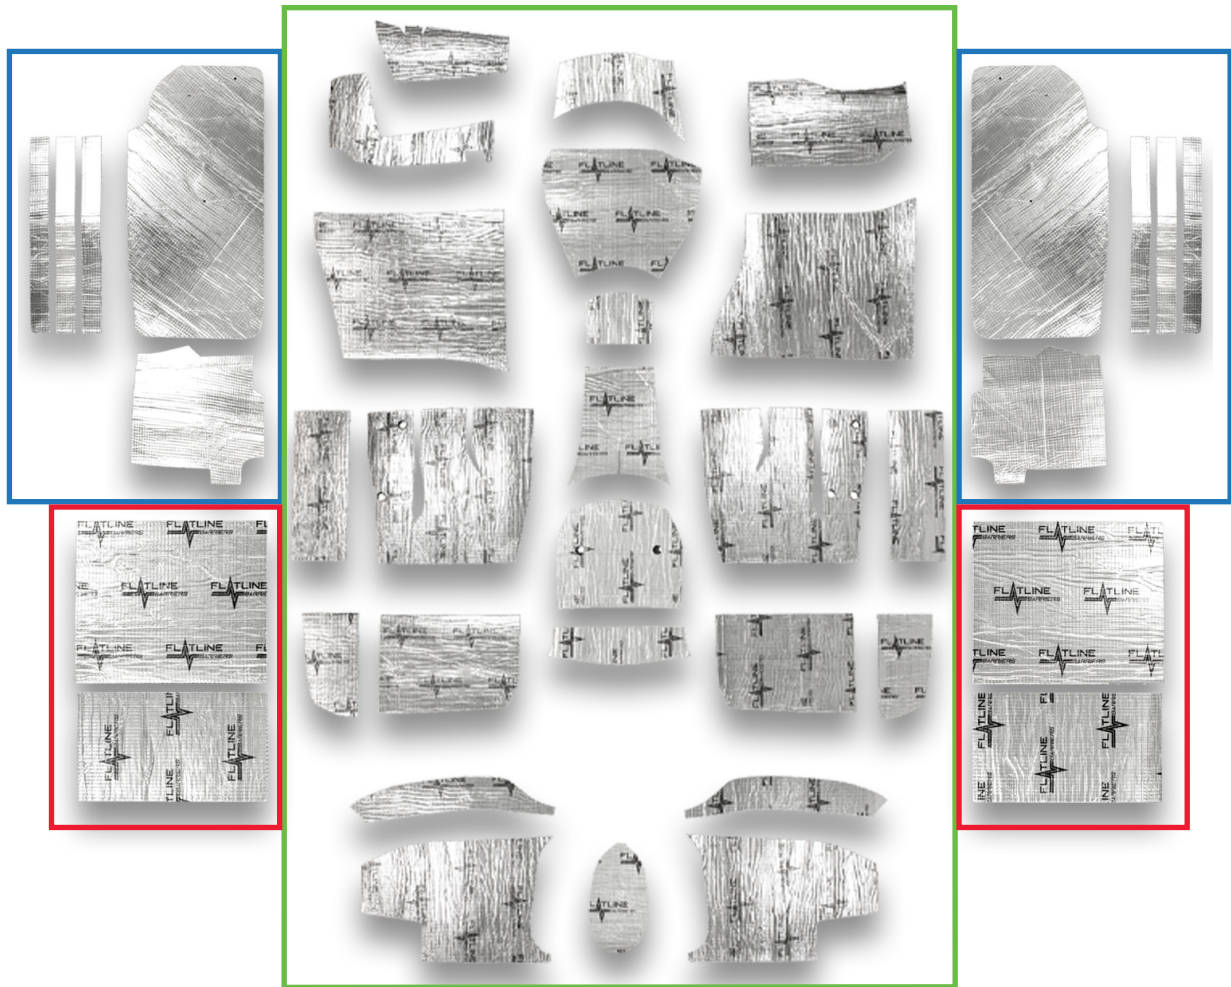

TABB5024 - 1965-70 Chevrolet Impala Door / Inner Quarter Panel Insulation and Sound Dampening Kit

TABB5028 - 1965-70 Chevrolet Impala Roof Insulation and Sound Dampening Kit

TABB5023 - 1965-70 Chevrolet Impala Floor Insulation and Sound Dampening Kit

Installation Directions:

1. Clean any dirt, debris, or grime from the intended installation area using a degreasing agent.
2. Allow intended installation area adequate time to dry.
3. Remove the kit from its packaging, and dry fit the components allowing you to see exactly how the product will be placed for final installation.
4. Now you are ready to install. Remove the protective layer exposing the adhesive on your first piece applying it to its final position, using light pressure.
5. Repeat step 4 for each individual component until the full kit is installed.