

INSTRUCTIONS

910-65053



3 3/8" Tachometer, Electric Installation Instructions

SAFETY PRECAUTION

1. Install the meter only when engine is cool and ignition is off
2. This meter is designed for 12 VDC vehicles with a negative ground, Instrument comes with a replaceable 12V - 3.4 Watt bulb
3. Disconnect negative (-) battery cable before installing the meter
4. As a safety precaution, we recommend using a 4 amp in-line fuse between the 12 ignition switch power supply source and the red positive (+) cable of the meter


CALIBRATION

This tachometer is factory calibrated to operate on 4 cylinder engines, for 6 or 8 cylinder engines, it's necessary to make the proper adjustment to adapt this tachometer to your cylinder number

Locate the switch hole at the back of the meter, insert a screwdriver into the hole to move the stem of the switch built inside to the middle for 6 cylinders or to the right for 8 cylinders


MOUNTING

1. Mount the meter in a 3³/₈ dia. hole
2. Secure the tachometer to the dashboard using provided bracket and hardware as shown

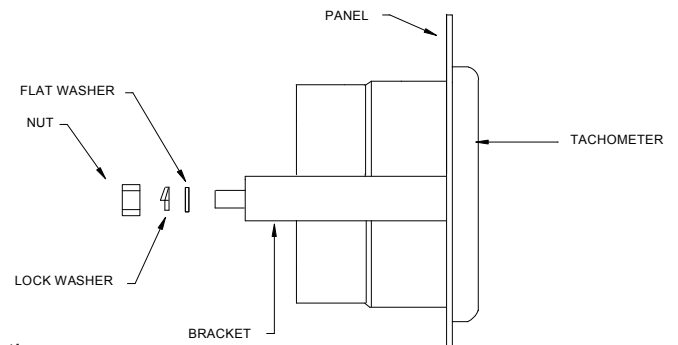

WIRING

1. Connect the cables as shown below
2. Make sure you have a good ground to engine and battery negative terminal
3. Reconnect negative (-) battery cable

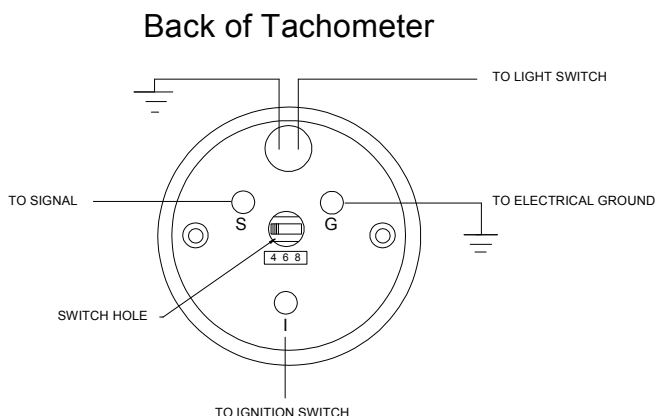

Speedway Motors Inc.,
P. O. Box 81906 Lincoln, NE 68501
402-323-3200 www.SpeedwayMotors.com

