

MSD[®] IGNITION

INSTALLATION INSTRUCTIONS

MSD HEAT Digital HEI Module PN 83647

This Module is a performance replacement for GM's 4-Pin HEI Module. It features a programmable rev limiter for overrev protection. The Module will mount in a stock HEI housing (by removing the original condenser assembly) or in MSD's Pro-Billet HEI Distributor, PN 8365. A GM Coil can be used or for maximum performance, use MSD's HEI Coil, PN 8225.

Parts Included:

1 - HEI Module, PN 83647

1 - Tube of Heat Sink Compound

1 - Green Tach Wire

2 - Mounting Screws and Star Washers

1 - Low Resistance Rotor Bushing, PN 8412

Note: A tachometer is required to program the rev limit.

INSTALLATION

1. Mark the location of the spark plug wires on the cap prior to removal.
2. Remove the cap, rotor, module and condenser (if equipped) from the original distributor.
3. Apply a liberal coat of the Heat Sink Compound to the aluminum base of the Module.
4. Route the wiring harness out of the housing and position the short Black wire to ground with one of the mounting screws (Figure 1).
5. Position the module in the distributor then locate the two screws and star washers to secure the module (Figure 1).
6. Reinstall the rotor and cap.
7. Connect the HEI Module harness to the Distributor Cap followed by the 12 volt (BAT) wire. This wire should be at least 14-gauge (Figure 2).
8. Connect the long black wire to the engine block for a solid ground.
9. See the next page for tachometer and rev limit programming.
10. It is recommended to install the supplied low resistance rotor bushing. This improves the spark transfer from the coil to the rotor tip. Remove the coil cover and coil. Replace the rotor bushing and isolator.

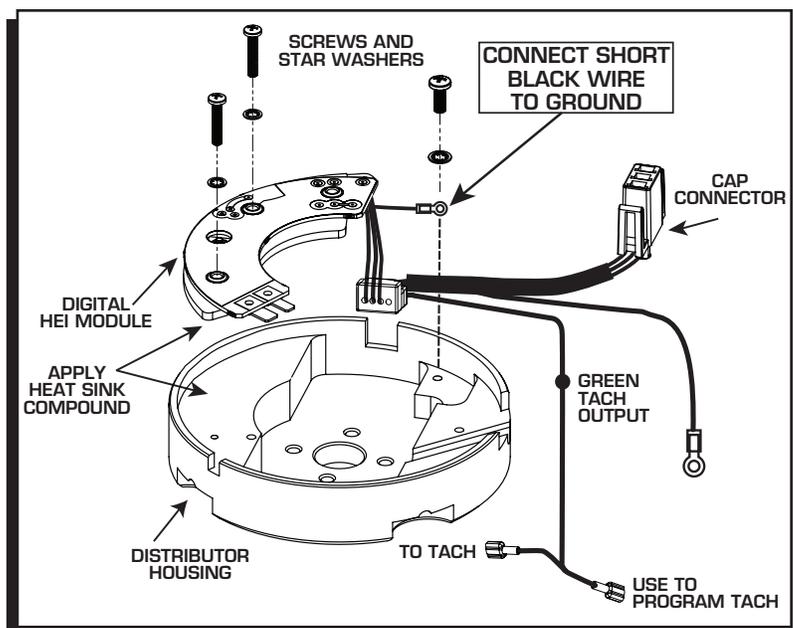


Figure 1 Installing the Module.

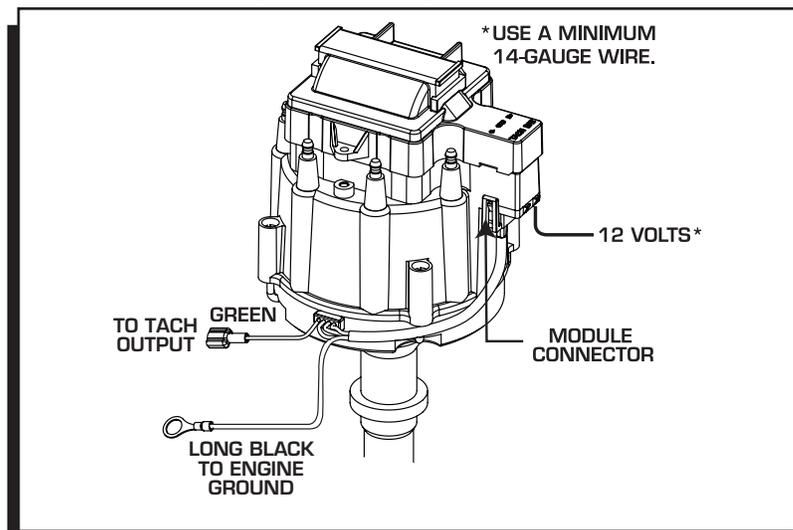


Figure 2 Connecting the Module and Tach Lead.

MSD IGNITION INSTALLATION INSTRUCTIONS

TACHOMETER INFORMATION

The HEAT Digital HEI Module has a Green wire that provides a 12 volt square wave, 20° tachometer signal that will trigger most tachometers. It is recommended to connect this lead to your tach's trigger input wire and check its operation. If the tach requires a higher voltage signal, connect its input wire to the Tach terminal on the HEI Cap (Coil-/Tach). Note that the rpm limiter is extremely accurate and due to the variety of tachometers available, there may be differences in the displayed rpm.

PROGRAMMING THE REV LIMIT

A tachometer is required to set the rev limit. The limit is programmed by running the engine at half the desired rpm, then momentarily grounding the Green tach output wire from the MSD. A Green jumper wire is supplied to connect to the tach with another tee-splice coming off to use for programming. A switch may also be installed to ease adjustments of the limiter (Figure 3). The default rpm limit is 10,000 rpm.

1. Start the engine and bring the rpm to half the desired rev limit (for a 6,000 rpm limit, raise the rpm to 3,000).
2. While holding the rpm steady, short the Green tach wire to ground for approximately one second. Note that the tach will go to zero while grounded.
3. The tach will now display the programmed rev limit amount for two seconds. If this value does not register on the tach, repeat the procedure and try a different ground source.
4. To confirm the rev limit value, turn the ignition key to the On position (without cranking the engine). The rev limit value will be displayed for two seconds on the tachometer.

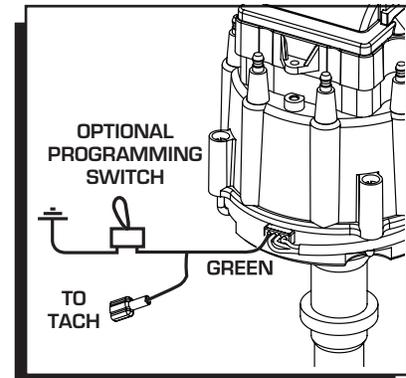


Figure 3

Note: This rpm confirmation only displays when the HEI Green wire is being used to trigger the tachometer.

Service

In case of malfunction, this MSD component will be repaired free of charge according to the terms of the warranty. When returning MSD components for warranty service, **Proof of Purchase** must be supplied for verification. After the warranty period has expired, repair service is based on a minimum and maximum fee.

All returns must have a Return Material Authorization (RMA) number issued to them before being returned. To obtain an RMA number please contact MSD Customer Service at 1 (888) MSD-7859 or visit our website at www.msdisignition.com/rma to automatically obtain a number and shipping information.

When returning the unit for repair, leave all wires at the length in which you have them installed. Be sure to include a detailed account of any problems experienced, and what components and accessories are installed on the vehicle. The repaired unit will be returned as soon as possible using Ground shipping methods (ground shipping is covered by warranty). For more information, call MSD Ignition at (915) 855-7123. MSD technicians are available from 7:00 a.m. to 6:00 p.m. Monday - Friday (mountain time).

Limited Warranty

MSD IGNITION warrants this product to be free from defects in material and workmanship under its intended normal use*, when properly installed and purchased from an authorized MSD dealer, for a period of one year from the date of the original purchase. This warranty is void for any products purchased through auction websites. If found to be defective as mentioned above, it will be repaired or replaced at the option of MSD Ignition. Any item that is covered under this warranty will be returned free of charge using Ground shipping methods.

This shall constitute the sole remedy of the purchaser and the sole liability of MSD Ignition. To the extent permitted by law, the foregoing is exclusive and in lieu of all other warranties or representation whether expressed or implied, including any implied warranty of merchantability or fitness. In no event shall MSD Ignition or its suppliers be liable for special or consequential damages.

*Intended normal use means that this item is being used as was originally intended and for the original application as sold by MSD Ignition. Any modifications to this item or if it is used on an application other than what MSD Ignition markets the product, the warranty will be void. It is the sole responsibility of the customer to determine that this item will work for the application they are intending. MSD Ignition will accept no liability for custom applications.