



INSTALLATION INSTRUCTIONS

PART NUMBER: E-2295

This Assembly Fits:

SEE CATALOG FOR CURRENT APPLICATIONS

FREE K&N® DECAL To register your warranty, please see us online at knfilters.com/register. FREE K&N® DECAL

Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter will last 1 million miles or more. This filter is a direct replacement for the stock air filter, and no modifications will be required. However the following procedures **MUST** be followed to ensure the proper fit and seal of the K&N Filtercharger®.

1. Remove the screws that fasten the air filter cover.
2. Remove the screw that retains the air filter into the air box



3. Remove the dirty air filter and remove the screw (which will not be re-used) that fastens the top plate to the filter and depress the four tabs to release the top plate from the filter.



4. Install the top plate from the OE filter onto the K&N® filter. Using a pair of pliers, pull the rubber tip from the K&N® filter through the hole on the filter top plate.



5. Squeeze the clamp supplied with the K&N® filter as shown to conform to the filter base flange and install hose clamp onto air filter




6. Place K&N® filter top side first into air box. **NOTE: make sure that the filter lid is orientated correctly so that the screw hole is reused on step 9.** Position filter so that it can be pulled toward air box flange.



7. With filter resting in air box, loosen clamp completely from the air filter. Filter cannot be installed with the clamp tightened onto air filter flange.



8. Slide filter onto flange portion of OE air box. You may be required to place one hand on the top of the filter and push. Use pull tabs built into filter base to assist pulling filter flange onto air box flange until filter is seated.

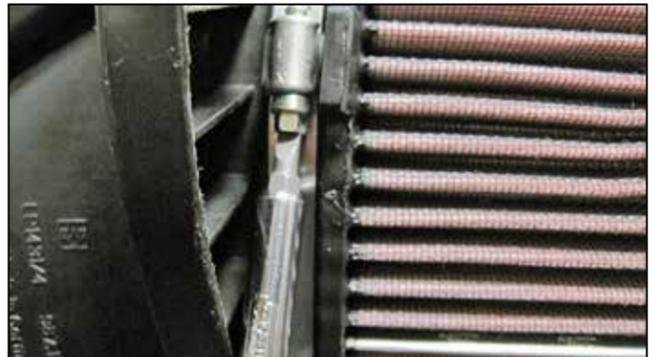

9. Re-position clamp to ensure correct placement onto flange of K&N® filter and tighten.



10. Once K&N® filter is seated onto air box flange and clamp is tight, install screw that retains filter in place.



11. Install air filter cover and fasten screws.

NOTE: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND USE THE PROVIDED HARDWARE MAY IMPAIR THE PERFORMANCE OF YOUR FILTER AND DAMAGE YOUR ENGINE.